
AGES 3+ 18922/18921 Asst. 18924/18923 Asst. Thank you for purchasing this Baby Alive® product! For maximum play value, please read and follow instructions carefully. **GETTING STARTED** This product is packaged in DEMO "DEMO" mode. Activate its full range of features by moving the PLAY/ DEMO Ó switch to the "PLAY" position. Switch is located on your Baby Alive[®] Go Bye Bye doll's back (undo fabric fastener to access switch). 1.5V AAA or R03 size Baby Alive GO BYE BYE NCLUDED Replace with 3 x 1.5V "AAA" or R03 size batteries. Alkaline batteries recommended. Phillips/cross head screwdriver (not included) needed to replace batteries. Product and colors may vary. © 2007 Hasbro. All Rights Reserved. BabyAlive.com TM & ® denote U.S. Trademarks. PN 6779640000 Questions? Call 1-800-327-8264

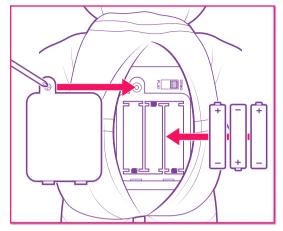

Undo fabric fastener to access battery cover. Using a Phillips/ cross head screwdriver (not included), loosen screw in battery compartment cover (screw stays

compartment cover (screw stays attached to cover). Insert 3 x 1.5V "AAA" or LR03 size alkaline batteries (not included). Replace cover and tighten screw. Re-attach fabric fastener.



\land CAUTION:

- 1. As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and, in the U.S., have the doctor phone (202) 625-3333 collect, or, in Canada, have the doctor call your provincial Poison Control Centre. In other countries, contact local poison control.
- 2. Make sure the batteries are inserted correctly and always follow the toy and battery manufacturers' instructions;
- 3. Do not mix old batteries and new batteries or alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries should be replaced by an adult.

 
\land CAUTION:

- 1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and polarity markings.
- 2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- 3. Remove exhausted or dead batteries from the product.
- 4. Remove batteries if product is not to be played with for a long time.
- 5. Do not short-circuit the supply terminals.
- Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
- 7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.
- 8. As with all small items, these batteries should be kept away from children. If swallowed, seek medical attention immediately.



PLAYING WITH THE TOY

Your BABY ALIVE GO BYE BYE doll contains a motion sensor that activates sound effects when she is in "PLAY mode." If your baby's PLAY/DEMO switch is in the "PLAY" position, she will giggle and babble when you pick her up or carry her in the carrier. When you are done playing with your BABY ALIVE GO BYE BYE doll and you want to turn off the motion sensor sound activation, move the PLAY/DEMO switch to the "DEMO" position. In this position, your baby will only make sounds when you press her tummy.




Troubleshooting

If your BABY ALIVE GO BYE BYE doll does not respond or is acting erratically, replace the batteries.

Carrier

* For all positions, start with carrier lying flat with inside facing up, and handles aligned with ends of carrier, as shown.

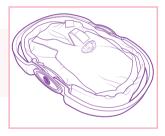



To secure your BABY ALIVE GO BYE BYE doll in the front pack, undo the fabric fastener. Then place your baby in the front pack and fasten the fabric fastener above her shoulders.


To wear front pack: Holding the carrier with your BABY ALIVE GO BYE BYE doll in an upright position, slip your arms through the straps so that the carrier rests against your chest.

To adjust straps: To shorten strap, slide the buckle away from the end of the strap. To lengthen strap, slide the buckle toward the end of the strap.

Feeding Chair

Turn carrier over and shorten the straps. Turn carrier over again so that inside faces up. Swing one handle straight under the chair -- make sure it snaps into place. Turn the carrier on an angle with the handle resting on a flat surface. Place your BABY ALIVE GO BYE BYE doll in the feeding chair and give her the bottle!



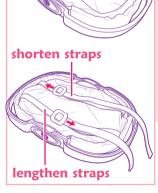



handles

Rocking Cradle

Swing both handles to a 45° angle under the seat -- make sure they snap into place. Stand the carrier on the handles. Place your BABY ALIVE GO BYE BYE doll in the cradle and rock her to sleep.

Carrier

Place your BABY ALIVE GO BYE BYE doll in the carrier. Swing both handles up to carry her with you everywhere!





Travel Bag

Swing the handles and ends of the carrier up to fold the carrier in half. Slip the straps up and around the carrier to create carrying straps -- you may need to loosen the straps. You can place your BABY ALIVE GO BYE BYE doll's accessories in the carrier to take them with you.

Cleaning Tips

- Clean the carrier and your BABY ALIVE GO BYE BYE doll's face by wiping gently with a soft, damp cloth.
- Do not submerge the your baby in water; it is not intended for bath-time play.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

• Reorient or relocate the receiving antenna. • Increase the separation between the equipment and the receiver. • Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.