

IMPORTANT: BATTERY INFORMATION



CAUTION:

1. TO AVOID BATTERY LEAKAGE

- a. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
- b. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- c. Remove exhausted or dead batteries from the product.
- d. Remove batteries if product is not to be played with for a long time.
- e. Do not short-circuit the supply terminals.
- f. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

2. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.



FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Product and colors may vary.



© 2011 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks.

98859 & A0202 PN 7258810000

BabyAlive.com 

Questions? Call 1-800-327-8264

5008(98859000_BA_BabyWannaWalk.indd)2012-01-093/T/FW120-6/2012-01-06

AGES 3+

 **x4** 1.5VAA
**ALKALINE
BATTERIES
REQUIRED**
DEMO BATTERIES
INCLUDED

Quick Start

1. Move switch to ON.
2. Press tummy button.
3. Touch hands—let go quickly or hold on!

.....
Detailed instructions inside.




**Baby
Alive®**

Baby Wanna Walk™




TO PLAY

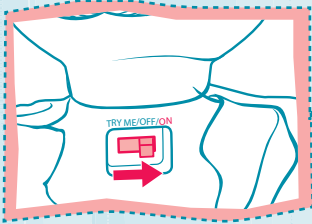

Move your doll's TRY ME/OFF/ON switch to the **ON** position. Then **press her tummy** to activate play mode.

Tummy button

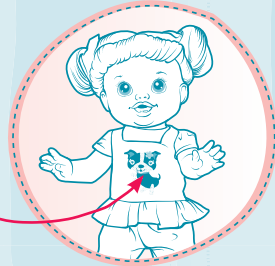

Walking


Make sure your BABY WANNA WALK doll is standing up. Move your doll's legs into standing position if needed.



- **Hold her hands**—she walks with your help!
- **Let go of her hands**—watch her walk by herself!
- **Touch her hands and let go quickly** to see if she will start walking on her own!



Press her tummy for giggles!

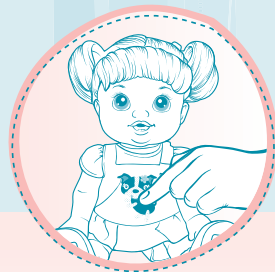

NOTES:

- **If you stop playing** with your BABY WANNA WALK doll, she will go into sleep mode. Press her tummy to return to play mode.
- **To conserve batteries**, turn switch to OFF when doll is not to be played with for extended periods of time.
- Play with your doll on smooth surfaces or low-pile carpeting.

IMPORTANT CLEANING INSTRUCTIONS

- Clean doll's face and body by wiping gently with a soft, damp cloth. **Do not rub.**
- **Do not** submerge doll in water; it is not intended for bath-time play.



TROUBLESHOOTING

If your BABY WANNA WALK doll is unresponsive, or if sounds become erratic, the battery power may be low. Replace batteries.

TO REPLACE BATTERIES

Replace demo batteries with alkaline batteries. Phillips/cross head screwdriver (not included) needed to insert batteries.

1. Locate battery compartments in doll's shoes.
2. Loosen screws in battery compartment covers (screws remain attached to covers).
2. Remove covers.
3. Remove and discard demo batteries.
4. Replace with 4 x 1.5V AA alkaline batteries.
5. Replace covers and tighten screws.

