FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SURFACE WASHABLE ONLY
FILLING: ALL NEW MATERIALS: POLYESTER FIBER
POLYPROPYLENE COPOLYMER STIFFENER
REG. NO. PA-282



Product and colors may vary.
© 2007 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks.
23876 PN 6735760000



Questions? Call 1-800-PLAYSKI

believe in PLA



Hair entanglement may result if child's hair comes in contact with moving parts of toy. Adult supervision is required.


Thank you for choosing this PLAYSKOOL toy!

ages & stages

months

06718/06716 Asst.



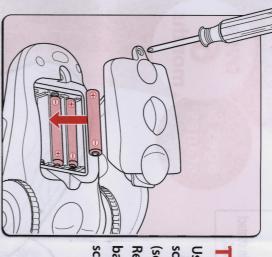

TO INSTALL BATTERIES

Use a Phillips screwdriver to loosen screw in battery compartment door (screw remains attached to door). Remove door. Insert 3 "AA" alkaline batteries. Replace door and tighten screw.

- Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.

Batteries should be replaced by an adult


CAUTION:

- 1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and polarity markings.
- Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- Remove exhausted or dead batteries from the product.
- 4. Remove batteries if product is not to be played with for a long time.
- Do not short circuit the supply terminals.
- Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
- RECHARGEABLE BATTERIES: Do not mix these with any other types of battery.
 Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

TO PLAY

Busy Lil' Garden Butterfly™ is an animated friend who encourages baby to crawl!

- Slide the switch to the "ON" position to start the fun! Butterfly will move along on the floor and flap her wings, as happy songs and fun sounds play. After traveling a short distance, the butterfly stops - and so does the music. This encourages baby to crawl to her and start the fun all over again with a tap on the butterfly's colorful wings!
- Busy Lil' Garden Butterfly^m also teaches babies who are learning to crawl to keep trying: when the butterfly falls over, she pops right back up again!

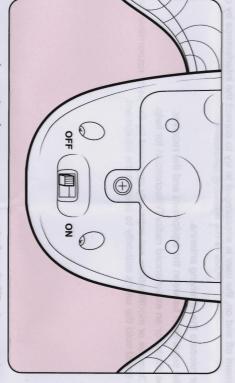

To conserve batteries, be sure to turn switch to "off" when not in use.