

© 2006 Husbro. All Rights Reserved.
TM & © denote U.S. Trademarks.
03570 PN 59551/30049

NOTE TO UK CONSUMERS: This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose of it in your household waste bin.

Visit **PLAYSKOOL.com**
Questions? Call 1-800-PLAYSKL

OVER **12** months

POWERED BY
POW3FUEL

X2 1.5V AA R6 size BATTERIES INCLUDED


Replace with 2 x 1.5V "AA" or R6 size batteries.
Alkaline batteries recommended.
Phillips/cross head screwdriver (not included) needed to replace batteries.

PLAYSKOOL

PLAY FAVORITES™ | Digger the Dog™

TO REPLACE BATTERIES

Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment door (screw remains attached to door). Remove old batteries. Insert 2 x 1.5V "AA" or R6-size batteries. Alkaline batteries recommended. Replace door and tighten screw.

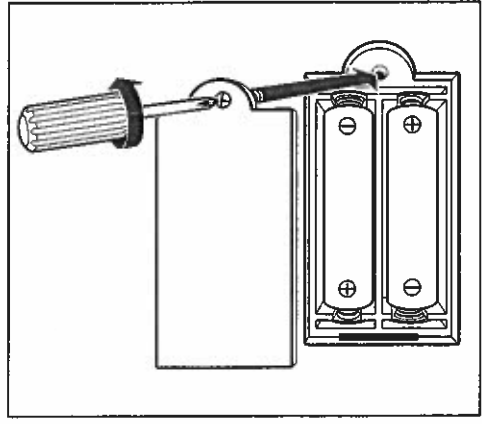

IMPORTANT: BATTERY INFORMATION

⚠ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**