



## CAUTION: ELECTRIC TOY

Immersing this toy in water can cause an electric shock. Not recommended for children under 8 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

 


AGES 8+

65819

# Easy-Bake<sup>®</sup>

## Oven and Snack Center

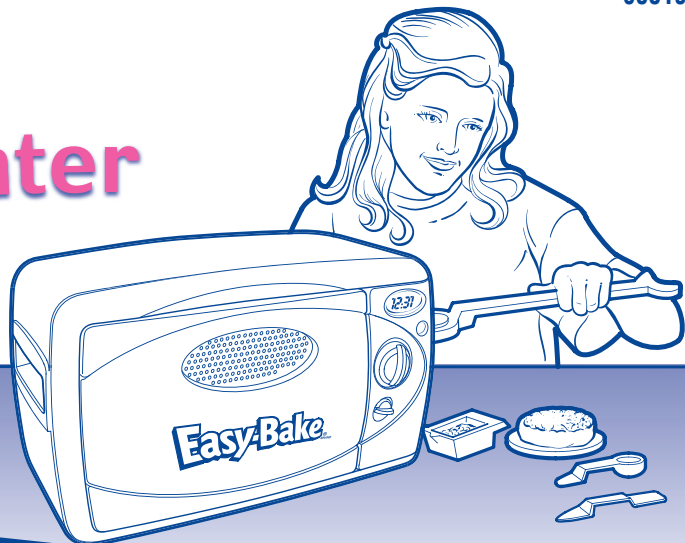

Visit

[www.easybake.com](http://www.easybake.com)

for great recipes, fun party ideas, contests and events!

## ELECTRICAL REQUIREMENTS:

120 Volts AC only – 60 Hz. 100 Watts.



**WARNING:** Shock hazard. Pull plug out of receptacle before removing light bulb door and changing light bulb. Do not use light bulbs larger than 100 watts.



**CAUTION:** Adult supervision recommended. Internal metal edges. Care should be taken during installation of the light bulb. Phillips screwdriver required for assembly.

**DANGER:** To prevent electric shock, do not immerse oven in water. Wipe clean with a damp cloth. We recommend that you periodically examine the toy for potential hazards and that any potentially hazardous parts be repaired or replaced.

(See back page for company contact information.)

**ADULT SUPERVISION  
RECOMMENDED.**

## ALWAYS:

- ✓ Wash all pans and utensils before using for the first time.
- ✓ Use pan tool to move pans through baking chamber.
- ✓ Allow oven, pans and food to cool before handling.
- ✓ Unplug oven when not baking.
- ✓ Use the correct type of light bulb.

## NEVER:

- x NEVER leave empty pans or pan tool in oven!
- x NEVER use plugged-in oven around water at any time.
- x NEVER leave plugged-in oven unattended or unassembled.
- x NEVER put your fingers in oven.

## Safety Tips and Cautions:

**HOT** pans and food. Handle carefully!

**HOT** oven interior, oven top and back. Do not touch!

 
**NOTE:** The “new” smell the oven gives off in the first few minutes is produced by the protective oil evaporating from the metal parts in the oven. You may also see a vapor. The oil is food grade, non-toxic, and evaporates quickly. Do not immerse oven in water.

Thank you for purchasing the EASY-BAKE Oven & Snack Center!  
For best results, be sure to follow all instructions carefully.

## This Oven & Snack Center includes:




oven

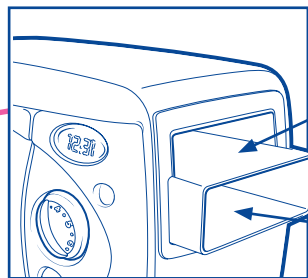

warming  
chamber

cooling  
chamber

 baking slot

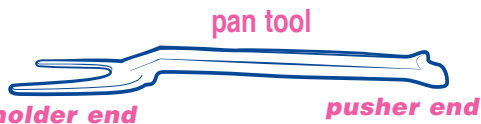

holder end

pusher end



spoon



2 baking pans



2 warming cups



spatula

- 1 yellow cake mix
- 1 chocolate flavored frosting mix
- 1 sugar cookie mix

### Bonus accessories include:

- 2 forks
- 2 spoons
- 2 knives
- 2 plates
- cake server
- cake stand
- pastry box

### You will also need:

- flour
- nonstick cooking spray
- teaspoon
- mixing bowl
- Phillips head screwdriver
- 100-watt light bulb, frosted or standard.  
\*Do not use soft white, long life or halogen bulbs.

 
# Installing the Light Bulb

## ADULT SUPERVISION RECOMMENDED.

1. Make sure oven is unplugged.
2. Use a Phillips screwdriver to remove the 4 screws from the light bulb door. Remove door.
3. Install one standard 100-watt bulb.

**IMPORTANT!** Do not use long life, soft white, high efficiency bulbs or halogen, or bulbs of higher or lower wattage.


4. Replace the door and tighten the screws.

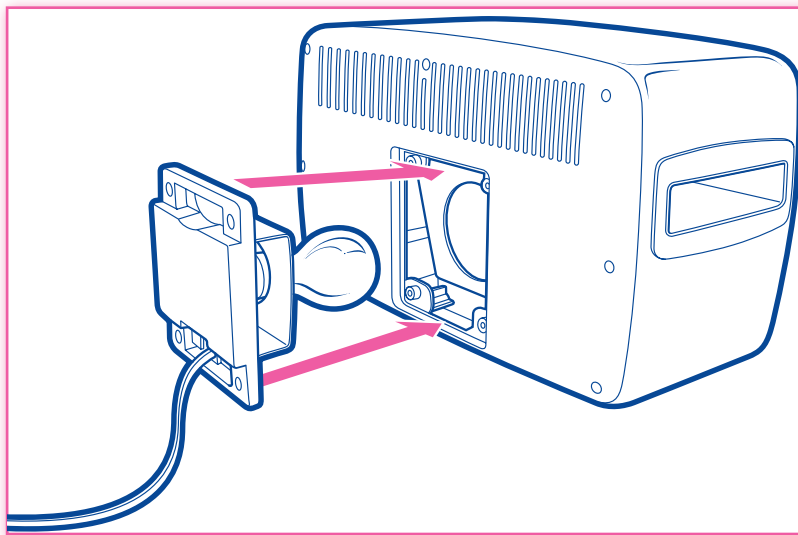


## Before You Bake:

1. Wash pans with soap and water and dry thoroughly before first use, and always after baking.
2. The oven should rest flat on a level surface at all times.
3. Make sure both metal doors inside the oven are closed.
4. Plug in oven and preheat for 15 minutes.
 
# Oven Basics

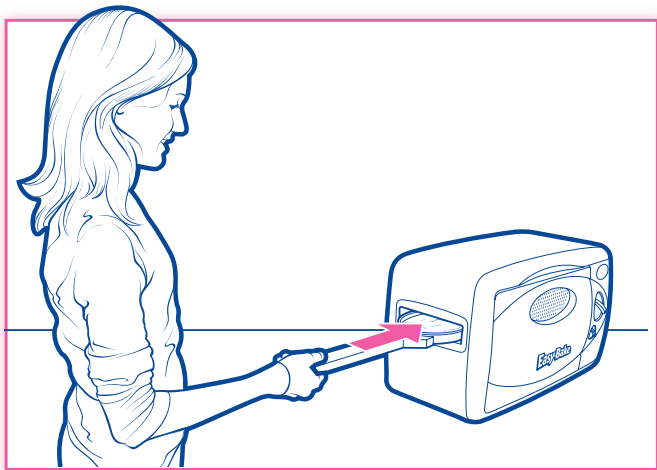

 - 1) Preheat oven for 15 minutes.
- 2) Place baking pan in baking slot, then use pusher end of your pan tool to push pan into oven.
- 3) Make sure both metal doors are closed.
- 4) When baking time is done, use pusher end of pan tool to push through to cooling chamber. PAN IS HOT! Cool for ten minutes.

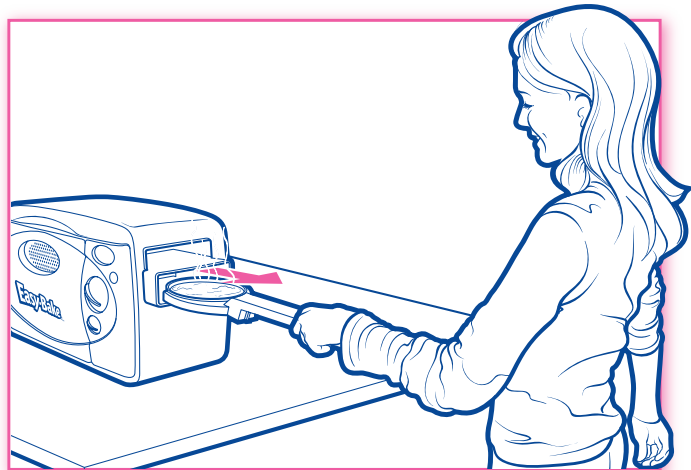

- 5) Using holder end of pan tool, remove pan.
- 6) Unplug oven when finished baking. Wait for oven to cool, then wipe it down.


# RECIPES
 
## Yellow Cake

Preheat oven for 15 minutes

Spray pan with cooking spray

Makes one cake

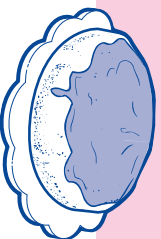


1. Pour contents of yellow cake mix into bowl and stir to break up lumps.
2. Add 1½ teaspoons of water and stir to form batter.
3. Pour batter into baking pan and spread evenly.
4. Follow “Oven Basics” instructions for using your oven.
5. Make sure both metal oven doors are closed. Bake for 10-12 minutes.
6. Let cool for 10 minutes and follow “Chocolate Frosting” instructions.

## Sugar Cookies

 Preheat oven for 15 minutes


Spray pan with cooking spray

Makes 6 cookies

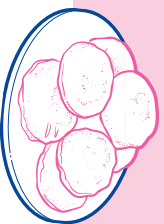

1. Pour contents of sugar cookie mix into a bowl and stir to break up lumps.
2. Add ¾ teaspoon of water and stir to form dough.
3. Sprinkle your hands with flour and shape dough into 6 small balls.
4. Flatten cookie balls and place 3 cookies in baking pan. Repeat for second batch.
5. Follow “Oven Basics” instructions for using your oven.
6. Make sure both metal oven doors are closed. Bake for 8-10 minutes.
7. Let cool, then eat and enjoy!

# Chocolate Frosting

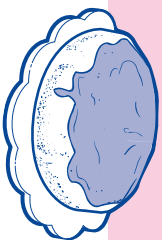 

Makes enough frosting for one cake

1. Pour frosting mix into a bowl.
2. Add  $\frac{1}{2}$  teaspoon of water and stir until smooth. For thinner frosting, stir in a few extra drops of water.
3. Spread frosting over cake.
4. Eat and enjoy!

 
[easybake.com](http://easybake.com)




Visit [www.easybake.com](http://www.easybake.com) for great recipes,  
fun party ideas, contests and events!

GO TO


[easybake.com](http://easybake.com)  
For great recipes, events and more!

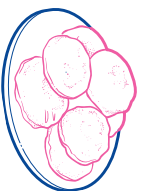

 Cut out cards and add to your recipe box!

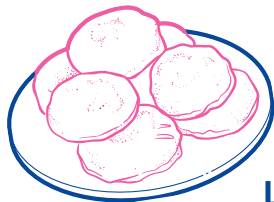


 Look for all the fun and delicious **EASY BAKE** food mixes and accessories!

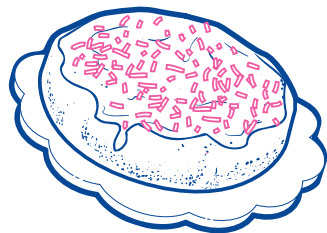

If you have any questions, comments, or need additional information concerning your **EASY-BAKE** oven, or if you need additional information concerning this product or its parts, please call our Hasbro Consumer Affairs hotline at 1-800-327-8264, Monday through Friday during business hours (Eastern time).

 GO TO **easybake.com**   
For great recipes, events and more!

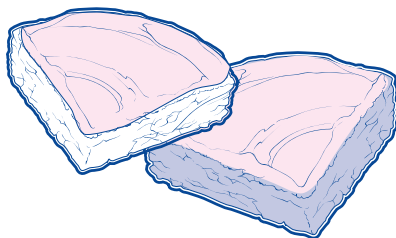

Cooking time may vary.  
Product and colors may vary.  
Food items manufactured for Hasbro, Inc.  
© 2005 Hasbro. All Rights Reserved.  
TM & ® denote U.S. Trademarks.

65819

P/N 6475930000