

## IMPORTANT: BATTERY INFORMATION

### ⚠ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

### FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to

try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



© 2009 Hasbro. All Rights Reserved.

TM & ® denote U.S. Trademarks.

391250000 Asst.

P/N 7023440000

Visit  
**PLAYSKOOL**  
.com

Questions? Call 1-800-PLAYSKL

# PLAYSKOOL

More than Play™



OVER  
**9**  
months

Adult assembly  
required.

 **x2** 1.5V AA or R6 size  
**NOT INCLUDED**  
**BATTERIES REQUIRED**

Alkaline batteries recommended. Phillips/cross head screwdriver (not included) needed to insert batteries.

 
## EXPLORE 'N GROW™

---


### Musical Gear Center™




## Includes:

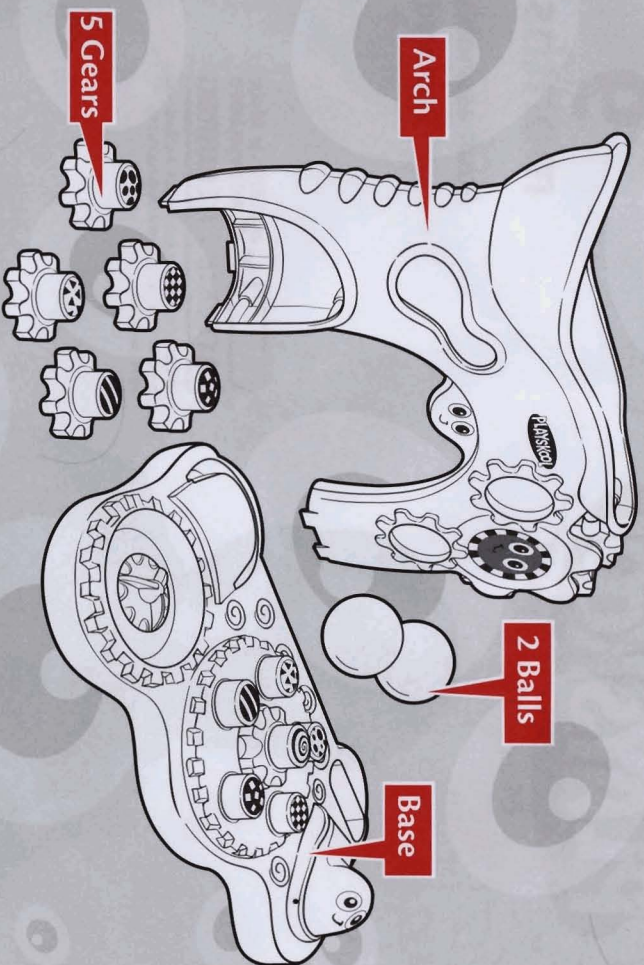

## Features:

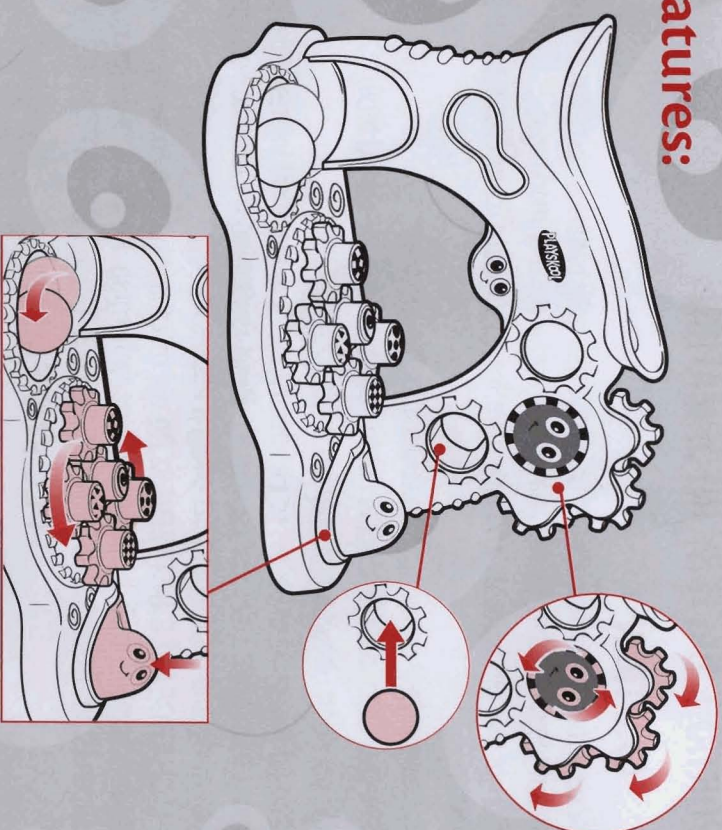

## Assembly:

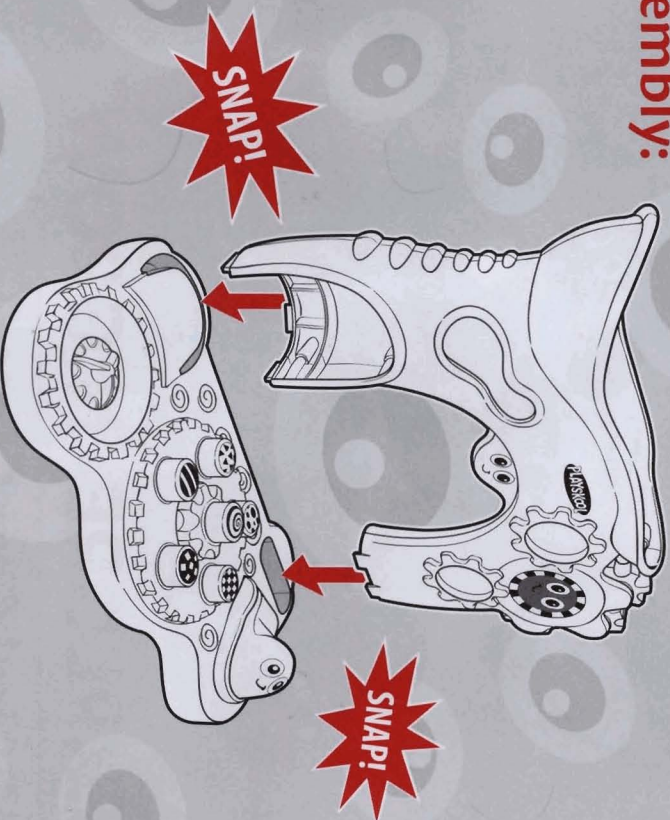

## To Install Batteries:

Use a Phillips/cross head screwdriver to loosen screw in battery compartment door (screw remains attached to door). Remove door. Insert 2 fresh "AA" or R6 size batteries. Alkaline batteries recommended. Replace door and tighten screw.



Slide power switch (located near battery box) to on position to activate music and sounds. Slide switch to off position for quiet play and to conserve battery power when not in use.

