

AGES 4+



DIZZY Twirlin' Dance Studio



CAUTION:

Hair entanglement may result if child's hair comes in contact with moving parts of toy. Adult supervision is required.

INCLUDES



Your Dizzy Dancers™ pet comes already assembled.

Get The DIZZY Started!

Applying Stickers!


Apply numbered stickers to designated areas to get your Dizzy Twirlin' Dance Studio™ ready for DiZZY dancing fun!

25+ colorful stickers to decorate your Dizzy Twirlin' Dance Studio™!



NOTE

Stickers without numbers are for free play. Do not apply stickers to spinning surfaces.

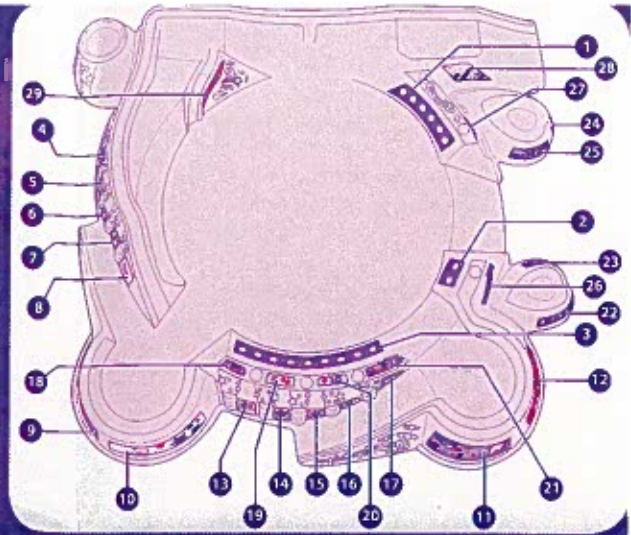

To activate SPIN MODE!

1. Ready



Lift pet and fully insert Dizzy Cord™.

2. Zip



Quickly pull out cord.

NOTE

Pet spins best on hard, flat surface.


3. Spin!



Your Dizzy Dancers™ pet will twirl and swirl!

MEET DIZZY TWIRLIN' DANCE STUDIO!

Follow steps for SPIN MODE then place twirling pet on DIZZY Dance zones.

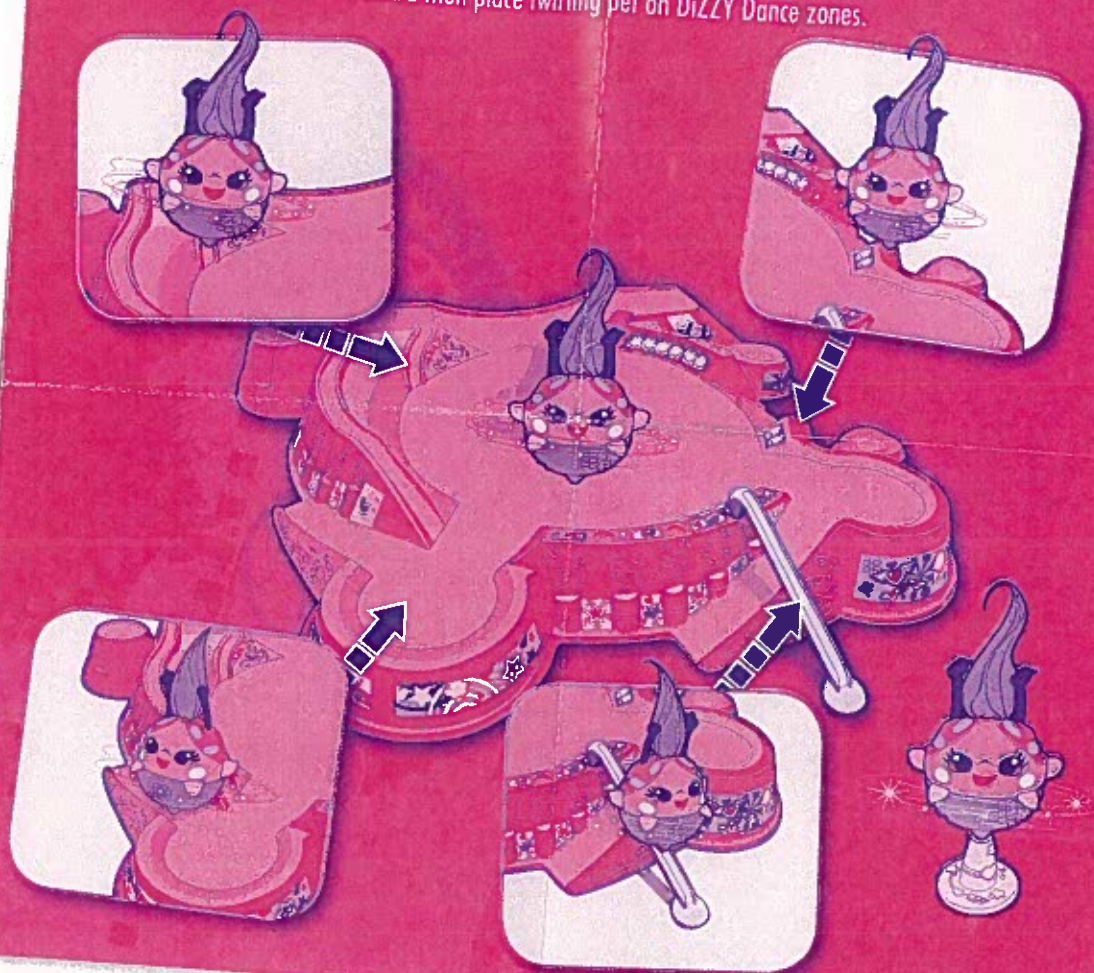

DIZZY Dancers Trick Tip!



Follow steps for
SPIN MODE then
place twirling pet on
Dizzy Cord™ handle.

NOTE

The quicker
you pull out the
Dizzy Cord™, the
faster your pet
will spin!

Mix & Match!

Any Dizzy Dancers™ pet will work
with any Dizzy Twirlin' Base™. Mix
and match them to make your own
combinations!

NOTE

Make sure pet is firmly
attached to Dizzy Twirlin'
Base™ before activating
spin mode.



1. Twist pet
counterclockwise
to remove it.



2. Place new pet
on base.



3. Twist pet
clockwise until it
CLICKS into place.



Questions? Call 1-800-844-3733

© 2011 Hasbro. All Rights Reserved.
TM & © denote U.S. Trademarks.
Patent pending.
38820 PN 7219530000

TIGER
ELECTRONICS

Product and colors may vary.
Retain this information for
future reference.

For more
DIZZY DANCERS fun, visit

Dizzy-Dancers.com