

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FurRealfriends.com

Questions? Call 1-800-844-3733

Product and colors may vary.
Retain this information for future reference.

© 2012 Hasbro. All Rights Reserved.

TM & ® denote U.S. Trademarks.

® U.S. Pat. No. 6811461.

FurReal
friends

AGES 4+



Puppy colors
may vary.

Bouncy
My Happy-to-See-Me Pup™



A0514

PN 7302360000

CARE GUIDE

 **x4** 1.5VAA
ALKALINE BATTERIES REQUIRED
DEMO BATTERIES INCLUDED


Includes: Bouncy My Happy-To-See-Me Pup™
and instructions.



NOTE TO CONSUMER: The switch is currently in TRY ME position. Please slide to **ON** position and press back button to activate your toy's play features.

About Your Puppy


BOUNCY has 2 sensors:

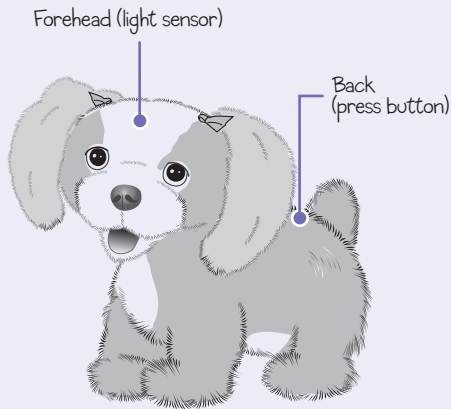

Playing with Your Puppy



When you pet your puppy on her back, she'll make happy and sweet puppy sounds - she loves you so much!

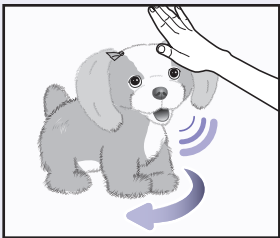

When you wave at BOUNCY, get near her face, or pet her forehead, she'll bounce and turn around in a circle, and make happy puppy sounds. She loves when you play with her!



NOTE: Make sure you're close to her so she can sense you're there.



NOTE: For best performance, use on a hard, smooth surface and away from direct sunlight.

Sleep Mode

After a minute of inactivity, BOUNCY will go into "power save" mode.

When you want to play with her again, just press her back to reactivate her!



NOTE: When BOUNCY is not in use, slide the ON/OFF/TRY ME switch to the OFF position to conserve battery life.

Troubleshooting

- If BOUNCY is turned ON but doesn't respond when you're near, she might be taking a "nap." Just press her back to "wake" her up, then pet her forehead to show her you're ready to play.
- If BOUNCY still doesn't function properly, restart her by moving the ON/OFF/TRY ME switch to the OFF position for a few seconds, then back to the ON position and press the button on her back. If she doesn't move or make sounds after that, it may be time to change the batteries.


Grooming Your Puppy

To clean your puppy, gently brush her with a cloth or soft brush to loosen any dirt. Then use a slightly damp cloth to remove stains.

- To prevent staining, wipe off dirt immediately.
- Do not get wet; to remove stains, use only a slightly damp cloth.
- Do not use detergent or stain removers.
- If puppy gets wet, remove batteries and let dry; once puppy is completely dry, replace batteries.

To Replace Batteries

1. Locate battery compartment on BOUNCY's tummy.
2. Loosen screw on battery door.
3. Remove and discard old batteries.
4. Replace with fresh 4 x 1.5V AA size alkaline batteries.
5. Replace door and tighten screw.

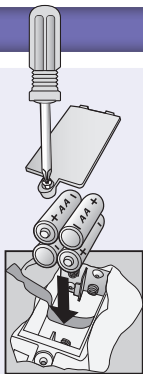

IMPORTANT: BATTERY INFORMATION



CAUTION:

1. TO AVOID BATTERY LEAKAGE

- a. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
 - b. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
 - c. Remove exhausted or dead batteries from the product.
 - d. Remove batteries if product is not to be played with for a long time.
 - e. Do not short-circuit the supply terminals.
 - f. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**
2. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.