

## FCC STATEMENT

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**FurReal**friends.com

Questions? Call 1-800-844-3733

Product and colors may vary.

© 2011 Hasbro. All Rights Reserved.

TM & © denote U.S. Trademarks.

U.S. Pat. No. 6811461.



36122

PN 7193690000

**AGES 4+**

**FurReal**  
friends



**Hop'n**  
**Cuddle**  
**Bunnies**

Bunny  
colors may vary.

CARE GUIDE

## x3 **BATTERIES INCLUDED**

Replace with 3 x 1.5V "AA" or LR6 size alkaline batteries. Phillips/cross head screwdriver (not included) needed to replace batteries.



 
The switch is currently in TRY ME position. Please slide to **ON** position to activate your toy's play features.

1

## Getting to Know Your Pet

Back sensor

When you pet your toy bunny on her back, she really responds to your touch!

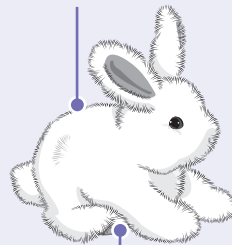

TRY ME/OFF/ON

Switch and battery door on tummy.

A sensor is a part of the toy that responds to your touch!

2


## How to Play

 To activate your toy bunny, slide the TRY ME/OFF/ON switch on bunny's tummy to the **ON** position. Your bunny is now ready to play!



### Hopping Mode

When you pet her back, your toy bunny responds to your touch by hopping around in circles. After a few seconds, she'll stop for more petting and encouragement, then she'll start hopping again.

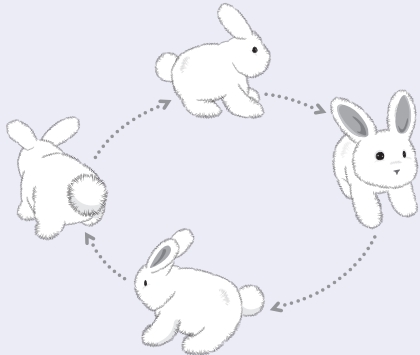

3

### Calm Mode

If you press and hold down your toy bunny's back for about a second, she'll make sniffing and chewing sounds and stop hopping. When you pet her, she'll respond with more bunny sounds.

If you stop petting your bunny for about a minute, she'll go into SLEEP MODE.

### Sleep Mode

If you stop petting your toy bunny for about a minute, she'll go to "sleep" and won't move or make any sounds. You can "wake" her up again and return to HOPPING MODE by petting her back!



**NOTE:** This toy uses battery power whenever its switch is in the ON position. When you're not playing with the toy, move its switch to the OFF position to help conserve battery life.

### Grooming Your Pet

Just like a real bunny, your toy bunny likes to stay clean. But make sure she doesn't get wet! Gently brush her fur with a cloth or soft brush to loosen any dirt. You can use a slightly damp cloth to remove stains, but don't use any cleaners on your toy bunny.



 
4

## Troubleshooting

If your pet doesn't seem to respond properly, first try sliding the TRY ME/OFF/OFF/ON switch to OFF, then back to ON. If that doesn't work, you may need to replace the batteries.

## To Replace Batteries

1. Locate battery compartment on bunny's tummy.
2. Loosen screw on battery door.
3. Remove and discard old batteries.
4. Replace with fresh 3 x 1.5V "AA" or LR6 size alkaline batteries.
5. Replace door and tighten screw.

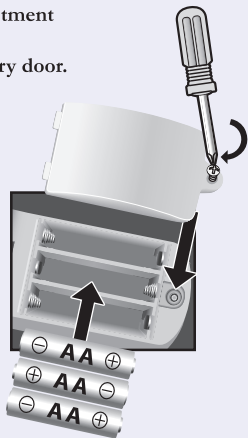

5

## IMPORTANT: BATTERY INFORMATION



### CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

6