


AGES 4+

FurReal
friends

Jungle Cat
White Tiger

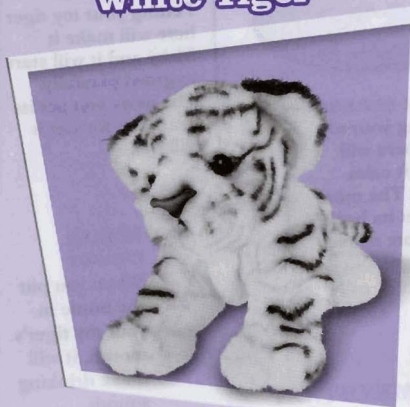

Tiger colors and accessory may vary.



Product and colors may vary.
© 2009 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks.
U.S. Pat. Nos. 6811461, 7364489 and
patent pending.

FurRealfriends.com

Questions? Call 1-800-844-3733

97689/976880610 Asst.

PN 6991290000

CARE
GUIDE

x4

BATTERIES INCLUDED

Replace with 4 x 1.5V "AA" or LR6 size alkaline batteries. Phillips/cross head screwdriver (not included) needed to replace batteries.

Note to consumer: This toy is packaged in "TRY ME" mode. When you bring the toy home, activate its full range of features by moving the toy's TRY ME/OFF/ON switch to the "ON" position.

Getting to Know Your Pet

Back sensor

Petting your toy tiger here will make it calm down. The more you pet its back, the more relaxed it will get.

Head sensor

Petting your toy tiger here will make it frisky and it will start to growl playfully. The more you pet its head, the friskier it will get.

Mouth sensor

When you put the bottle in your toy tiger's mouth, it will make drinking sounds.



TRY ME/OFF/ON

Switch and battery door on tummy.

A sensor is a part of the toy that responds to your touch!

How to Play

TRY ME OFF ON



To activate your toy tiger, slide the TRY ME/OFF/ON switch on tiger's tummy to the ON position and pet its head or back. Your toy tiger is now ready to play with you!

Play Mode

Your toy tiger responds to your touch differently, depending on where you pet it. Petting its head will make your toy tiger more playful and frisky, and it will start to make playful growling sounds.

Petting your toy tiger on its back will make it more relaxed; it will sigh happily and might even start purring.

Feeding Mode

When your toy tiger is "hungry," be sure to "feed" it its bottle! Put the bottle in its mouth and it will make drinking sounds. It might even burp!

Be careful, though — if you feed it too much at once, your toy tiger will get the hiccups. If that happens, pat your toy tiger on its back to stop the hiccups (or they will go away on their own after a while).

"Feeding" your toy tiger its bottle will also calm it down.

Sleep Mode

If you stop petting your toy tiger for a few seconds, it will move and make sounds to get your attention. After several more moments of non-activation, your toy tiger will lie down, close its eyes and go to "sleep". You can "wake" it up again by petting its head or back or by "feeding" it its bottle.

You can also make your toy tiger go to "sleep" by pressing down on its back for more than 5 seconds.

NOTE: This toy uses battery power whenever its switch is in the "ON" position. When you're not playing with the toy, move its switch to the "OFF" position to help conserve battery life.

TROUBLESHOOTING



If your pet doesn't seem to respond properly, first try sliding the TRY ME/OFF/ON switch to OFF, then back to ON. If that doesn't work, you may need to replace the batteries.

CLEANING & CARE


To clean your pet, gently brush its fur with a cloth or soft brush to loosen any dirt. Then use a slightly damp cloth to remove stains.

- Do not put in washing machine.
- Do not submerge in water.
- Do not use detergent or stain removers on fur.
- Do not get wet; to remove stains, use only a slightly damp cloth on the fur.

- To prevent staining fur, wipe off dirt immediately.
- If toy gets wet, remove batteries and dry fur; once fur is completely dry, replace batteries.
- Avoid spilling food or beverages on toy.
- Do not throw or kick toy, and do not push sharp objects through speaker openings.
- Do not leave toy in direct sunlight: high temperatures will destroy the mechanism.

To Replace Batteries

1. Locate battery compartment on tiger's tummy.
2. Loosen screw on battery door.
3. Remove and discard old batteries.
4. Replace with fresh 4 x 1.5V "AA" or LR6 size alkaline batteries.
5. Replace door and tighten screw.

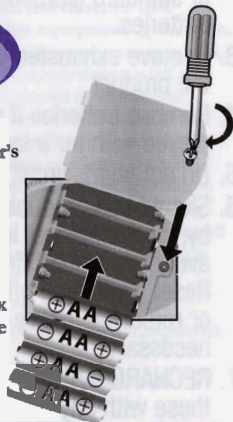

NOTE TO UK CONSUMERS: This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose of in your household waste bin.

IMPORTANT: BATTERY INFORMATION

CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.