



Not suitable for children under 3 years because of small parts – choking hazard.



Product and colors may vary.
© 2009 Hasbro. All Rights Reserved.
TM & © denote U.S. Trademarks.
U.S. Pat. No. 6811461.

FurRealFriends.com

Questions? Call 1-800-844-3733

939680900 Asst.



PN 6978930000

AGES 4+



Lulu's Walkin' Kitties™



Kitty colors may vary.


**CARE
GUIDE**

POWERED BY
POWER FUEL X3
BATTERIES INCLUDED

Replace with 3 x 1.5V "AA" or LR6 size alkaline batteries. Phillips/cross head screwdriver (not included) needed to replace batteries.

Note to consumer: This toy is packaged in "TRY ME" mode. When you bring the toy home, activate its full range of features by moving the toy's TRY ME/OFF/ON switch to the "ON" position.

Getting to Know Your Pet

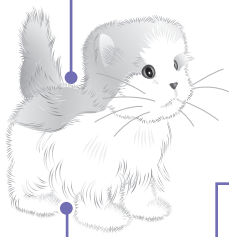

Back sensor

When you pet your toy kitty on her back, she really responds to your touch!

TRY ME/OFF/ON

Switch and battery door on tummy.

A sensor is a part of the toy that responds to your touch!

1

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

6

IMPORTANT: BATTERY INFORMATION

CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**



NOTE TO UK CONSUMERS: This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose of in your household waste bin.

5

How to Play

TRY ME OFF ON



To activate your toy kitty, slide the TRY ME/OFF/ON switch on kitty's tummy to the ON position. Your kitty is now ready to play.

Walking

For walking action, position your kitty's front legs downward as shown.



Kneading

For kneading action, position your kitty's front legs forward as shown.

Play Mode

When you pet her back, your toy kitty responds to your touch by walking and "talking" to you with cat sounds. If you pet her while she's walking, she'll stop.

(If you want your kitty to make kneading motions instead of walking, just move her front paws into the forward position.)

2

Calm Mode

If you press and hold down your toy kitty's back for a few seconds, she'll start purring for you. If you keep petting her back, she'll keep purring. She might also occasionally move her paws in a kneading motion. If you stop petting her for several seconds, she'll go back into Play Mode.

Sleep Mode

If you stop playing with your toy kitty for about a minute, she will go to "sleep." You can "wake" her up again by petting her back!

NOTE: This toy uses battery power whenever its switch is in the "ON" position. When you're not playing with the toy, move its switch to the "OFF" position to help conserve battery life.

Troubleshooting



3

If your pet doesn't seem to respond properly, first try sliding the TRY ME/OFF/ON switch to OFF, then back to ON. If that doesn't work, you may need to replace the batteries.


CLEANING & CARE

To clean your pet, gently brush its fur with a cloth or soft brush to loosen any dirt. Then use a slightly damp cloth to remove stains.

- Do not put in washing machine.
- Do not submerge in water.
- Do not use detergent or stain removers on fur.
- Do not get wet; to remove stains, use only a slightly damp cloth on the fur.
- To prevent staining fur, wipe off dirt immediately.
- If toy gets wet, remove batteries and dry fur; once fur is completely dry, replace batteries.
- Avoid spilling food or beverages on toy.
- Do not throw or kick toy, and do not push sharp objects through speaker openings.
- Do not leave toy in direct sunlight: high temperatures will destroy the mechanism.

To Replace Batteries

Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment door on kitty's tummy (screw remains attached to door). Remove and discard old batteries. Replace with fresh 3 x 1.5V "AA" or LR6 size alkaline batteries. Replace door and tighten screw.

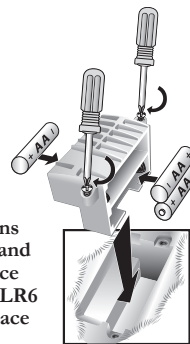

4