

AGES 4+
75857 Asst.



**NewBorn
BabyGuys**

INSTRUCTION MANUAL




© 2005 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks.
U.S. Pat. No. 6811461 & Patent Pending.
75857 P/N 6531400000



Questions? Call 1-800-944-3733

GETTING STARTED

To activate your newborn cub, insert batteries, then slide ON/OFF switch to the "ON" position.

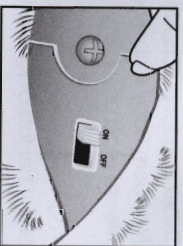

Back sensor

Momentarily pressing your cub's back sensor wakes her up and makes her "playful".

Holding the sensor down for a few moments calms her down!



Opening/closing eyes

When your cub wakes up, she sits up and opens her eyes. When she gets sleepy, she lays down and closes them again!

Sounds

Your newborn makes lots of cub sounds to let you know when she is playful, sleepy or just needs some love and attention!

PLAYING WITH YOUR NEWBORN CUB

Wake-up time

Pet your cub (press the back sensor momentarily) and she'll start to wake up. She'll lift her head, open her eyes, and purr... or give a little roar! If you keep petting her, she'll become wide-awake. If you stop petting her, she'll make sleepy sounds and go back to sleep.

Playtime

When your cub is wide-awake, it's time to play! Pet your cub and she'll make cub sounds or even a little roar! The more you pet her, the more she responds to you!

Nap time

If you stop petting your cub, after a few moments she will purr or sigh, close her eyes and go back to sleep. She will also go back to sleep if you hold her back sensor down; this makes her feel "calm". To wake her up, just pet her again!


TO INSERT BATTERIES

Use a Phillips screwdriver (not included) to loosen screw in battery compartment door (screw remains attached to door).

Remove door and insert 3 x 1.5V "AAA" or LR03 size alkaline batteries. Replace door and tighten screw.



CAUTION:

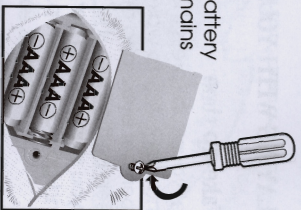

1. As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and, in the U.S., have the doctor phone (202) 625-3333 collect, or, in Canada, have the doctor call your provincial Poison Control Centre.
2. Make sure the batteries are inserted correctly and always follow the toy and battery manufacturers' instructions.
3. Do not mix old batteries and new batteries or alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries should be replaced by an adult.



CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.
8. As with all small items, these batteries should be kept away from children. If swallowed, seek medical attention immediately.

CLEANING INSTRUCTIONS

To clean your newborn, gently brush her fur with a cloth or soft brush to loosen any dirt. Then use a slightly damp cloth to remove stains.

- Do not put in the washing machine.
- Do not submerge in water.
- Do not use detergent or stain removers on fur.
- Do not get wet; to remove stains use only a slightly damp cloth on the fur.
- To prevent staining fur, wipe off dirt immediately.
- If toy gets wet, remove batteries and dry the fur; once fur is completely dry, replace batteries.
- Avoid spilling food or beverages on the toy.
- Do not throw or kick the toy, and do not push sharp objects through the speaker openings.



- Do not leave toy in direct sunlight; high temperatures will destroy the mechanism.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two

- conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Consult the dealer or an experienced radio/TV technician for help.