

AGES 4+

FurReal
friends

Newborn Puppy



Puppy colors and
accessory may vary.


**CARE
GUIDE**

x3 **BATTERIES INCLUDED**

Replace with 3 x 1.5V "AAA" or LR03 size alkaline batteries. Phillips/cross head screwdriver (not included) needed to replace batteries.

Note to consumer: This toy is packaged in "TRY ME" mode. When you bring the toy home, activate its full range of features by moving the toy's TRY ME/OFF/ON switch to the "ON" position.

Getting to Know Your Pet

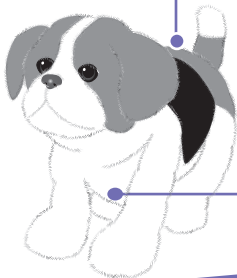

Back sensor

When you pet your toy puppy on its back, it will stretch out its front legs, bark, blink its eyes, and move its tail!

TRY ME/OFF/ON

Switch and battery door on tummy.

A sensor is a part of the toy that responds to your touch!

How to Play

TRY ME OFF ON



To activate your toy puppy, slide the TRY ME/OFF/ON switch on puppy's belly to the ON position. Your puppy is now ready to play.

Play Mode

Your toy puppy responds to your touch by moving up and down, blinking, wagging its tail, and making lots of puppy sounds!



Calm Mode

If you press and hold down your toy puppy's back for a few seconds, it will stretch its front legs. It will also make calm noises and slow, small movements. It will then "go to sleep." To "wake it up" and return to Play Mode, pet its back again.



Sleep Mode

After a few moments of non-activation, your puppy toy will bark a little to get your attention. It will also move up and down a few times. After a few more moments of non-activation, it will “go to sleep.” To “wake it up” and return to Play Mode, pet its back again.

NOTE: This toy uses battery power whenever its switch is in the “ON” position. When you’re not playing with the toy, move its switch to the “OFF” position to help conserve battery life.

TROUBLESHOOTING

If your pet doesn’t seem to respond properly, first try sliding the OFF/ON switch to OFF, then back to ON. If that doesn’t work, you may need to replace the batteries.


CLEANING & CARE

To clean your pet, gently brush its fur with a cloth or soft brush to loosen any dirt. Then use a slightly damp cloth to remove stains.

- Do not put in washing machine.
- Do not submerge in water.
- Do not use detergent or stain removers on fur.
- Do not get wet; to remove stains, use only a slightly damp cloth on the fur.
- To prevent staining fur, wipe off dirt immediately.
- If toy gets wet, remove batteries and dry fur; once fur is completely dry, replace batteries.
- **Avoid spilling food or beverages on the toy.**
- Do not throw or kick the toy, and do not push sharp objects through the speaker openings.
- Do not leave toy in direct sunlight: high temperatures will destroy the mechanism.

To Replace Batteries

1. Locate battery compartment on puppy's tummy.
2. Loosen screw on battery door.
3. Remove and discard old batteries.
4. Replace with fresh 3 x 1.5V "AAA" or LR03 size alkaline batteries.
5. Replace door and tighten screw.

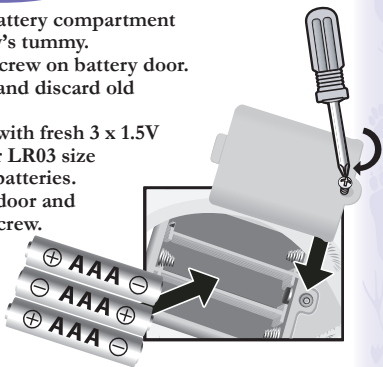

IMPORTANT: BATTERY INFORMATION



CAUTION:

1. As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect. If you reside outside the United States, have the doctor call your local poison control center.

2. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and – polarity markings.
3. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
4. Remove exhausted or dead batteries from the product.
5. Remove batteries if product is not to be played with for a long time.
6. Do not short-circuit the supply terminals.
7. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
8. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**



NOTE TO UK CONSUMERS: This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose of in your household waste bin.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Product and colors may vary.
© 2009 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks.
U.S. Pat. Nos. 6811461 and 7234989.

FurRealfriends.com

Questions? Call 1-800-844-3733

93966 Asst.

PN 6993710000