

AGES 3+

## FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



[FurRealFriends.com](http://FurRealFriends.com)

Questions? Call 1-800-844-3733

Product and colors may vary.

© 2010 Hasbro. All Rights Reserved.

TM & © denote U.S. Trademarks.

U.S. Pat. Nos. 6811461.



**Lovey  
Cubbies**

**Bear**

CARE GUIDE

323900000 Asst.

PN 7147220000

Bear colors and  
accessory may vary.

 **x2**

## **BATTERIES INCLUDED**

Replace with 2 x 1.5V "AA" or LR6 size alkaline batteries. Phillips/cross head screwdriver (not included) needed to replace batteries.


## Getting to Know Your Pet

**Mouth sensor**

When you "feed" your bear its bottle, it makes eating sounds!

**OFF/ON**

Switch and battery door on back of bear's head.

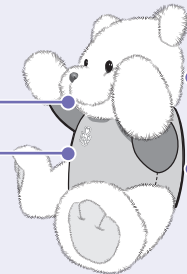

**Tummy sensor**

When you tickle your bear's tummy, it giggles!

**Back sensor**

When you hug your bear or pet its back, it sighs with happiness!

**A sensor is a part of the toy that responds to your touch!**

## How to Play

To activate your LOVEY CUBBIES bear, slide the OFF/ON switch to ON. Your pet bear will giggle to show it's ready to play with you!



### "FEEDING"

Place the bottle in your toy bear's mouth — your toy bear will make real eating sounds! If you stop "feeding" your bear and it's still "hungry," it will cry for its bottle. But watch out — if you pet your toy bear's back after "feeding" it, it may have a surprise burp in store for you!



Also, sometimes after you "feed" it, your LOVEY CUBBIES bear might get the hiccups! Don't worry — they'll go away on their own.

### TICKLING

Your LOVEY CUBBIES bear loves to be tickled! Tickle its tummy to make it giggle.



### PETTING

Petting your LOVEY CUBBIES bear on its back makes it feel comfortable and relaxed. You will hear it yawn — that means your bear is getting "sleepy." Simply press down on its back for about 3 seconds to make it go to "sleep."

### SLEEP MODE

Your LOVEY CUBBIES bear will go to "sleep" and shut down if it is not played with for about 10 seconds. You can "wake" it up by petting its back, "feeding" it, or tickling its tummy.



**NOTE:** This toy uses battery power whenever its switch is in the ON position. When you're not playing with the toy, move its switch to the OFF position to help conserve battery life.

## Grooming Your Pet


Just like a real bear, your LOVEY CUBBIES pet likes to stay clean. But make sure it doesn't get wet! Gently brush its fur with a cloth or soft brush to loosen any dirt. You can use a slightly damp cloth to remove stains, but don't use any cleaners on your LOVEY CUBBIES bear.

## Troubleshooting

If your pet doesn't seem to respond properly, first try sliding the OFF/ON switch to OFF, then back to ON. If that doesn't work, you may need to replace the batteries.

## To Replace Batteries

1. Locate battery compartment by opening push flap on back of bear's head.
2. Loosen screw on battery door.
3. Remove and discard old batteries.
4. Replace with fresh 2 x 1.5V "AA" or LR6 size alkaline batteries.
5. Replace door and tighten screw.

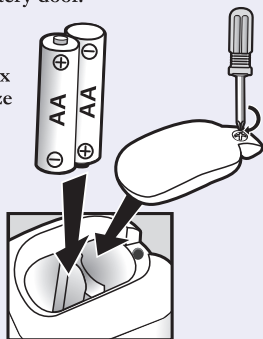

## IMPORTANT: BATTERY INFORMATION



### CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**



NOTE TO UK CONSUMERS: This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose of in your household waste bin.