

**AGES 4+**

**FurReal**  
**friends**

**Snuggimals™ Puppy**



Puppy colors may vary.

**CARE  
GUIDE**



## BATTERY INCLUDED

Replace with 1 x 1.5V "AA" or LR6 size alkaline battery. Phillips/cross head screwdriver (not included) needed to replace battery.

## Getting to Know Your Pet



### Back sensor

When you pet your puppy on its back, it will raise its head and wag its tail for you!

### Battery door on tummy

A sensor is a part of the toy that responds to your touch!

**NOTE:** When you're finished playing with your pet, store it on its tummy and be sure nothing is stacked on top or pressing the back sensor. This will help conserve battery life by preventing accidental activations.


## CLEANING & CARE

To clean your pet, gently brush its fur with a cloth or soft brush to loosen any dirt. Then use a slightly damp cloth to remove stains.

- Do not put in washing machine.
- Do not submerge in water.
- Do not use detergent or stain removers on fur.
- Do not get wet; to remove stains, use only a slightly damp cloth on the fur.
- To prevent staining fur, wipe off dirt immediately.
- If toy gets wet, remove battery and dry fur; once fur is completely dry, replace battery.
- Avoid spilling food or beverages on toy.
- Do not throw or kick toy.
- Do not leave toy in direct sunlight: high temperatures will destroy the mechanism.

## To Replace Battery

Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment door on tummy (screw remains attached to door). Remove and discard old battery. Replace with fresh 1 x 1.5V "AA" or LR6 size battery. Alkaline battery recommended. Replace door and tighten screw.

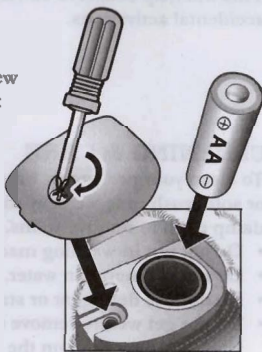

## IMPORTANT: BATTERY INFORMATION

### ⚠ CAUTION:

1. Always follow the instructions carefully. Use only battery specified and be sure to insert it correctly by matching the + and - polarity markings.
2. Remove exhausted or dead battery from the product.
3. Remove battery if product is not to be played with for a long time.
4. Do not short-circuit the supply terminals.
5. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting battery) if necessary.
6. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**



**NOTE TO UK CONSUMERS:** This product and its battery must be disposed of separately at your local waste recycling centre. Do not dispose of in your household waste bin.



Product and colors may vary.  
© 2009 Hasbro. All Rights Reserved.  
TM & ® denote U.S. Trademarks.

**FurReal**friends.com

Questions? Call 1-800-844-3733



937170900 Asst.

PN 6978360000