

FurReal
friends

SPECIAL EDITION

AGES 4+

Zambi the Baby Elephant™

CARE GUIDE



PROJECT
Zambi



ProjectZambi.com

Hasbro
Cares

Thank you for adopting ZAMBI THE BABY ELEPHANT, a Special Edition pet from FURREAL FRIENDS®. Your purchase supports PROJECT ZAMBI, a fund established to benefit children orphaned by AIDS in Africa. Be sure to wear the included bracelet to show your support for these children!

 
 
ZAMBI THE BABY ELEPHANT moves and makes sounds just like a real elephant! Be sure to take good care of your pet by following the instructions in this booklet.

Note to the consumer: This toy is packaged in “TRY ME” mode. When you bring the toy home, activate its full range of features by moving the toy’s TRY ME/OFF/ON switch to the “ON” position.



Replace with 4 x 1.5V “AA” or LR6 size alkaline batteries. Phillips/cross head screwdriver (not included) needed to replace batteries.

GETTING TO KNOW ZAMBI

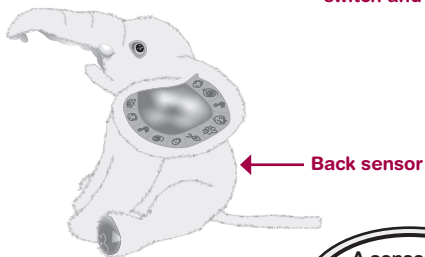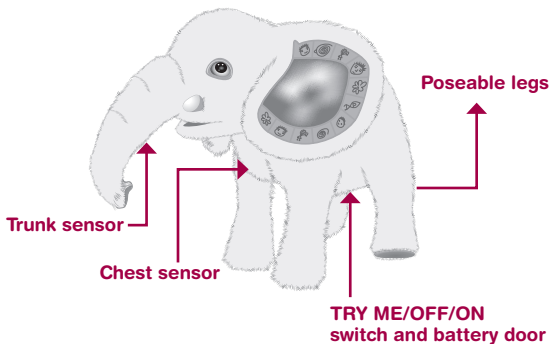

A sensor is a part of the toy that responds to your touch!

 
HOW TO PLAY

To turn ZAMBI THE BABY ELEPHANT ON, open the plush flap over the battery door and switch the TRY ME/OFF/ON switch to ON. Then close the plush flap. Pet ZAMBI on his back to activate his sensors.




ZAMBI responds to your touch and moves his trunk, ears, head and mouth just like a real elephant! He also trumpets, makes kissing and eating sounds, and giggles when you tickle him.

For ZAMBI to “blow” kisses at you, touch the underside or tip of his trunk while it’s in the up position. He makes kissing sounds! To make ZAMBI move his trunk to the up position, press down on his back for several seconds.

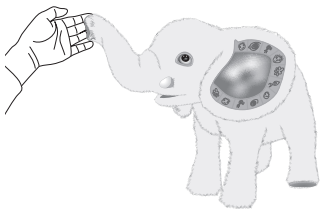

 For ZAMBI to curl his trunk around your finger, touch the underside of his trunk while it’s in the down position.

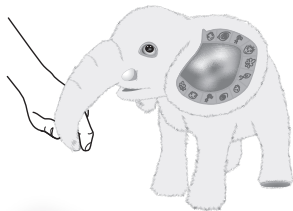


Pet ZAMBI on his back and he'll respond to your touch by wiggling his ears, moving his trunk or making trumpeting, sighing or eating sounds. If you press his back for several seconds, he'll raise his trunk and make "kissing" sounds!

Tickle ZAMBI on his chest to make him giggle. It's easiest to do this when ZAMBI is in a sitting position.

To get ZAMBI to sit, simply push his back legs down until he is in a sitting position. His head will adjust when he's sitting so he still looks forward.

 If you stop playing with ZAMBI for about a minute, he will go into "daydream" mode and won't respond to your touch. To "wake" him up, press his back.

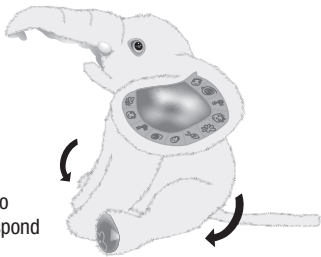

NOTE

This toy uses battery power whenever its switch is in the "ON" position. To conserve batteries, move the switch to "OFF" when you're not playing with it.



NOTE

- If ZAMBI doesn't seem to be responding to you, try petting his back.
- If that doesn't work, or if ZAMBI starts to make erratic movements or sounds, the battery power may be low. Replace batteries.



 
CLEANING INSTRUCTIONS

To clean your pet, gently brush his fur with a cloth or soft brush to loosen any dirt. Then use a slightly damp cloth to remove stains.

- Do not put in the washing machine.
- Do not submerge in water.
- Do not use detergent or stain removers on fur.
- Do not get wet; to remove stains, use only a slightly damp cloth on the fur.
- To prevent staining fur, wipe off dirt immediately.
- If toy gets wet, remove batteries and dry the fur; once fur is completely dry, replace batteries.
- **Avoid spilling food or beverages on the toy.**
- Do not throw or kick the toy, and do not push sharp objects through the speaker openings.
- Do not leave toy in direct sunlight; high temperatures will destroy the mechanism.

TO REPLACE BATTERIES

Open the plush flap over the battery compartment. Use a Phillips/cross head screwdriver (not included) to loosen screws in battery compartment cover (screws stay attached to cover). Remove cover. Remove and discard old batteries. Replace with fresh 4 x 1.5V "AA" or LR6 size alkaline batteries. Replace cover and tighten screws.

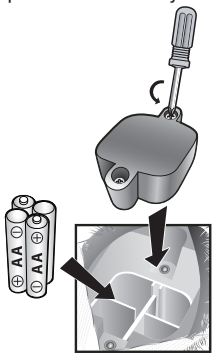

IMPORTANT: BATTERY INFORMATION



CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and – polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



NOTE TO UK CONSUMERS: This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose of in your household waste bin.

**For more information visit
ProjectZambi.com**



Products and colors may vary.
© 2008 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks.
U.S. Pat. No. 6811461.
91345/913440900 Asst. PN 6958990000

Questions?
Call 1-800-844-3733