

FCC STATEMENT

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Just like a real animal, it's normal for your FURREAL FRIENDS toy to shed a little when you groom it.

FurRealfriends.com

Questions? Call 1-800-844-3733

Product and colors may vary.

© 2009 Hasbro. All Rights Reserved. TM & ® denote U.S. Trademarks. U.S. Pat. No. 6811461 and patent pending.

94372/943710900 Asst.

PN 7022450000

AGES 4+

FurReal
friends

GO GO
my walkin' pup™

 


**CARE
GUIDE**



CAUTION:

air entanglement may result if child's hair comes in contact with moving parts of toy. Adult supervision is required.



BATTERIES INCLUDED

Replace with 4 x 1.5V "C" or LR14 size alkaline batteries. Phillips/cross head screwdriver (not included) needed to replace batteries.

Note to consumer: This toy is packaged in "TRY ME" mode. When you bring the toy home, activate its full range of features by moving the toy's ON/OFF/TRY ME switch to the "ON" position.

Getting to Know Your Pet




Head sensor
When you pet GoGo here, she will bark, move her head and wag her tail.

Left & right side sensors
When you pet GoGo here, she turns toward your hand and makes happy sounds.

ON/OFF/TRY ME
Switch and battery door on tummy.

A sensor is a part of the toy that responds to your touch!

Let's Play!

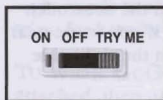

Before you start playing with GoGo, you'll need to move her ON/OFF/TRY ME switch to ON. Look for the label on her tummy — this will show you where her fur opens to access the ON/OFF/TRY ME switch and battery door. After you've switched her on, be sure to completely close the fabric fastener.

Your GOGO MY WALKIN' PUP pet responds to your touch and loves going on walks just like a real dog! She makes lots of doggy sounds, wiggles her tail, and really "walks" — just watch how excited she gets when you attach her leash to her collar!


Pet GoGo on her head, and she'll make excited doggy sounds while moving her head up and down, and wagging her tail. If her leash is attached while you pet her head, she'll be even more excited!

Pet GoGo on her sides, and she'll turn toward your touch and make happy doggy sounds. When you stop, she might whine to beg you to pet her a little longer.

If you stop playing with GoGo for about a minute, she will go into “daydreaming” mode and won’t move or make any sounds. To “wake” her up, you can start petting her head, attach her leash, or if the leash is already on, press any button on the controller. You might also get her attention if you move near her, triggering the light sensor on the right side of GoGo’s head.


Let’s Go For A Walk!

NOTE: For best results, be sure to walk GoGo on smooth, dry surfaces or low-pile carpeting. Do not walk her on grass, sand or gravel, or through mud or water.

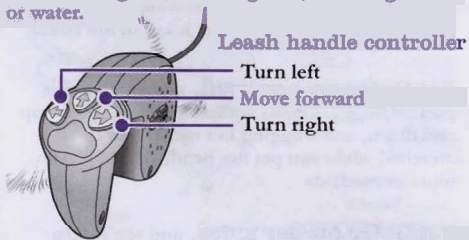

TIP: For GoGo to do a half-turn, hold down the forward button at the same time as either the left turn button or the right turn button.

To attach the leash, insert the connector piece into the opening on GoGo’s collar until it clicks. When she senses her leash is attached, GoGo will make excited movements and sounds to show you she’s eager to go for a walk.

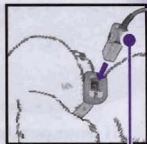

Leash connector piece

To walk GoGo, make sure her leash is attached, then use the controls on her leash handle to move her forward, left and right. Your proud pup will stroll with you while happily panting and letting out occasional barks.

To remove her leash, squeeze the button on the connector piece while gently pulling to release it from the collar. If she wants to walk a little longer, GoGo may whine and wag her tail to let you know.

NOTE: This toy uses battery power whenever its switch is in the “ON” position. When you’re not playing with the toy, move its switch to the “OFF” position to help conserve battery life.

Grooming Your Pet

Just like a real puppy, GoGo likes to stay clean. But make sure she doesn’t get wet! Gently brush her fur with a cloth or soft brush to loosen any dirt. You can use a slightly damp cloth to remove stains, but don’t use any cleaners on GoGo.

Troubleshooting

If your pet doesn't seem to respond properly, first try sliding the ON/OFF/TRY ME switch to OFF, then back to ON. If that doesn't work, you may need to replace the batteries.

NOTE: When you lift GoGo up, it triggers her "pickup" switch, and she stops moving. If GoGo doesn't move **forward or move her head when she should**, **if the "pickup" switch on the right rear wheel is being triggered.**

To Replace Batteries

1. Locate battery compartment under the fabric fastener on GoGo's tummy. (Sometimes it's hidden in her fur—look for the label.)
2. Loosen screw on battery door.
3. Remove and discard old batteries.
4. Replace with fresh 4 x 1.5V "C" or LR14 size alkaline batteries.
5. Replace door and tighten screw. Close fabric fastener securely.



IMPORTANT: BATTERY INFORMATION

CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**



NOTE TO UK CONSUMERS: This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose of in your household waste bin.