

AGES 4+  
66529 Asst.

# FurReal friends® JungleCat

## INSTRUCTION MANUAL



**TIGER**  
ELECTRONICS

Product and colors may vary.  
© 2006 Hasbro, Pawtucket, RI 02862 USA.  
All Rights Reserved. TM & ® denote U.S.  
Trademarks. Hasbro Canada, Longueuil,  
QC, Canada J4G 1G2. U.S. Pat. No.  
6811461 and Patent Pending.

66529 Asst. P/N 6577040000

Register your pet's name at:  
[www.furrealfriends.com](http://www.furrealfriends.com)

Questions? Call 1-800-844-3733

Thank you for purchasing this  
FURREAL FRIENDS™ Jungle Cat!  
For maximum play value, please read  
and follow instructions carefully.



**x4**


1.5VAA or LR6 size  
**NOT INCLUDED**

**ALKALINE BATTERIES REQUIRED**

Phillips/cross head screwdriver (not included) needed  
to insert batteries.

## TO INSERT BATTERIES

Use a Phillips screwdriver (not included) to loosen screw in battery compartment door (screw remains attached to door). Remove door and insert 4 x 1.5V "AA" or LR6 size alkaline batteries. Replace door and tighten screw.

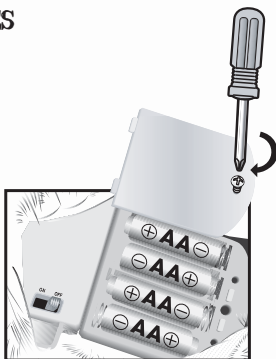

## CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old batteries and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

## IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries should be replaced by an adult.



## CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

## GETTING STARTED

To activate your Jungle Cat, insert batteries, then slide ON/OFF switch to the "ON" position. It will immediately lie down, close its eyes and snore.

### Head sensor


If you pet your Jungle Cat on the head, it might start to get a bit annoyed. If you pet it on the head too much, it will become more annoyed, and make growling or whining sounds.

### Mouth sensor

When you place the bottle in your pet's mouth, it will start to "feed" and make slurping sounds!

### Back sensor

If you pet your Jungle Cat on its back, it will calm down; the more you pet it, the more relaxed it will become.

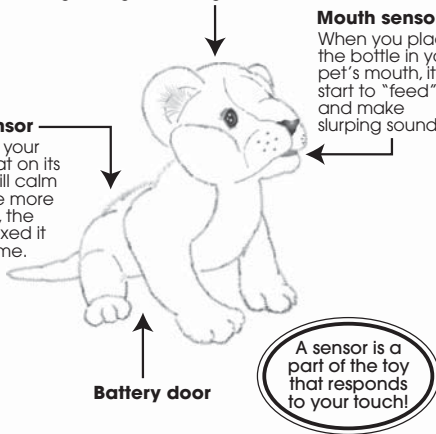

Battery door

4

## WAKING YOUR PET

You can wake up your Jungle Cat by petting it on its back or the top of its head; it will rise up, give a friendly growl and be very excited. You can also wake it up by putting its bottle in its mouth; it will begin making small movements and slurping sounds.



5

## HANGING OUT

After a few seconds of non-activation, your Jungle Cat will go into "hangout" mode. It will make quiet noises and lots of small movements. After it's been in hangout mode for a while with no activation, it will go to sleep.



## FEEDING YOUR PET

The more you "feed" your pet, the happier and more relaxed it will be. When you place your Jungle Cat's bottle in its mouth, it will begin to "feed" and make slurping sounds (and sometimes burp!). But be careful — if you feed it too much at once, it'll get the hiccups! To stop the hiccups, pat it on its back and it'll burp; if you don't pat it, after about 20 seconds it will burp on its own and then go into hangout mode.



## CLEANING INSTRUCTIONS

To clean your Jungle Cat, gently brush its fur with a cloth or soft brush to loosen any dirt. Then use a slightly damp cloth to remove stains.

- Do not put in the washing machine.
- Do not submerge in water.
- Do not use detergent or stain removers on fur.
- Do not get wet; to remove stains use only a slightly damp cloth on the fur.
- To prevent staining fur, wipe off dirt immediately.
- If toy gets wet, remove batteries and dry the fur; once fur is completely dry, replace batteries.
- Avoid spilling food or beverages on the toy.
- Do not throw or kick the toy, and do not push sharp objects through the speaker openings.
- Do not leave toy in direct sunlight; high temperatures will destroy the mechanism.

## FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.