

AGES 4+

**FurReal**  
friends

## Newborn Penguin



Penguin colors and accessory may vary.


**CARE  
GUIDE**

Just like a real animal, it's normal for your FURREAL FRIENDS toy to shed a little when you groom it.

## x3 BATTERIES INCLUDED

Replace with 3 x 1.5V "AAA" or LR03 size alkaline batteries. Phillips/cross head screwdriver (not included) needed to replace batteries.


The switch is currently in TRY ME position. Please slide to the ON position to activate your toy's play features.

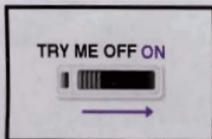

## Getting to Know Your Pet

### Mouth sensor

When you press down on your toy penguin's tongue (by "feeding" it, for example), it will chirp, flap its wings and make eating sounds!

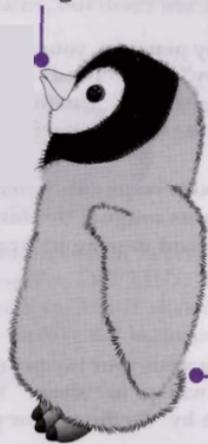

**TRY ME/OFF/ON**  
Switch and battery door on back.

A sensor is a part of the toy that responds to your touch!

## How To Play



To activate your toy penguin, slide the TRY ME/OFF/ON switch on penguin's back to the ON position. Your penguin is now ready to play.

### Play Mode

Just like a real baby penguin, your toy baby penguin is "hungry" a lot! "Feed" it and it will make happy eating sounds. The more you "feed" your toy penguin, the happier it will be!

Your toy penguin also responds to being "fed" (or when you press its tongue) by chirping, flapping its wings, and moving its head and beak.

### Sleep Mode

If you stop playing with your toy penguin for about a minute, it will go to "sleep." You can "wake" it up again by "feeding" it or pressing its tongue down.

**NOTE:** This toy uses battery power whenever its switch is in the ON position. When you're not playing with the toy, move its switch to the OFF position to help conserve battery life.

## Grooming Your Pet


Just like a real penguin, your toy penguin likes to stay clean. But make sure it doesn't get wet! Gently brush its fur with a cloth or soft brush to loosen any dirt. You can use a slightly damp cloth to remove stains, but don't use any cleaners on your penguin.

## Troubleshooting

If your pet doesn't seem to respond properly, first try sliding the TRY ME/OFF/ON switch to OFF, then back to ON. If that doesn't work, you may need to replace the batteries.

## To Replace Batteries

1. Locate battery compartment on penguin's back.
2. Loosen screw on battery door.
3. Remove and discard old batteries.
4. Replace with fresh 3 x 1.5V "AAA" or LR03 size alkaline batteries.
5. Replace door and tighten screw.

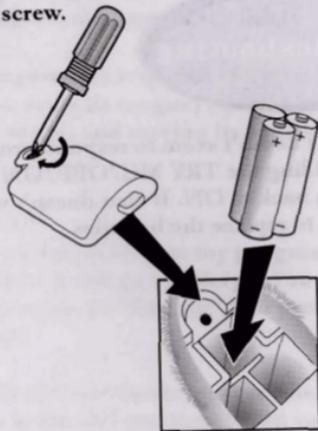

**NOTE TO UK CONSUMERS:** This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose of in your household waste bin.

## IMPORTANT: BATTERY INFORMATION



### CAUTION:

1. As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect. If you reside outside the United States, have the doctor call your local poison control center.
2. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
3. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
4. Remove exhausted or dead batteries from the product.
5. Remove batteries if product is not to be played with for a long time.
6. Do not short-circuit the supply terminals.
7. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
8. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

## FCC STATEMENT

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**FurRealFriends.com**  
Questions? Call 1-800-844-3733



Product and colors may vary.  
© 2009 Hasbro. All Rights Reserved.  
TM & © definite U.S. Trademarks.  
U.S. Pat. No. 6811461.