

AGES 5+

94158/94156 Asst.




P/N 7003940001

BATTLE BLADE

1 X2 1.5V AAA or RO3 size **BATTERIES INCLUDED**

Replace with 2 x 1.5V "AAA" or R03 size batteries. Alkaline batteries recommended. Phillips/cross head screwdriver (not included) needed to replace batteries.

- Once the blade is in "ON" mode, press the button to activate the blade. Swing the blade for lights and battle sounds.
- > The blade will power down after approximately 3D seconds to conserve battery life. To reactivate the blade, press the button - then begin swinging!
- You can always press the button to power down the blade instead of waiting for it to automatically power down. Always press the button first to reactivate it after it has powered down.

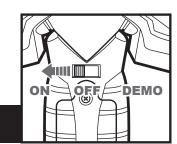

NOTE: This product is packaged in demo mode. Move switch to ON for full play features.

BUTTON


, 9

0

00 0

TO REPLACE BATTERIES:

Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment cover (screw remains attached to cover). Remove cover. Remove and discard old batteries. Replace with 2 x 1.5V AAA or R03 size batteries. Alkaline batteries recommended. Replace cover and tighten screw

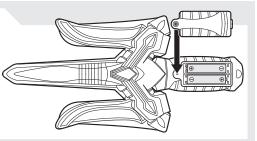

IMPORTANT: BATTERY INFORMATION



CAUTION:

- 1. As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect. If you reside outside the United States, have the doctor call your local poison control center.
- Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and – polarity markings.
- 3. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- 4. Remove exhausted or dead batteries from the product.
- 5. Remove batteries if product is not to be played with for a long time.
- 6. Do not short-circuit the supply terminals.
- 7. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
- 8. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.





