

IMPORTANT: BATTERY INFORMATION

⚠ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision.
DO NOT RECHARGE OTHER TYPES OF BATTERIES.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PLAYSKOOL®

AGES:
birth +

27071

 
Glowworld™

From the makers of Gloworm™

Reflection Pond Mirror™

⚠ CAUTION:

When toy is used in crib,
the crib sides should
be raised and the crib
mattress should be in one
of the lower positions.

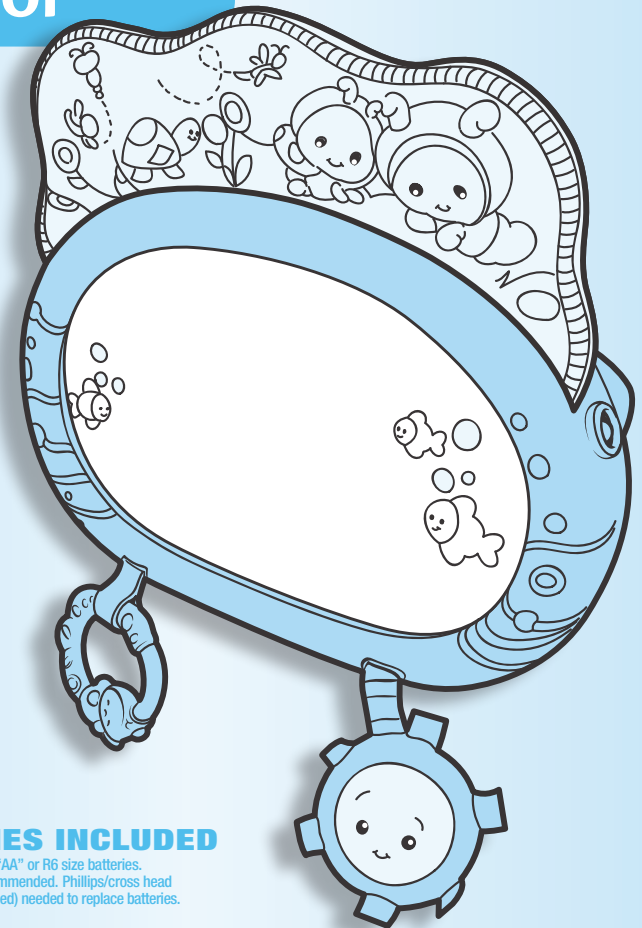

x2 BATTERIES INCLUDED
1.5VAA or R6 size

Replace with 2 x 1.5V "AA" or R6 size batteries.
Alkaline batteries recommended. Phillips/cross head
screwdriver (not included) needed to replace batteries.



P/N 7107020000
© 2010 Hasbro. All Rights Reserved.

TM & © denote U.S. Trademarks.

 
Visit
PLAYSKOOL
.com

Questions? Call 1-800-PLAYSKL

Set Up


REPLACE BATTERIES

Use a Phillips/cross head screwdriver (not included) to loosen screws in battery compartment door. Insert 2 x 1.5V AA or R6 size batteries. Alkaline batteries recommended. Replace door and tighten screws.

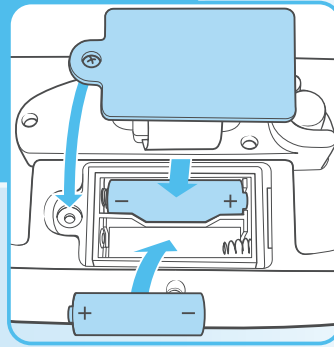

ON/OFF switch

 ON

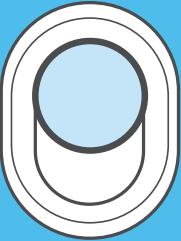


OFF



TO PLAY


Music will play and lights will flash when you first turn the mirror on.

 When baby bats at the mirror, the music will play and lights will flash again.

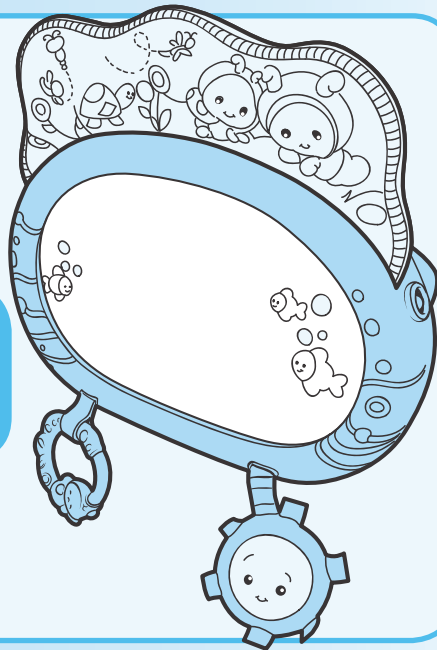


TUMMY TIME MODE

 Pull stand out. Place unit on floor/rug for tummy time play.

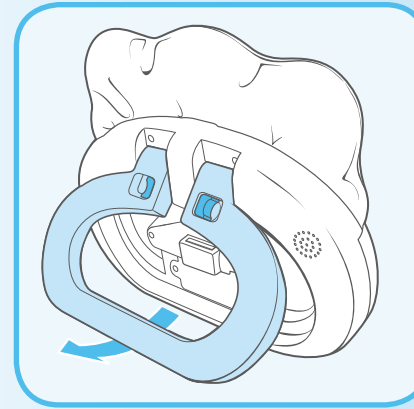



CRIB MODE*

 Pinch release buttons and push kickstand in.

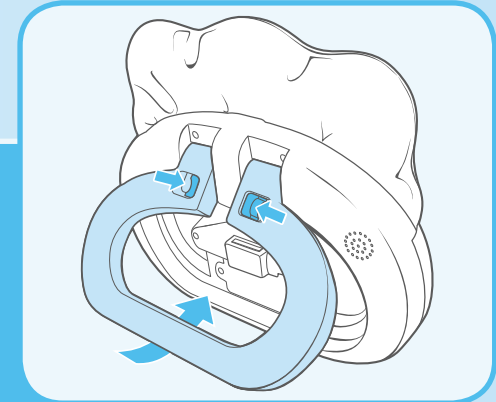

Depress button fully and thread strap through holder. Pull strap until snug against the crib rail.

  TO RELEASE MIRROR
Press release button and pull strap up.

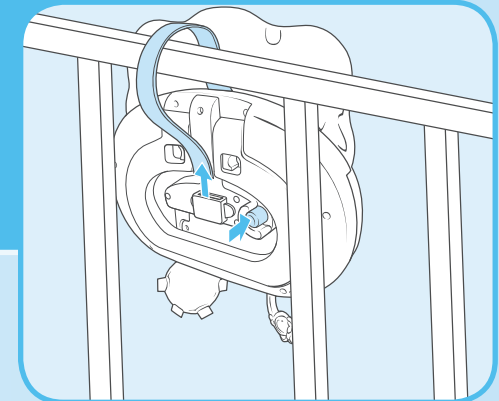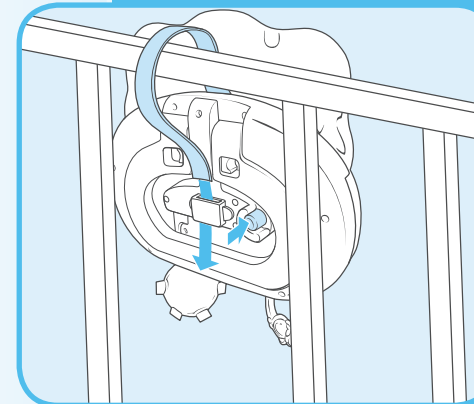

*Mirror can be attached to most cribs.