

WARNING:

Product must be assembled by an adult. This product contains small parts which are necessary for assembly. Prior to and during assembly of this product, keep small parts out of children's reach. Small parts pose a choke hazard to children under 3 years.

BIRTH+

39336/39335 Asst.

Gloworld™

Tummy Time Gym™

Adult assembly required.



Phillips/cross head screwdriver (not included) required to complete assembly.

INCLUDES:

Electronic unit, 2 soft characters, 2 bases, 2 arms, 4 short screws, 2 long screws.

x3 1.5VAA
R6 size
**BATTERIES
REQUIRED
NOT INCLUDED**

Alkaline batteries recommended. Phillips/cross head screwdriver (not included) needed to insert batteries.

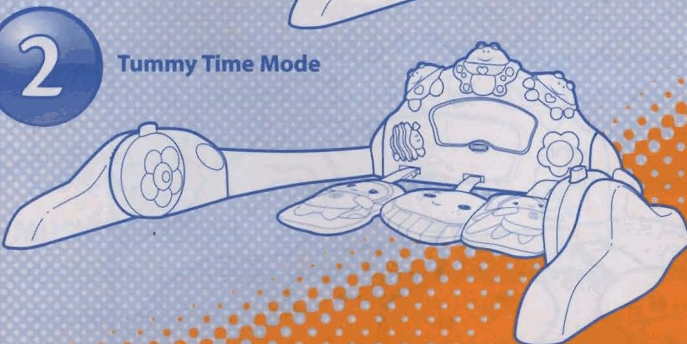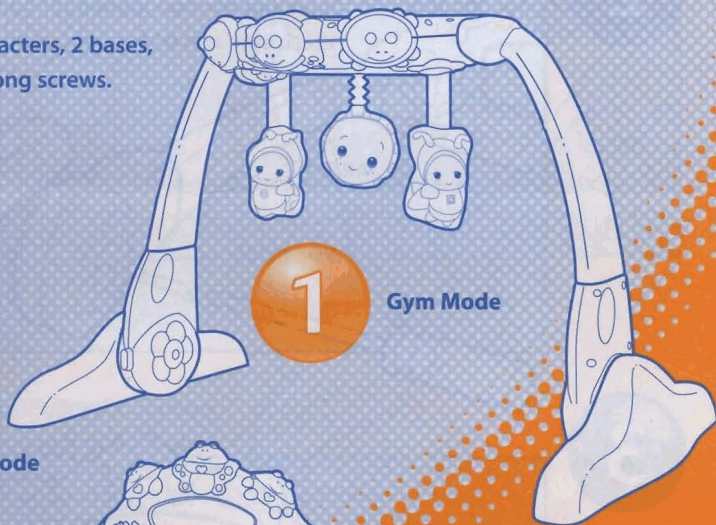


WARNING:

Continuous adult supervision required. To avoid injury and to prevent possible strangulation and entanglement injury, NEVER place gym in crib or playpen. NEVER add strings, ties or other products to gym. Remove gym from the children's environment when they begin to stand up.


PLAYSKOOL

ASSEMBLY:


1

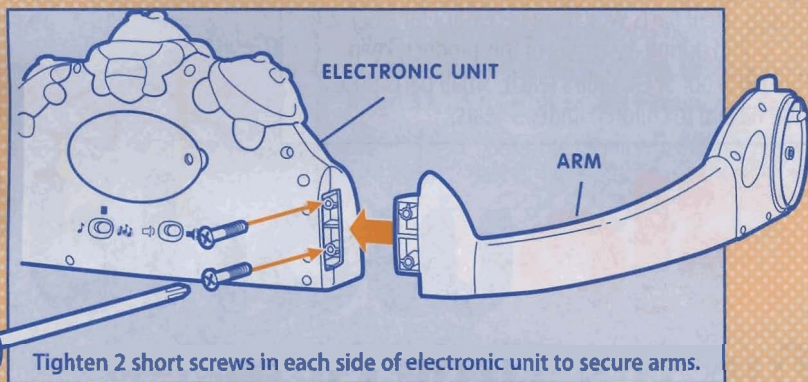

2

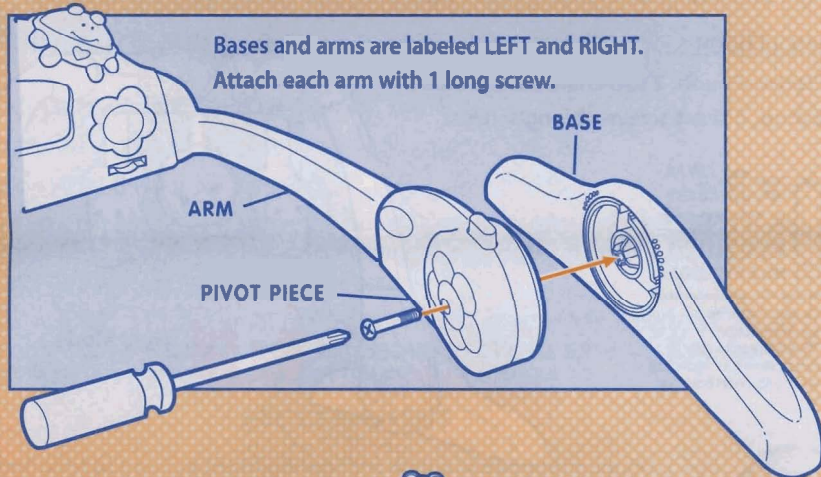

3

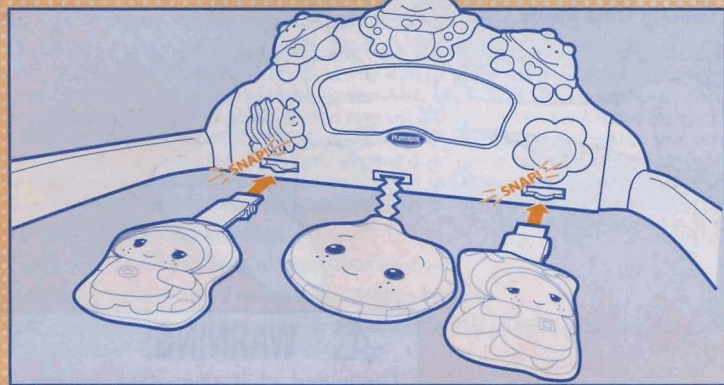


NOTE: Check assembly by pressing the button on each arm and rotating each base until button pops out to display the word "LOCKED" and a snap is heard. If no snap is heard, go back and check assembly.

ADJUST FOR TUMMY TIME:


Lay toy down so bottom of electronic unit rests on floor.

Press buttons and rotate bases so they lie flat on floor.

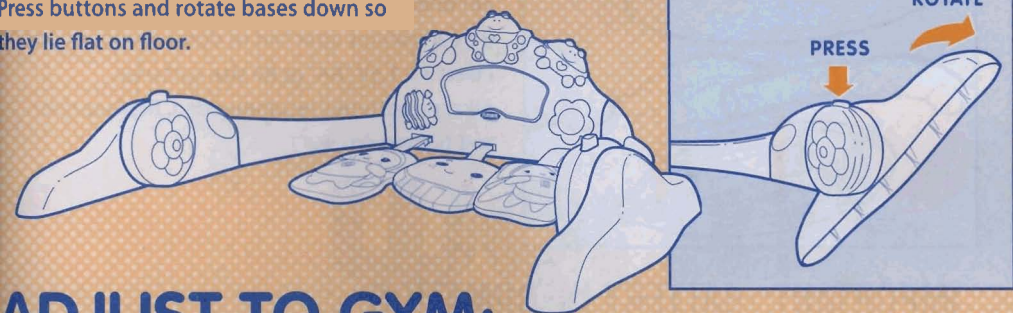

ADJUST TO GYM:

Lay toy down so bottom of electronic unit rests on floor. Press buttons and rotate bases into 'up' position (listen for snap). Lift electronic unit to stand toy up.

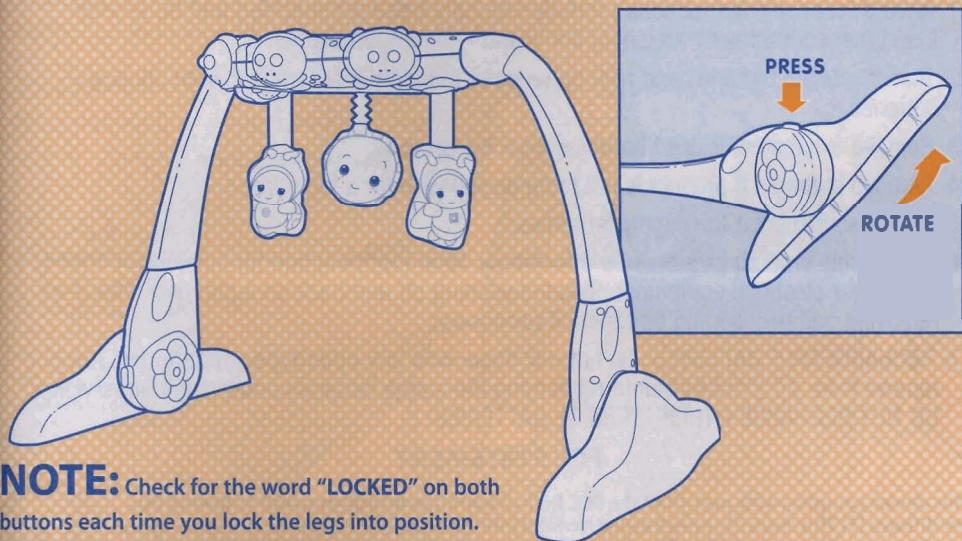

NOTE: Check for the word "LOCKED" on both buttons each time you lock the legs into position.

NOTE: Be sure baby is clear of toy when adjusting leg positions.

PLAY:

MUSIC SETTINGS:

Adjust switch on electronic unit to change the Music Settings.

Single Note – short play. 🎵

Multiple Notes – long play. 🎵🎵

Center – music off.

Adjust sound to High or Low with the Volume switch. 🔊


NOTE: Music is also activated by pressing light-up characters.

NOTE: After a brief period of inactivity, toy will prompt baby to play again before shutting itself off.

WIGGLE SUN:

Pull down and release.



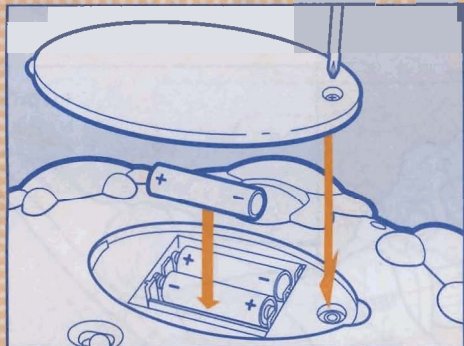

TO INSERT BATTERIES:

Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment door (screw remains attached to door). Remove door.

Insert 3 x 1.5V "AA" or R6 size batteries.

Alkaline batteries recommended. Replace door and tighten screw.

IMPORTANT: BATTERY INFORMATION

⚠ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



NOTE TO UK CONSUMERS: This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose of in your household waste bin.

Visit
PLAYSKOOL
.com