



CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old batteries and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.
Batteries should be replaced by an adult.



CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

HULK™

OVER 18 Months
78498/78481 Ass't.

For best results:
Use on a hard, flat surface.

Hulkay Pocket

 


x4
BATTERIES
INCLUDED

Replace with 4 x 1.5V "AA"
or L66 size alkaline batteries.
Phillips/cross head
screwdriver (not included)
Resistant to standard household...

POWER SWITCH

The Power Switch is located on the bottom of Hulk's foot.

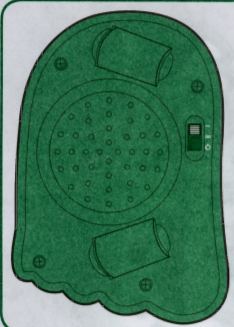

It has three positions:

I (Play), II (Try Me), and 0 (Off).

To Play with HULKEY POKEY HULK, move the switch to the I position. Remember to turn HULKEY POKEY HULK off when not playing with him.

 
VOLUME CONTROL

When you turn HULKEY POKEY HULK on, he will be at the medium volume setting. To adjust the volume:

1. Press and hold the buttons on both feet at the same time. This will bring his volume to the lowest setting.
2. Keep holding both buttons to set the volume to medium.
3. Continuing to hold down both buttons will set the volume to high. When the volume reaches the desired level, release the buttons.




SING ALONG WITH HULK

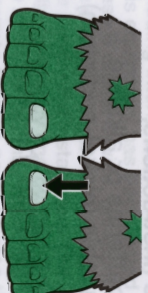

Press the big toe on the left foot to hear the HULKEY POKEY!

 
Press the big toe on the right foot to hear I'M A FRIENDLY HULK HERO!

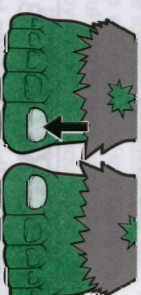

Both songs are pretty long, so keep pressing those toes after every section to hear the whole songs!

TO REPLACE BATTERIES

 Use a Phillips/ cross head screwdriver (not included) to loosen screws in battery compartment door (screws remain attached to door). Remove door. Remove exhausted batteries and replace with 4 fresh 1.5V "AA" or LR6 alkaline batteries. Replace door and tighten screws.

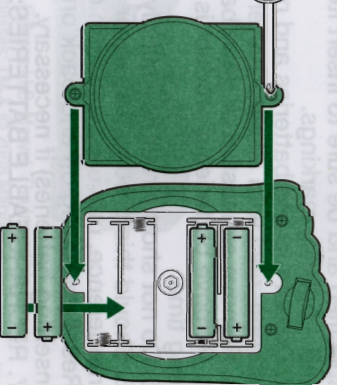

If speech becomes slow or distorted, try replacing the batteries.

Sing Along Lyrics:
Hold on to these lyrics so you can sing along with the HULK!

HULKY POKEY

First toe press:

Put your right fist in,
Put your right fist out,
Put your right fist in,
Then you smash it all about!
You do the Hulk Pokey,
And turn yourself about.
That's what it's all about!

Fourth toe press:

Put your right fist in,
Put your right fist out,
Put your right fist in,
Then you smash it all about!
You do the Hulk Pokey,
And you smash it all about.
That's what it's all about!

Second toe press:

Put your left fist in,
Put your left fist out,
Put your left fist in,
Then you smash it all about!
You do the Hulk Pokey,
And turn yourself about.
That's what it's all about!

Fifth toe press:

Put your left fist in,
Put your left fist out,
Put your left fist in,
Then you smash it all about!
You do the Hulk Pokey,
And you smash it all about.
That's what it's all about!

Third toe press:

Put your whole self in,
Put your whole self out,
Put your whole self in,
Then you smash it all about!
You do the Hulk Pokey,
And turn yourself about.
That's what it's all about!

Sixth toe press:

Put your whole self in,
Put your whole self out,
Put your whole self in,
Then you smash it all about!
You do the Hulk Pokey,
And you smash it all about.
That's what it's all about!

I'M A FRIENDLY HULK HERO

I'm a friendly Hulk hero
Super Gamma charged.
When I flex my muscles,
I can lift up cars!

I can dance and sing.
I like to smash anything.

Who am I?
The Incredible Hulk!
Who am I?
The Incredible Hulk!



FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



The Incredible Hulk, the Movie: © 2008 MVL Film Finance LLC. Marvel, The Incredible Hulk, all character names and their distinctive likenesses: TM & © 2008 Marvel Entertainment, Inc. and its subsidiaries. All Rights Reserved.
TM* and/or ®* & © 2008 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks.

P/N: 6779190000