## HANGING YOUR FLYPAPER™ TARGETS:

Apply Flypaper to glass, mirrors, and other smooth, flat surfaces. Adult assistance recommended.

- 1. Test surface before applying; adhesive may remove material from certain surfaces. See test strip.
- 2. Lay Flypaper flat for 20 minutes before applying.
- 3. Prior to application, wipe away any dust and debris from surface. Surface must be dry.
- 4. First, peel excess material off backing. Next, peel Flypaper off backing. Save backing to store Flypaper.
- 5. Slowly apply Flypaper to surface to avoid air pockets.
- Note: For best results, remove and reapply Flypaper every 6 months to help prevent damage to surface. If residue is left on surface, refer to cleaning guidelines provided by surface's manufacturer.



Not suitable for children under 3 years because of small parts — choking hazard.


o/N: 6742770000


Iron Man, the Movie © 2008 MVL Film finance LLC. Marvel, Iron Man, all character names and their distinctive likenesses: TM & © 2008 Marvel Entertainment, Inc. and its subsidiaries. All Rights Reserved.

© 2006-2007 Gamer Graffix names, logos and all related indicia are registered trademarks of Gamer Graffix™ Worldwide, LLC. All rights reserved. ©\* and/or TM\* & © 2007 Hasbro. All Rights Reserved.

TM & ® denote U.S. trademarks.


U.S. Pat. No. 5,529,050; 5699781; 6,000,386; 5,924,413; 5,596,978; 5,592,931; 5,553,598.

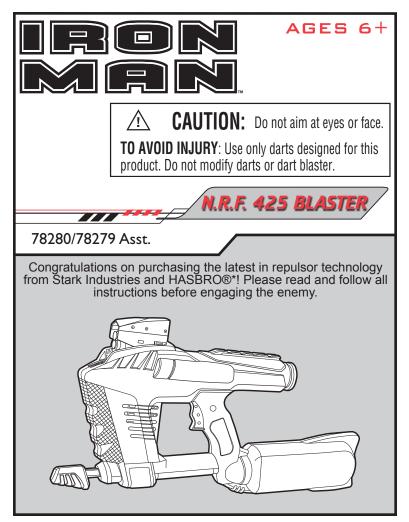

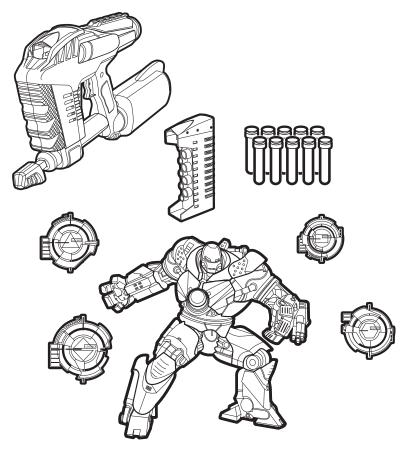


Includes: N.R.F. 425 Blaster, 1 Dart Magazine, 10 darts, 5 Fly Paper™ Wall Graphics

## TO USE YOUR BLASTER:

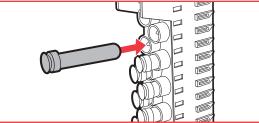

1. Fill the Dart Magazine with Repulsor Darts and insert into the Blaster.

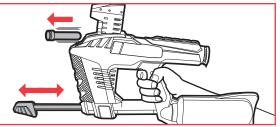

- 2. Slide the air-pump out, and, pulling toward you, pump 20 times.
- 3. Squeeze the Trigger to launch. Refill the Dart Magazine as necessary and pump before launching.

NOTE: A quick squeeze-and-release of the trigger will launch 1-2 Repulsor Darts: keeping the trigger squeezed will deliver rapid-fire action.