

IRON MAN™

Rocket Blast IRON MAN™

Thanks for purchasing the awesome Rocket Blast IRON MAN! Please read and follow all instructions before engaging the enemy.

AGES 8+
78278/78277 Asst.


For outdoor use only.

Includes:
IRON MAN figure,
Glider, Pump, Screw


Adult assembly required. Phillips/cross head screwdriver needed (not included) to complete assembly.

ASSEMBLY

1 Place launch tube on pump base.

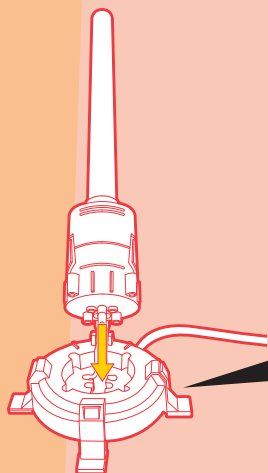


2 Using a Phillips/cross head screwdriver, secure the launch tube to the base using the included screw.

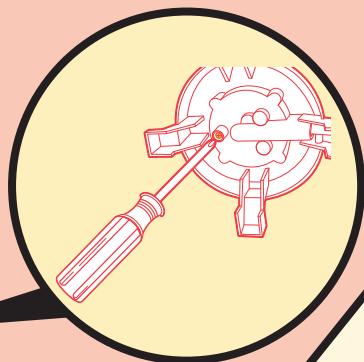

TO USE YOUR ROCKET BLAST IRON MAN


1

Slide the clip on the Glider into the rails on the back of the IRON MAN figure. The Glider should rest on the rails, but will not click into place.

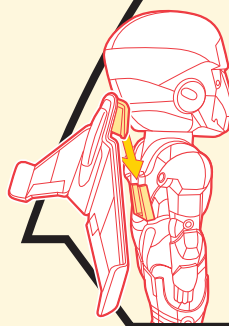


2

Place pump on a level surface. Slide the IRON MAN figure onto the pump.

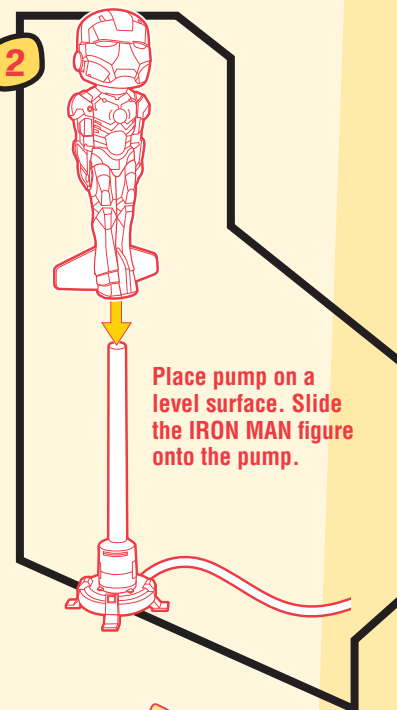


3

Pump 10-12 times. Extra air will release from the pump once maximum pressure is reached.

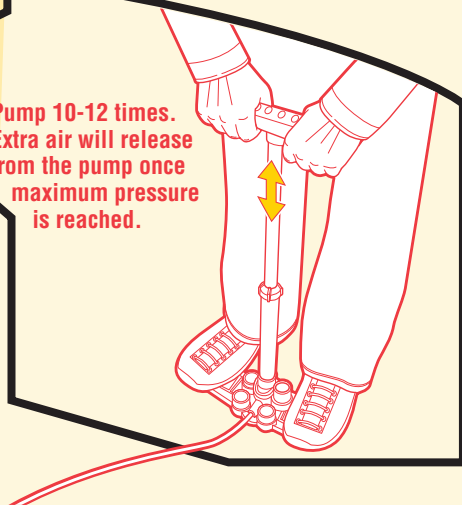

4

Being sure to keep your body clear of the IRON MAN figure, press the launch button on the pump. IRON MAN will soar into the air.

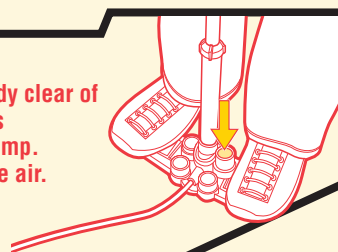

5

When the figure reaches its maximum altitude, the Glider will detach and soar away. Watch where it goes so you don't lose it!

NOTE: Glider may not detach on every flight.



Questions? Call 1-800-327-8264



Iron Man, the Movie © 2008 MVL Film finance LLC. Marvel, Iron Man, all character names and their distinctive likenesses: TM & © 2008 Marvel Entertainment, Inc. and its subsidiaries. All Rights Reserved.
©* and/or TM* & © 2008 Hasbro. All Rights Reserved.
TM & © denote U.S. Trademarks.

VISIT
www.hasbro.com/ironman



P/N: 6839150000