



LAZER TAG

GAME GUIDE

AGES
9+

CONTENTS • 2 Blasters • 2 iPhone®/iPod touch® Cradles
• 2 Lazer Tag iPhone Skins • 2 Lazer Tag iPod touch Skins

NOTE: This device is not intended to provide protection to the iPhone®/iPod touch®. Hasbro is not responsible for damage to the iPhone®/iPod touch®. Blaster does not charge device.

Adult assembly required.



CAUTION:

Know your surroundings and clear the area of any obstructions before each use. To avoid fatigue and strain, take frequent breaks during use if necessary. Use caution in low-light conditions because device screen may make it more difficult to see.

1. DOWNLOAD




Available on the
App Store

the free Lazer Tag® app

Upgrades available through In-App Purchases. In-App Purchases can be disabled on your device. Visit <http://support.apple.com/kb/ht4009> for more information. Notifications and messages about In-App Purchases may appear during game play.


2. BLASTER SETUP

A. REMOVE V-SIGHT AND TAKE OUT CABLE

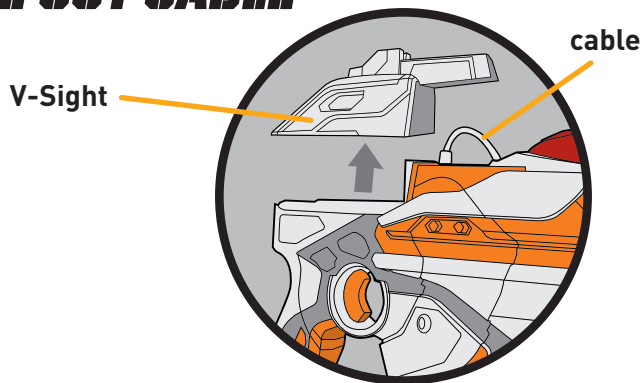


B. ATTACH THE CRADLE TO BLASTER


Push cradle down until it clicks into place. Once attached it cannot be removed.

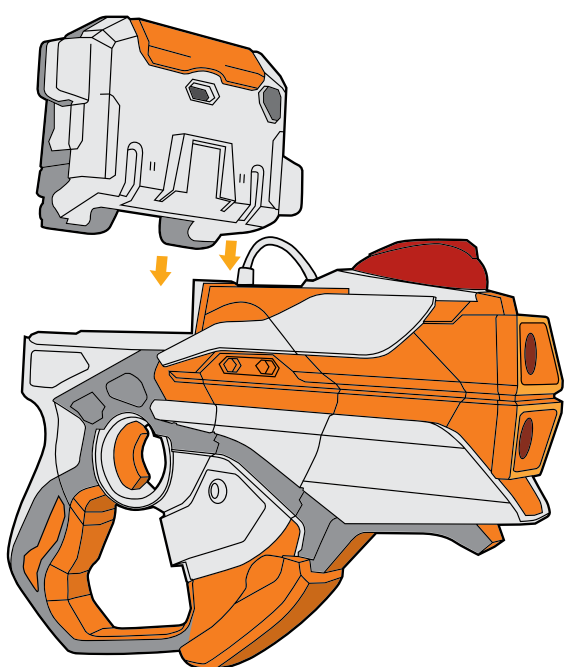

C. RELEASE LATCH AND OPEN CRADLE

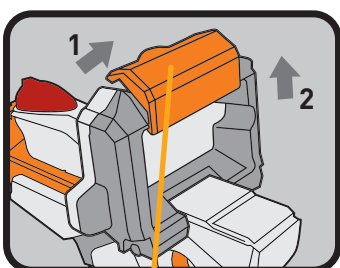


latch

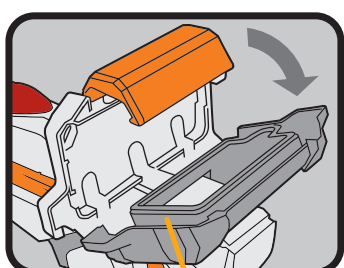

cradle



D. INSERT DEVICE INTO MATCHING SKIN

- If your device has an existing skin or case, remove it.
- iPhone 3GS does not require a skin.

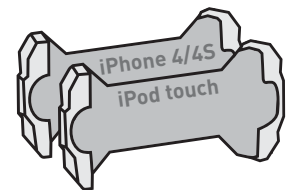


E. CONNECT AND INSERT YOUR DEVICE

1. Plug cord into audio jack of device before inserting into cradle.
2. Insert device into cradle so camera and audio jacks align with holes in cradle. (iPhone audio jack aligns on left and iPod touch audio jack aligns on right.)
3. Close cradle to secure device.

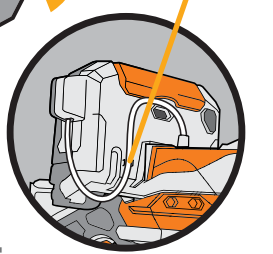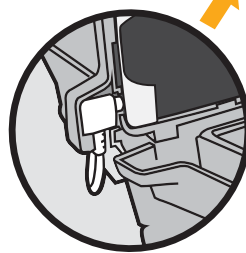

Note: Secure loose cord to cradle by using the Cord Clips.

F. TURN YOUR BLASTER ON

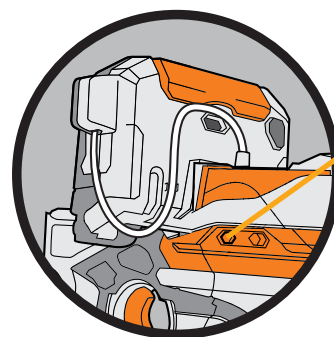

On/Off button

TROUBLESHOOTING

If you experience a problem with the blaster or the app, first try turning off the blaster and shutting down the app completely, then restart both.

iPhone/iPod touch and blaster not connecting?


- Check the cord to make sure it's all the way in. Try unplugging it and plugging it in again and listen for the click.
- Carefully clean out the audio jack. Ask an adult for helpful advice on how to do this.

- Ensure iPhone/iPod touch is not muted and the volume is turned up.
- Start the app before you turn on the blaster and wait for the "connecting" screen. Then turn the blaster on.

When I connect my device, there is a constant tone coming from my blaster. Why?

- The cord is not connected correctly. Try unplugging it and plugging it in again and listen for the click.

3. BLASTER FEATURES

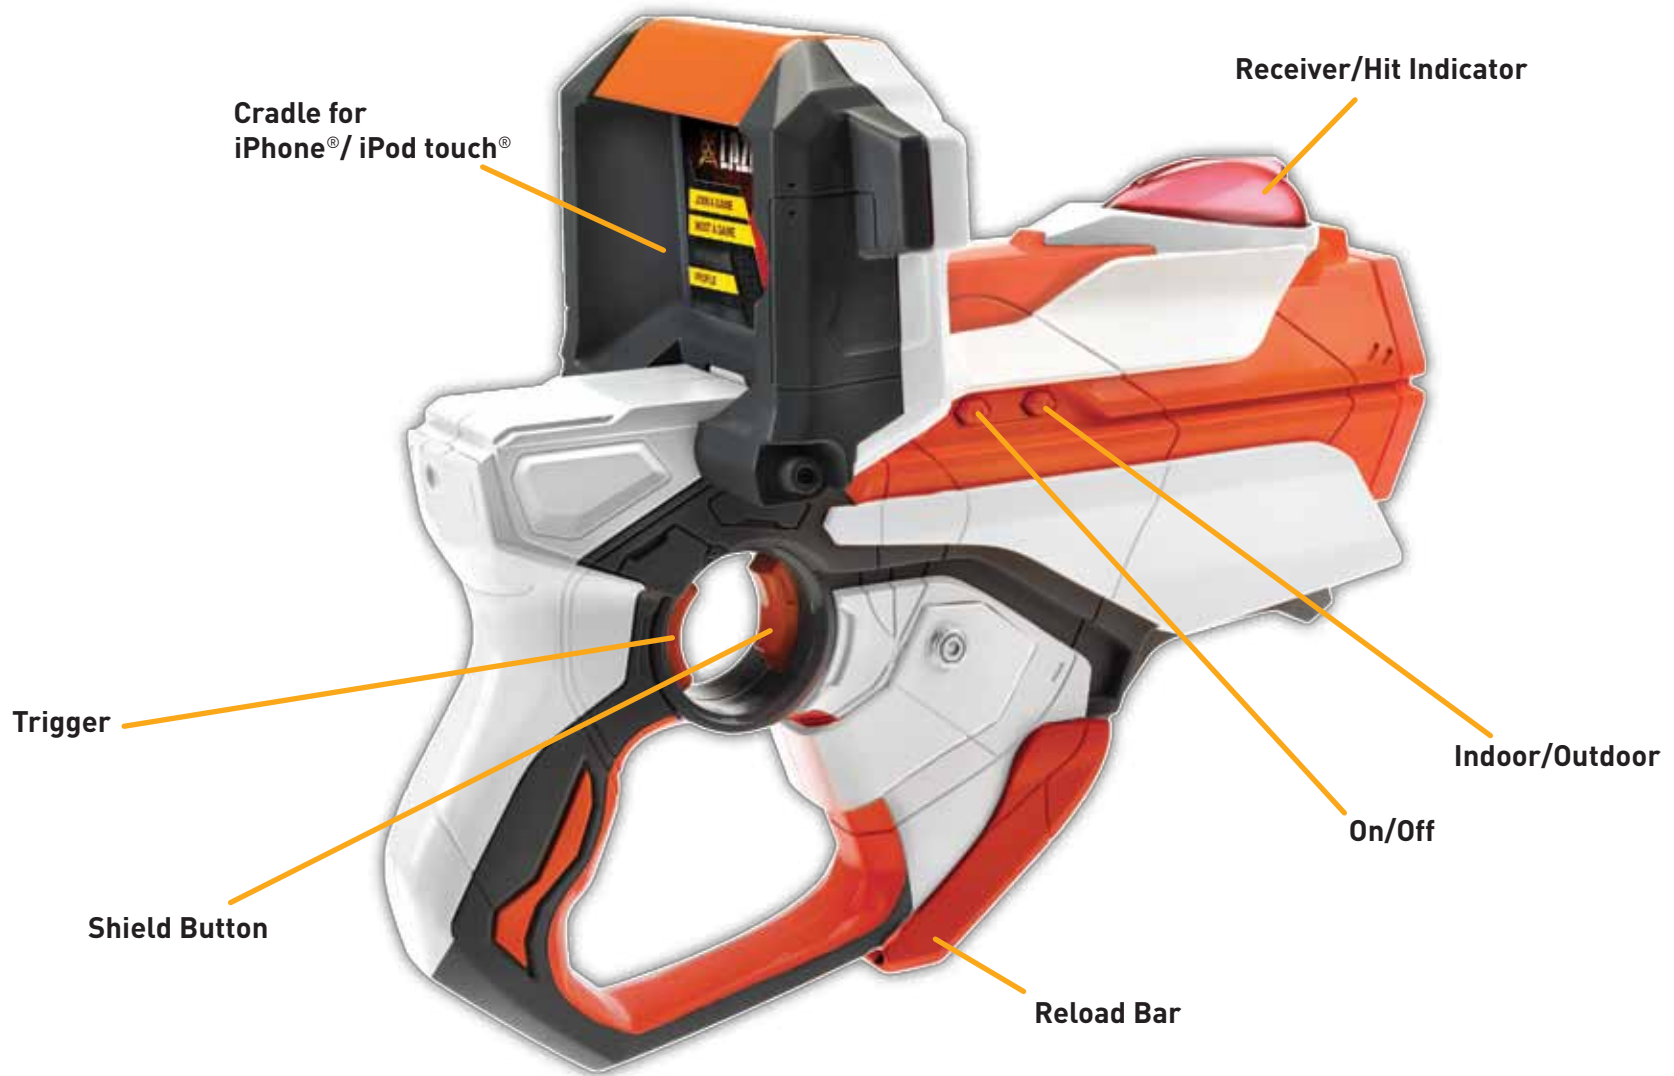

Playing *WITHOUT* an iPhone® or iPod touch®

If you don't have an iPhone or iPod touch, you can still play with Lazer Tag blasters. Here's how:


- Turn the blaster on.
- Select "indoor" or "outdoor" play based on where you are playing (see the switches on the side of the blaster).
- **To play without teams** (every person for themselves): Pull the trigger and a 10-second beeping countdown will begin. At the end of the countdown, the blaster will say "good luck" and the game begins. Your objective in non-team games is to blast all other players and be the last person left in the game.
- **For team play:** Press the reload bar to toggle through team selection options. For each press of the reload bar, the blaster will cycle through teams saying, "Solo," "Team 1," "Team 2," "Team 3." When you hear the team you want, pull the trigger to select that team, and begin the game. Do not select "Solo" for a team game, as you will not be able to blast any other players, nor will they be able to blast you. Your objective in a team game is to eliminate all opposing teams. Your blasts will not affect anyone on your own team.
- **For games both with and without teams:** Each player can be hit 10 times before they are out of the game. On the 10th hit, the blaster will indicate you've been eliminated by saying "you're out."

BLASTER CONTROLS

- **Reload Bar** – Team selection, reload and blaster selection. Blasters have 10 shots before they need to be reloaded. Push the reload bar once to reload the blaster. Blasters can be reloaded as many times as desired. Press and hold the reload bar to switch between single shot and rapid fire blaster.
- **Shield Button** – Push button to activate shield. While shield is on players cannot be tagged, and cannot tag anyone else. Push the button again to deactivate shield. Shield can be activated for 10 seconds at a time. Total shield time is 15 seconds per game.

TO REPLACE BATTERIES

Phillips head screwdriver required.

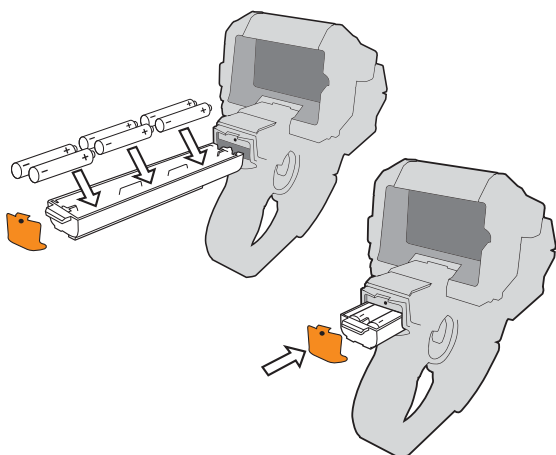

IMPORTANT: BATTERY INFORMATION

CAUTION:

1. TO AVOID BATTERY LEAKAGE
 - a. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
 - b. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
 - c. Remove exhausted or dead batteries from the product.
 - d. Remove batteries if product is not to be played with for a long time.
 - e. Do not short-circuit the supply terminals.
 - f. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.
2. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver. Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

iPhone, iPod touch, and iTunes are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

Duracell and its logo are trademarks of Procter & Gamble and are used with permission. © 2012 Procter & Gamble. All rights reserved.

LAZER TAG is a registered trademark of Shoot the Moon Products and is used with permission.

© 2012 Hasbro, Pawtucket, RI 02862 USA. All Rights Reserved. TM & ® denote U.S. Trademarks. US Pat. No. 7632187 & Pat. Pending.

Consumer contact:

USA and Canada: Hasbro Games, Consumer Affairs Dept., P.O. Box 200, Pawtucket, RI 02861-1059 USA. ☎ 888-836-7025. Hasbro Australia Ltd., Level 2, 37-41 Oxford Street, Epping, NSW 2121, Australia. ☎ 1300 138 697. Hasbro NZ (a branch of Hasbro Australia Ltd.), 221 Albany Highway, Auckland, New Zealand. ☎ 0508 828 200.

POWER UP WITH
DURACELL
BATTERIES
NOT INCLUDED

x12 1.5V AA
ALKALINE BATTERIES
REQUIRED
6 BATTERIES PER BLASTER REQUIRED



GET TO KNOW YOUR BLASTER



Are you ready to battle your friends and take out some ugly aliens? Then what are you waiting for? Grab your blaster and get in there!

BASIC MISSION **2 OR MORE PLAYERS**

No iPhone or iPod touch needed, just power up your blaster and start shooting. You want to be the last man standing. Take 10 hits and you're out.

1. Turn your blasters on and set them to either Indoor or Outdoor based on where you'll battle.
2. Let the blasting begin! Run, hide or do whatever it takes not to get hit.

APP-ENHANCED MISSIONS


Download the app then play your most adrenaline-filled LAZER TAG missions yet with the interactive app. Just connect your iPhone or iPod touch to your blaster, follow the on-screen commands and you're ready to go!

SOLO CAMPAIGN **1 PLAYER**

Hone your skills as you battle waves of alien enemies.

MULTIPLAYER BATTLE **2 TO 24 PLAYERS**

Get a bunch of friends together and have an all-out blaster brawl in a selection of awesome multiplayer games!

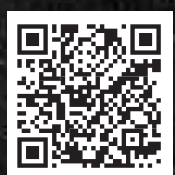

NEED TO DOWNLOAD THE APP?

Use a smartphone to scan the code and download the app. You can also visit lazertag.com for the latest on future apps, updates and more!

