

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



98694 PN 7274940000

© 2012 Hasbro. All Rights Reserved.

TM & ® denote U.S. Trademarks.

 
Visit
PLAYSKOOL
.com

Questions? Call 1-800-PLAYSKL

PLAYSKOOL

**OVER
9
months**

x2
1.5VAA
**ALKALINE
BATTERIES
REQUIRED
DEMO
BATTERIES
INCLUDED**

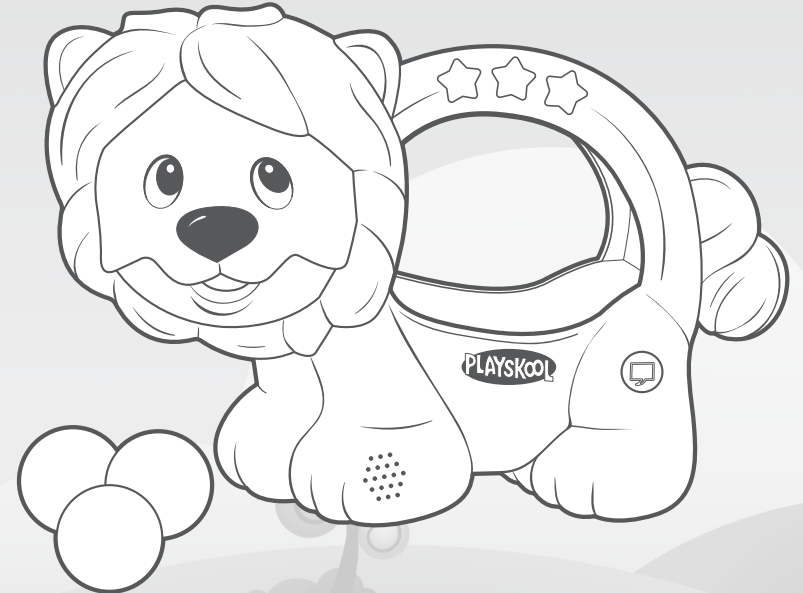

NOTE TO CONSUMER:


This toy is packaged in DEMO mode. Activate its full range of features by moving its ON/DEMO/OFF switch to the ON position.



Learn 'n Pop Lion™




To Play:

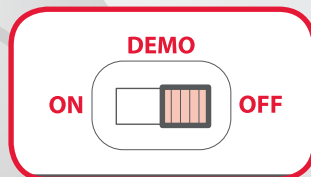

Slide switch to OFF position when not in use to help conserve battery power.


Chase-Me Play

Load the balls into the lion's mouth or directly into his belly. Then, press down on the tail. Balls pop out for baby to chase after!

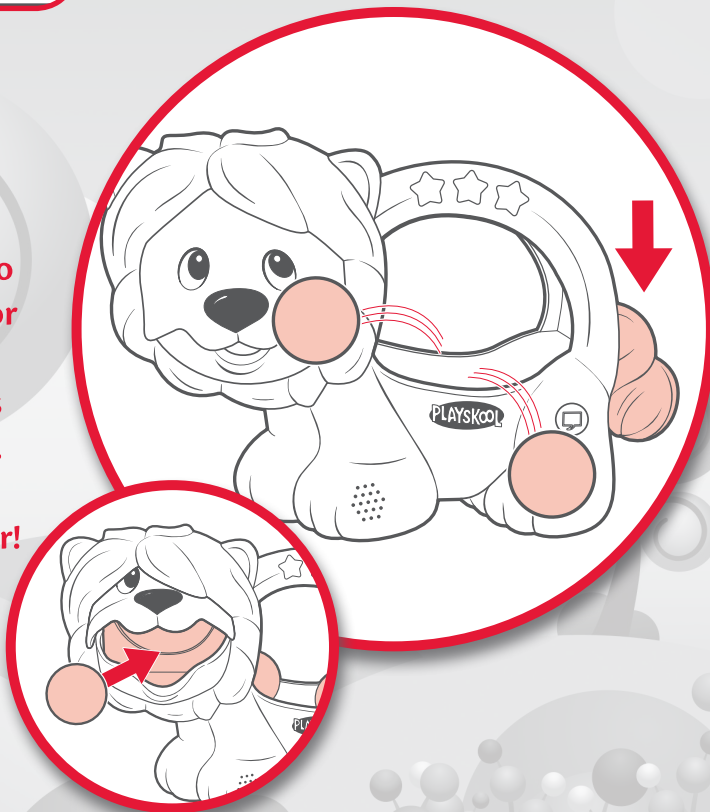

To Replace Batteries:

Replace demo batteries with alkaline batteries. Phillips/cross head screwdriver (not included) needed to insert batteries. Use screwdriver to loosen screw in battery compartment door (screw remains attached to door). Remove door. Insert 2 x 1.5V fresh "AA" batteries. Alkaline batteries are required. Replace door and tighten screw.

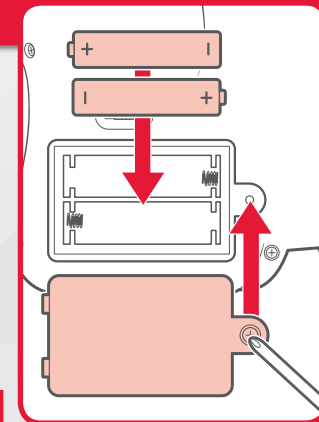

IMPORTANT: BATTERY INFORMATION

⚠ CAUTION:

1. TO AVOID BATTERY LEAKAGE

- Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
- Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- Remove exhausted or dead batteries from the product.
- Remove batteries if product is not to be played with for a long time.
- Do not short-circuit the supply terminals.
- RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

- Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.






Number	English	Spanish	French	Mandarin
1	One	Uno	Un	yī
2	Two	Dos	Deux	èr
3	Three	Tres	Trois	sān
4	Four	Cuatro	Quatre	sì
5	Five	Cinco	Cinq	wǔ
6	Six	Seis	Six	liù
7	Seven	Siete	Sept	qī
8	Eight	Ocho	Huit	bā
9	Nine	Nueve	Neuf	jiǔ
10	Ten	Diez	Dix	shí
Language Name	English	Español	Français	Pǔ Tōng Huà

Counting Fun

 
Feed balls into the lion's mouth. The lion will count the balls up to 10. After 10 seconds of inactivity, the counter will reset to one. Pushing the tail down will also reset the counter.

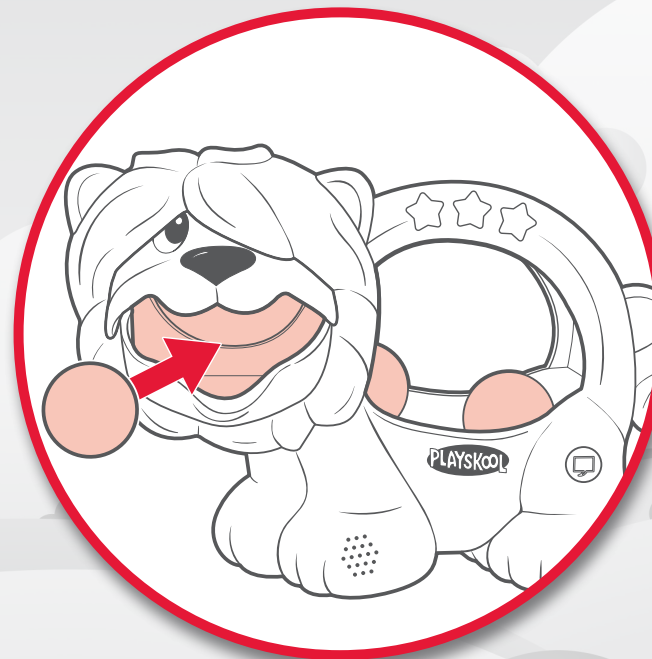



Language Button

Press the language button to change languages. Press the button repeatedly until you hear the name of the language being announced in that language.

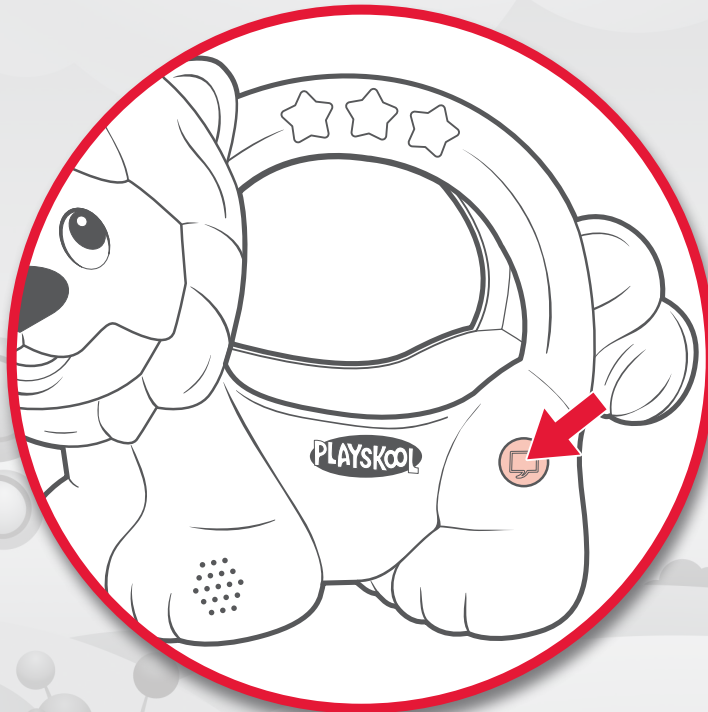

You can lock the language selection for continued counting in a particular language. Press the language button repeatedly, until you've selected the desired language. When you hear the desired language being announced, continue pressing the button for 5 seconds, or until you hear a locking sound effect. The sound will confirm that the language button is activated.



When the language selection is locked, pressing the language button will announce the current language followed by a locked sound effect. This will not change the language.

When you're ready to unlock the language selection, press the language button for 5 seconds, or until you hear 3 beeps followed by a locking sound effect. Release the button. The language button is now unlocked.

NOTE: If the toy is turned off, or if the toy loses power while in the locked mode, the language button will be unlocked when the toy is turned back on.

