



WARNING:

CHOKING HAZARD- Small parts.
Not for children under 4 years.

32676 Asst

AGES
4+

Lite-Brite®

LED Flat Screen



x3
1.5V AA
R6 size

**BATTERIES
REQUIRED
NOT INCLUDED**

Alkaline batteries
recommended.
Phillips/cross head
screwdriver
(not included)
needed to insert
batteries.

 


INCLUDES: LED Flat Screen playset, 200 pegs, 8 pattern and 2 blank sheets.

Picture Refill Sets available at www.LiteBrite.com.

(Each sold separately.)

TO INSTALL BATTERIES:

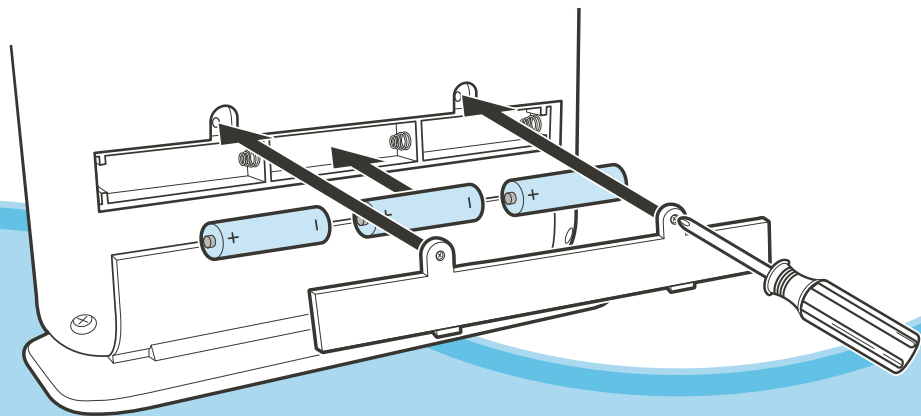

1

Using Phillips/cross head screwdriver (not included), loosen screws in battery compartment cover (screws stay attached to cover). Remove cover. Insert 3 x 1.5V “AA” or R6 size batteries. Alkaline batteries recommended. Replace cover and tighten screws.

 
 
IMPORTANT: BATTERY INFORMATION

⚠ CAUTION:


1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and – polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

TO CREATE LITE-BRITE® PICTURES:

1 Tear the pattern sheets along the perforated lines and remove.

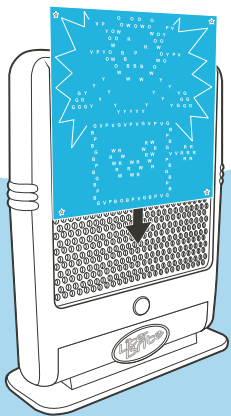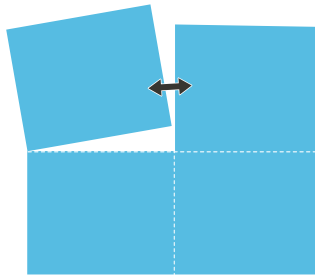

 
2 Slide a pattern sheet from the top along the track keeping it flat and straight on the peg screen. Position the sheet so that the star on each corner is next to a corner on the peg screen. Push a peg through the hole in each star to secure the sheet to the screen.

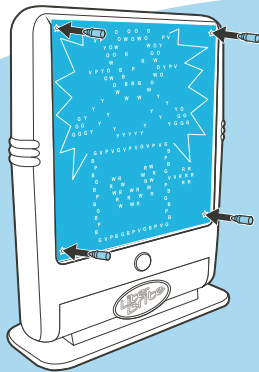

3 When creating a picture, follow the printed letters on the sheet that tell which colored pegs to use (see chart below). If you are making a free-form picture, simply insert the pegs through the holes wherever you want for your own unique designs.


O = ORANGE **R** = RED **G** = GREEN **P** = PINK
W = WHITE **B** = BLUE **Y** = YELLOW **V** = VIOLET

 4 Insert the colored pegs through the paper and into the peg screen as far as they will go.

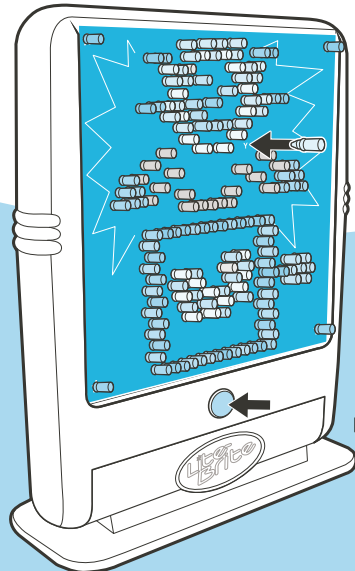

5 Press the button to make your creation shine! Press the button a second time to make your creation blink. Press the button a third time to turn it off.

 Press to light up design!

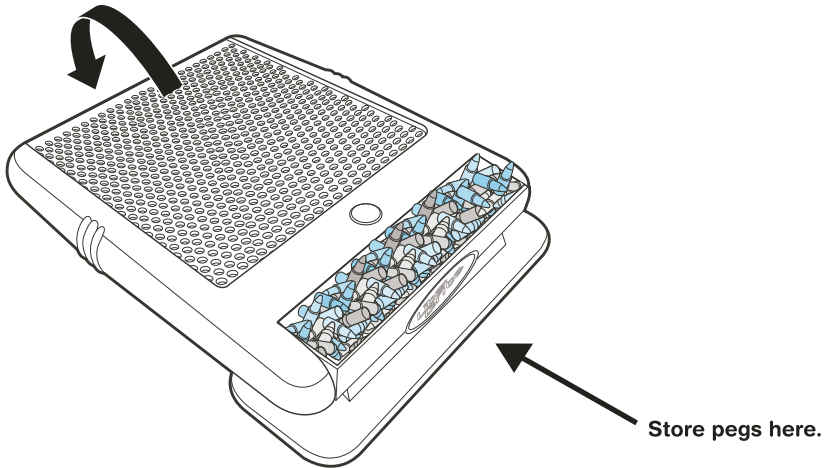

Store pegs here.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



PN 7155930000

LITEBRITE.COM Questions? Call: 1-800-327-8264. Product and colors may vary.

© 2011 Hasbro. All Rights Reserved. TM and © denote U.S. Trademarks.

