

⚠ WARNING:

CHOKING HAZARD-Small parts. Not for children under 4 years.



AGES 4+

REQUIRED NOT INCLUDED

Alkaline batteries recommended. Phillips/cross head screwdriver (not included) needed to insert batteries.




LED Travel

Includes LED Travel playset, 100 pegs and 4 pattern sheets.



TO INSTALL BATTERIES:

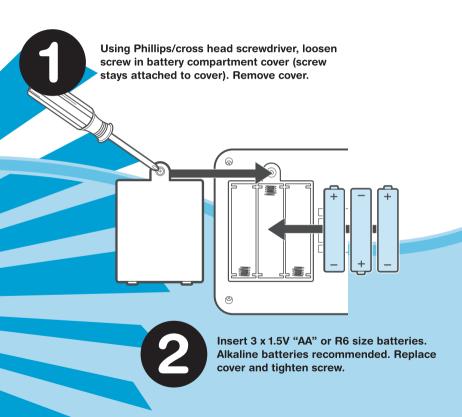

IMPORTANT: BATTERY INFORMATION




 
- 1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and polarity markings.
- 2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- 3. Remove exhausted or dead batteries from the product.
- 4. Remove batteries if product is not to be played with for a long time.
- 5. Do not short-circuit the supply terminals.
- 6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
- 7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging.

 Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

TO CREATE LITE BRITE PICTURE:

Tear the pattern sheets along the perforated lines and remove.

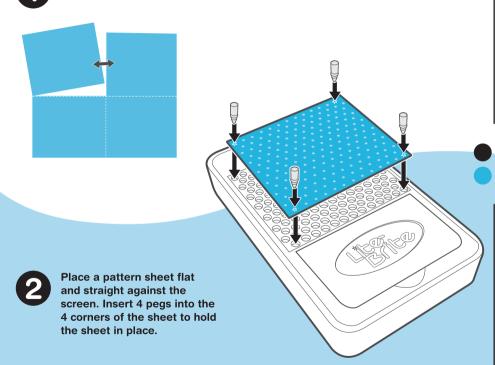




O = ORANGE R = RED

G = GREEN PINK

Y = YELLOW V = VIOLET

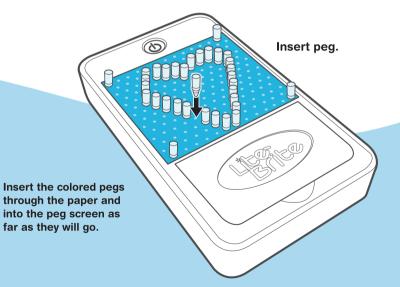



LITEBRITE.COM Questions? Call: 1-800-327-8264. Product and colors may vary.

© 2011 Hasbro. All Rights Reserved. TM and ® denote U.S. Trademarks.