AGES 6+ 62975 Asst.

ANS OFFI electronic diary

D

ON

Thank you for purchasing this Littlest Pet Shop® product! Please read these instructions thoroughly and carefully.

Ő

1.5VAA or R6 size

ATTERIES REQUIRED

1)2

screwdriver (not included) needed to insert batteries.

[-

00

TO INSERT BATTERIES

Using a Phillips/cross head screwdriver (not included), loosen screw in battery compartment cover (screw stays attached to cover). Insert 3 x 1.5V "AA" or LR6 size alkaline batteries (not included). Replace cover and tighten screw.

▲ CAUTION: TO AVOID BATTERY LEAKAGE

Ø

- 1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- 2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- 3. Always remove weak or dead batteries from the product.


IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries should be replaced by an adult.

CAUTION:

- 1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and polarity markings.
- 2. Do not mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
- 3. Remove exhausted or dead batteries from the product.
- 4. Remove batteries if product is not to be played with for a long time.
- 5. Do not short-circuit the supply terminals.
- 6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Press the Reset Button if necessary.
- 7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.


GETTING TO KNOW YOUR DIARY

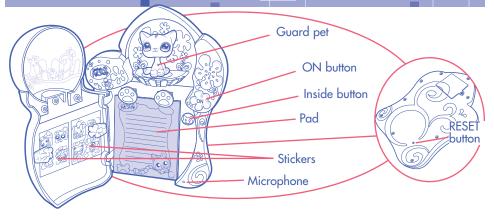

SETTING A PASSWORD

Your diary can only record a password that takes you a couple of seconds to say, so your password should be short (and easy to remember!). If you name the pet that comes with your diary, your pet's name can be your password!

Make sure it's quiet when you set your password! Any background noise may interfere with your setting your password.

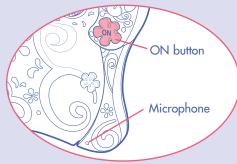

- 1. Press the ON button.
- 2. Your diary will say, "Set your password."
- 3. Say your password, clearly and distinctly, into the microphone. You do not need to shout.
- Your diary will say, "Repeat your password." Do so.
- Your password is now saved. Your guard pet will make a happy sound, and the diary will pop open!

If you try to set a password and it is not saved, your diary will say "Password not set", and then open. The next time you open the diary, it will prompt you to set a password. If the password is still not set successfully, the diary will prompt you again the next time you open it. If, after three tries, the password still isn't set, your diary will simply say "Password not set" whenever you open it. If you want to try again, press the RESET button and follow the instructions above.

OPENING THE DIARY

Press the ON button and wait for your diary to say, "Password, please." Say your password.

- If your diary recognizes the correct password, your guard pet will make a happy sound, and the diary will pop open.
- If you say the incorrect password or you say nothing at all you have two more chances to try
 again. If the password is still incorrect, your guard pet will make an unhappy sound and the diary
 will not open!

PSST!

This is a secret: if you forget your own password, press and hold the ON button for about 10 seconds and the door will pop open.

USING YOUR DIARY Your diary comes with a pad of 20 sheets and stickers for decoration. When you are done using your diary, be sure the door clicks shut when you close it. And remember: don't tell anyone your password! Press the button inside your diary, and your pet will interact with you Remove your pet from the top of the diary and play with it! Just be sure to put it back, facing front, when you're done. This diary will only work with the pet that comes with it. (The pet does not need to be in place for diary features such as voice recognition to work.)

TROUBLESHOOTING

If the product begins acting erratically or freezes up, press the RESET button. Then follow directions from the beginning. If this measure does not work, replace the batteries with fresh batteries.



FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

© 2007 Hasbro. All Rights Reserved. TM & ® denote U.S. Trademarks. 62975 PN 6712410000

