## DOOR), REMOVE DOOR, INSERT 4 X 1.5V "AA" OR LRG SIZE ALKALINE BATTERIES. REPLACE DOOR AND TIGHTEN SCREW **CAUTION:** Do not aim at eyes or face. TO AVOID INJURY: Use only strings designed for

this product. Do not modify strings or shooter.

## **IMPORTANT: BATTERY INFORMATION**

## **CAUTION:**

- 1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and polarity markings.
- 2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- 3. Remove exhausted or dead batteries from the product.
- 4. Remove batteries if product is not to be played with for a long time.
- 5. Do not short-circuit the supply terminals.
- Should this product cause, or be affected by, local electrical
  interference, move it away from other electrical equipment.
   Reset (switching off and back on again or removing and re-inserting
  batteries) if necessary.
- 7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging.

  Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.





