





AGES 8+

52589

Monster Rocket™

IMPORTANT: Please read carefully before using MONSTER ROCKET product.

Before each launch, make sure nozzle and launch base are free of dirt and debris.

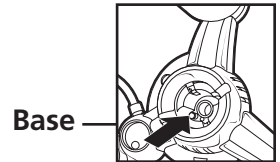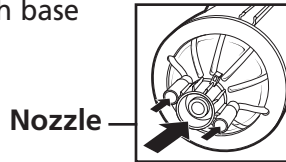


TROUBLESHOOTING GUIDE

THE MONSTER ROCKET WILL NOT LAUNCH UNLESS THE BODY IS PROPERLY INSERTED INTO THE FOAM ROCKET BASE AND THE LAUNCH BASE IS LEVEL.






To level the MONSTER ROCKET:

Adjust level dials until ball has settled into the center hole.

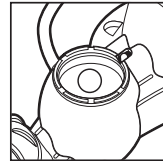

To ensure the body is properly inserted into the foam rocket base:

1. Make sure the MONSTER ROCKET body is fully inflated.
2. Make sure the MONSTER ROCKET is fully inserted into the foam base. The body is fully inserted when the white line on the body lines up with the top of the foam base.
3. Make sure the seams on the body are not lined up with the two markers on each side of the foam base.

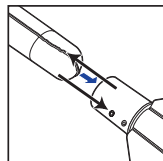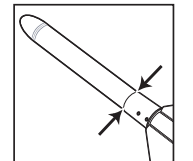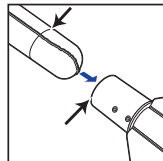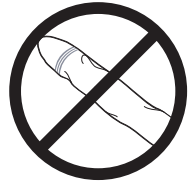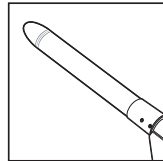

If you continue to have difficulties launching the MONSTER ROCKET, please visit our website at www.supersoaker.com or call 1-800-327-8264.



© 2004 Hasbro. All Rights Reserved.
 ® denotes Reg. U.S. Pat. & TM Office.
 Patent Pending. 52589 P/N #####0000

