

Mr Potato Head®

Please retain this information for future reference. Batteries should be replaced by an adult.

AGES
3+

16902

 
PLAYSKOOL

More than Play™

Includes:

- 1 potato body with hat and shoes
- 1 nose
- 1 mouth
- 1 set of eyes
- 2 ears
- 2 arms

Popping Talking Tater™

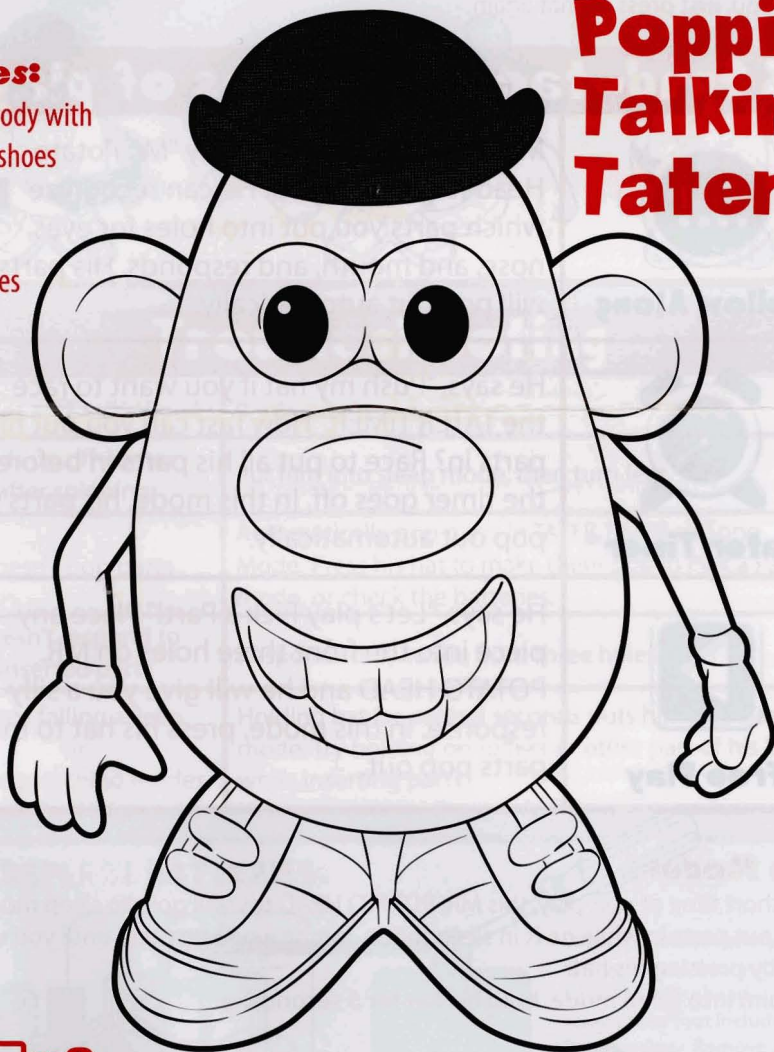

 x3

 
BATTERIES INCLUDED

Replace with 3 x 1.5V "AA" or LR6 size alkaline batteries. Phillips/cross head screwdriver (not included) needed to replace batteries.

Play with us at:
PLAYSKOOL
KIDS.com

Note to Consumer:

This Mr. Potato Head® toy is packaged in try me mode. When you bring him home, activate his full range of features by moving the power switch (located on battery box) from "Try Me" to "On." Press hat and follow his prompts.

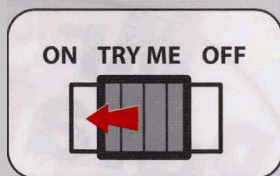

To Play:

To begin, make sure the On/Off switch is turned to On. Press his hat to begin. Your POPPING TALKING TATER will ask you which mode you'd like to play. When you hear the one you want, press his hat to go into that mode. If you want to go back to the main menu, just press his hat again.

3 Spud-tacular modes of play!



Follow Along

MR. POTATO HEAD will play "Mr. Potato Head® Says" with you. He can recognize which parts you put into holes for eyes, nose, and mouth, and responds. His parts will pop out automatically.



Tater Timer™

He says, "Push my hat if you want to race the TATER TIMER." How fast can you put his parts in? Race to put all his parts in before the timer goes off. In this mode, his parts will pop out automatically.



Free Play

He says, "Let's play Pick a Part!" Place any piece into the front three holes on MR. POTATO HEAD and he will give you a silly response. In this mode, press his hat to make parts pop out.

Sleep Mode:

After a short time of non-play, this MR. POTATO HEAD toy will go into sleep mode. You can still put parts in while he is in sleep mode, but he won't respond until you wake him up by pressing his hat.

To put him into sleep mode, hold his hat for 5 seconds.

"Friend me" at [facebook.com/mrpotatohead](https://www.facebook.com/mrpotatohead)

 
(Ask an adult before going online)

Popping Feature:

After completing the Song Mode and TATER TIMER mode, MR. POTATO HEAD will wiggle his parts, turns, and automatically pop his parts out. Press his hat to make him pop his parts (without turning around) in Pick a Part mode, or during the middle any other mode.

Note: You can place any part anywhere on his body, but he recognizes and responds to parts placed in three front holes only.


Note: Regular MR. POTATO HEAD parts and pieces will not work in POPPING TALKING TATER.

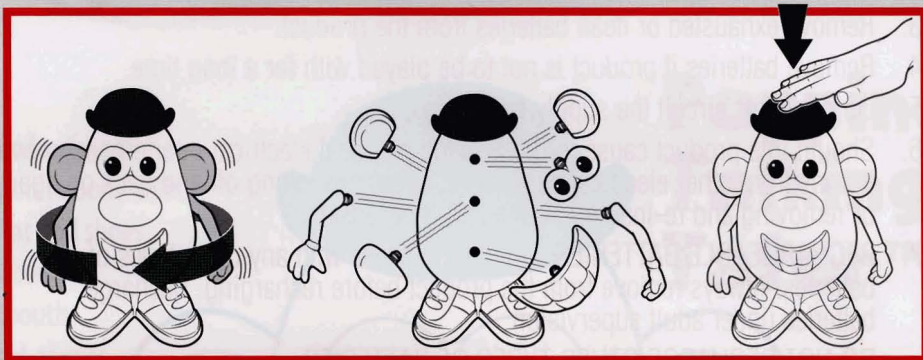

Troubleshooting

| | |
|--|---|
| Wiggles and spins slowly | Replace batteries |
| Ends up off-center after spinning | Put him into sleep mode, then turn feet. |
| Doesn't pop parts | Automatically pop parts in TATER TIMER or Song Mode. Press his hat to make them pop in Pick a Part mode, or check the batteries. |
| Doesn't respond to inserted parts | Responds only to the front three holes. |
| Keeps falling asleep or Keeps switching modes | Holding hat for several seconds puts him into sleep mode. Try holding on to feet or other part of his body while inserting parts. |

 TO REPLACE BATTERIES:

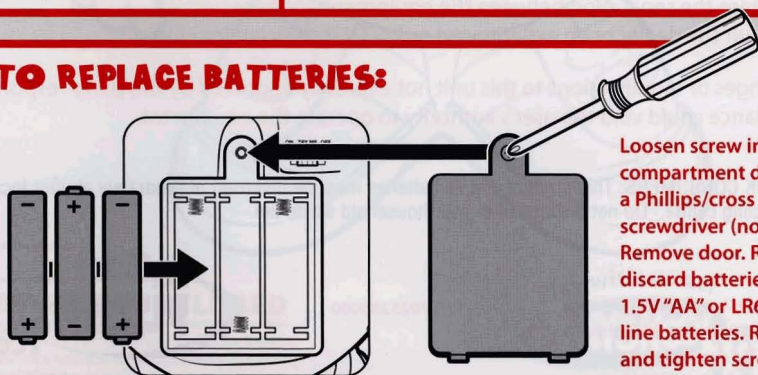

Loosen screw in battery compartment door with a Phillips/cross head screwdriver (not included). Remove door. Remove and discard batteries. Insert 3 x 1.5V "AA" or LR6 size Alkaline batteries. Replace door, and tighten screw.

IMPORTANT: BATTERY INFORMATION



CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision.

DO NOT RECHARGE OTHER TYPES OF BATTERIES.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



NOTE TO UK CONSUMERS: This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose of in your household waste bin.



Product and colors may vary.
© 2009 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks.
U.S. Pat. No. 6257948

P/N 7025280000

Visit
PLAYSKOOL
.com

Questions? Call 1-800-PLAYSKL