

TO PLAY



When you're finished playing, you can store the toy pieces in the back of the mountain.


NOTE: If door detaches, it can be snapped back into place.

Hang snorkel mask and skirt on the clothes rack, then place rack on the souvenir stand as shown.

When placing pony on the rainbow ride, position her magnetic foot on the heart that's on the cloud. Pull up the handles on the sides of the rainbow to give your pony a ride!

Touch pony's magnetic foot to the heart on the juice stand and watch the drinks disappear!

Place pony on the surfboard and spin thumbwheel for a fun ride!

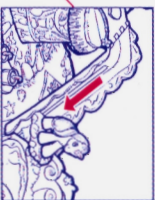

Place pony on the boogie board and pull down handle on side of waterfall for a ride down the waterfall!

To activate butterfly ride, turn knob on butterfly figure clockwise (OR spin antennas counter-clockwise), then press heart button.
NOTE: Wing clips can leave an impression if left on ponies overnight. To avoid this, remove ponies from clips after playing.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

© 2004 Hasbro. All Rights Reserved.
® denotes Reg. U.S. Pat. & TM Office.
PN 6458130000

HASBRO.COM
FOR NEW PRODUCTS AND OFFERS
Questions? Call: 1-800-327-8264

WARNING:

CHOKING HAZARD—Small parts.
Not for children under 3 years.


AGES 3+
60742

Adult assembly required.

my little
Pony™

Butterfly Island Adventure™


Thank you for purchasing this MY LITTLE PONY playset! For maximum play value, please read and follow instructions carefully.

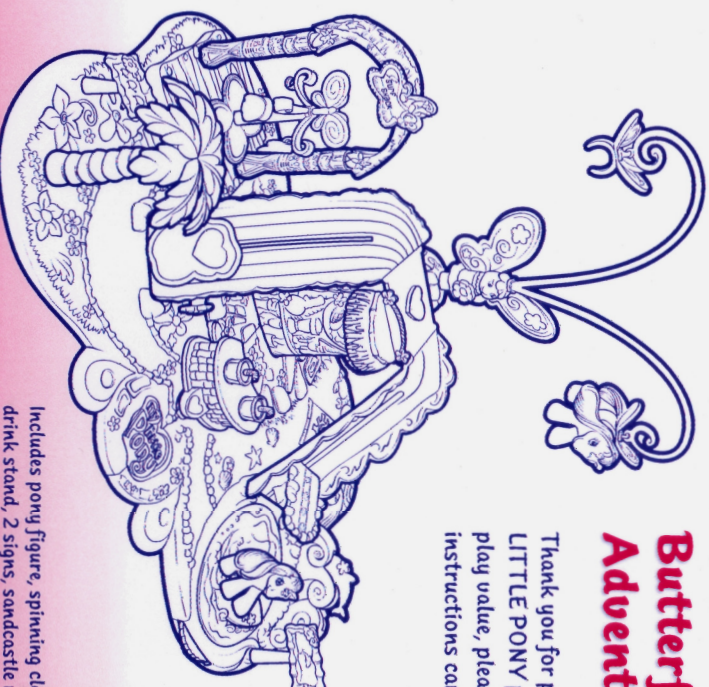

Includes pony figure, spinning clothes rack, palm tree, drink stand, 2 signs, sandcastle mold, sandcastle, shovel, sand pail, snorkel mask, 4 flippers, "grass" skirt and brush. Pony's foot contains magnet.

TO INSERT BATTERIES

Use a Phillips screwdriver (not included) to loosen screw in battery compartment door (screw remains attached to door). Remove door and insert 2 x 1.5V fresh "AA" or R6 size batteries. Alkaline batteries recommended. Replace door and tighten screw.

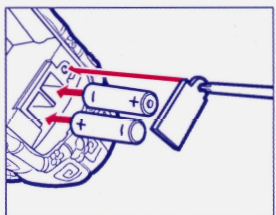

CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.

Batteries should be replaced by an adult.


CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and reinserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**


TO ASSEMBLE




First, snap two base pieces (A1, A2) together, and press logo piece (A3) into place.

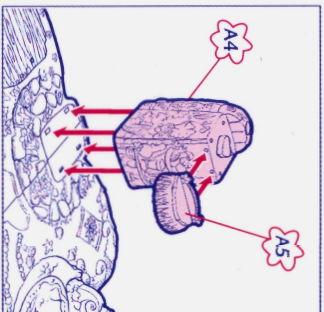


Snap mountain (A4) into place; press canopy (A5) onto mountain.

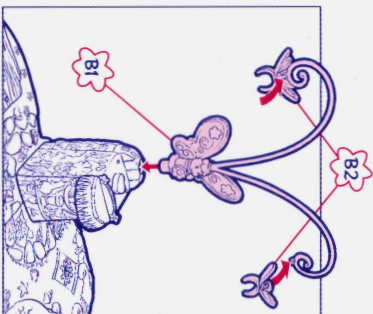


Next, set butterfly ride (B1) into place on top of mountain as shown. Hook wing clips (B2) onto antennas.

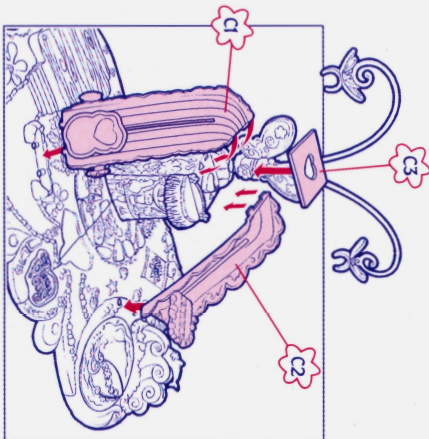

Place rainbow arch (C1) and waterfall (C2) into place as shown. Snap heart-shaped cutout (C3) over the heart-shaped button located on the top of mountain.

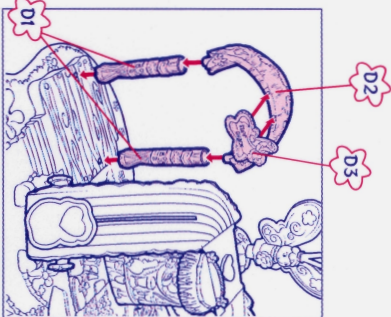

Assemble souvenir stand by pressing both poles (D1) into place; press sign (D3) onto cover, then press assembled stand onto platform.

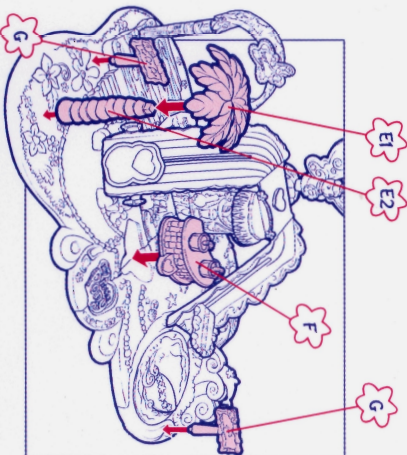

Press tree pieces (E1, E2) together, then press tree into place. Press drink stand (F) and signs (G) into place as shown. Use the enclosed stickers to decorate your Butterfly Island™ Adventure playset.