

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Product and colors may vary.

© 2007 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks.
64068
PN 6783270000

Visit

 
 
MyLittlePony.com

Questions? Call 1-800-327-8264

AGES 3+

my little
Pony®

RC Scootaloo on the Go!™

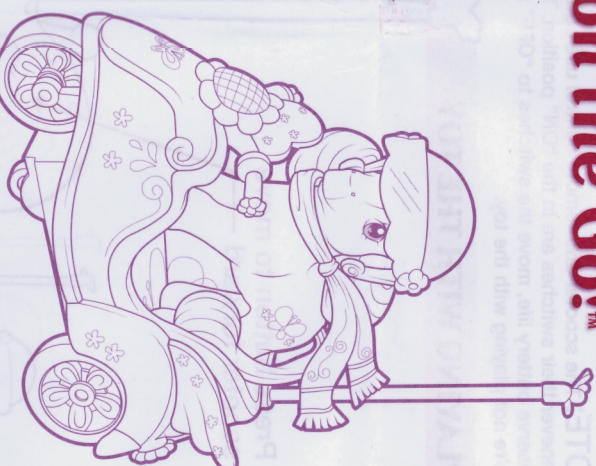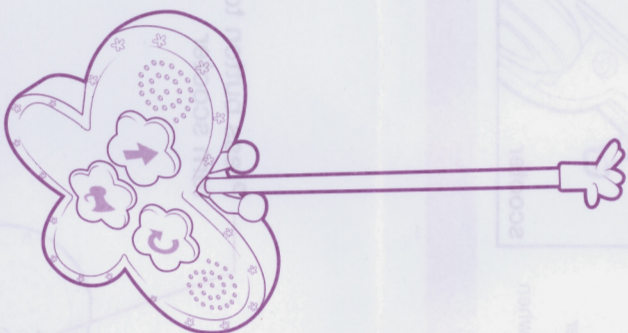

REMOTE CONTROL



BATTERIES INCLUDED

Replace with 2 x 1.5V "AA" or LR6 size alkaline batteries. Phillips/cross head screwdriver (not included) needed to replace batteries.

SCOOTER



ALKALINE BATTERIES NOT INCLUDED

1.5V AA or LR6 size
Phillips/cross head screwdriver (not included) needed to insert batteries.

Thank you for purchasing this
My Little Pony® product!

64068

GETTING STARTED

 
The remote control is packaged in "DEMO" mode. Activate its full range of features by moving the PLAY/OFF/ DEMO switch to the "PLAY" position. Switch is located on the back of the remote control. The scooter's ON/OFF switch is located on the bottom of the scooter. Turn the scooter on by moving the switch to the "ON" position.

TIP FOR PARENTS: To turn motor sounds OFF in PLAY mode, press & hold down horn button for 5 seconds until you hear a tone. Press and hold again for five seconds until you hear a tone to turn the sound back on.

NOTE: When the LED is on, the scooter is on. Turn the toy off when you're not playing with it.

NOTE: The scooter and remote control use battery power whenever their switches are in the "ON" position. To help conserve battery life, move the switches to "OFF" position when you're not playing with the toy.

PLAYING WITH THE TOY

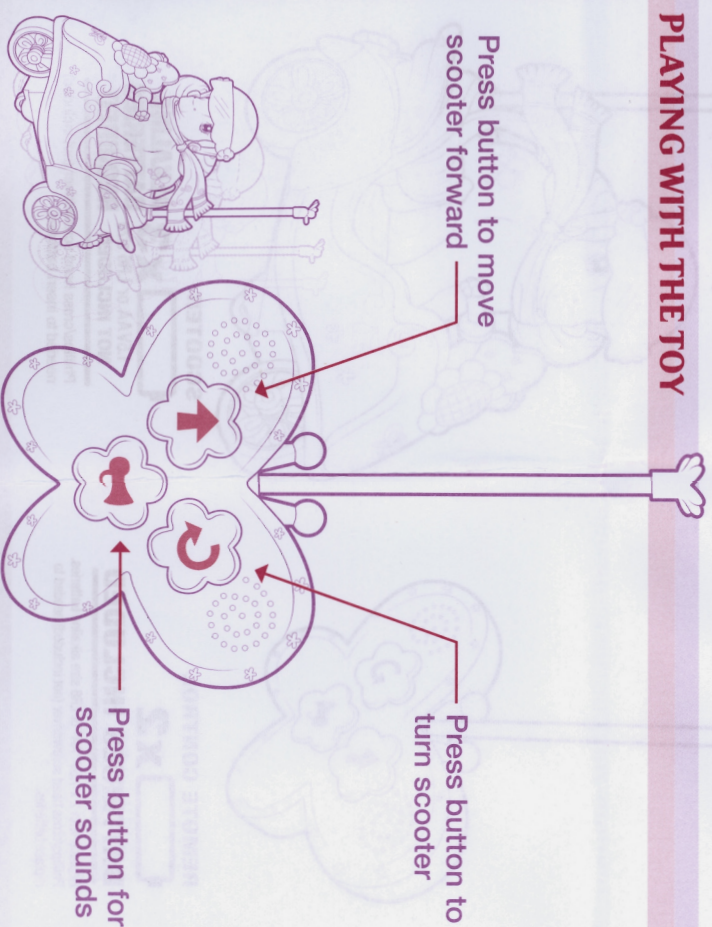

Press button to move scooter forward

Press button to turn scooter

Press button for scooter sounds

TROUBLESHOOTING

If your scooter does not respond, please switch OFF and back ON again or replace the batteries in the scooter and remote control.

TO REPLACE BATTERIES

TO REPLACE REMOTE CONTROL BATTERIES
Loosen screw in battery compartment cover (screw stays attached to cover). Insert 2 x 1.5V "AA" or LR6 size alkaline batteries (not included). Replace cover and tighten screw.

TO REPLACE SCOOTER BATTERIES

Loosen screw in battery compartment cover (screw stays attached to cover). Insert 3 x 1.5V "AA" or LR6 size alkaline batteries (not included). Replace cover and tighten screw.

CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old batteries and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.

Batteries should be replaced by an adult.

CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

