



**WARNING:**

CHOKING HAZARD - Small parts  
Not for children under 3 years.


**AGES 3+**  
61643 Asst.

**SHIMMER SHINE as the Flower Petal Princess™**  
**GRACEFUL GLIMMER as the Winter Crystal Princess™**

Thank you for purchasing this My Little Pony® toy! For maximum play value, please read and follow instructions carefully.



**GRACEFUL GLIMMER**  
Includes pony figure, dress, ring, barrette and brush. Pony's foot contains magnet.

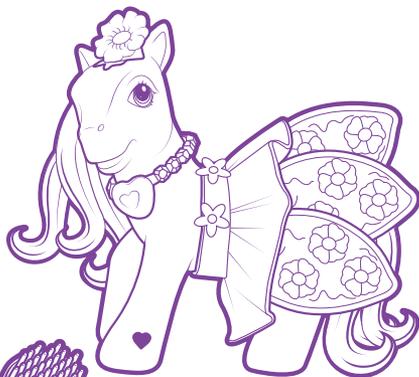

**SHIMMER SHINE**  
Includes pony figure, dress, necklace, barrette and brush. Pony's foot contains magnet.



**BATTERY INCLUDED**

Replace with 1 x 3.0V "CR2032" lithium battery. Phillips/cross head screwdriver (not included) needed to replace battery.

## TO PLAY


### SHIMMER SHINE

Press the center of the flower, pony lights up and dress glows!



### GRACEFUL GLIMMER

Press button on side of tiara and it begins to glow!

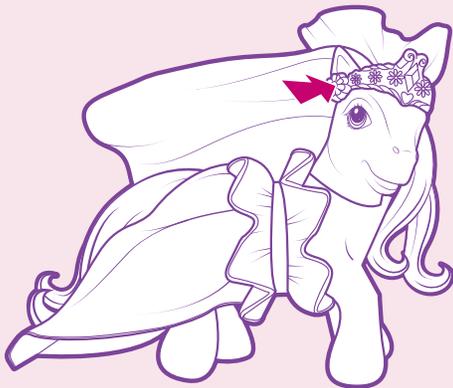

## TO REPLACE BATTERIES

Twist pony apart as shown to reveal battery compartment. Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment door (screw remains attached to door). Remove door and lift tab to remove old battery. Insert 1 x 3.0V "CR2032" lithium battery. Replace door and tighten screw.

Place two halves of figure back together and twist to lock in place.

### ⚠ CAUTION: TO AVOID BATTERY LEAKAGE

1. As with all small batteries, the battery used with this toy should be kept away from small children who still put things in their mouths. If it is swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect. In other countries, have the doctor call your local poison control center.
2. Make sure the battery is inserted correctly and always follow the toy and battery manufacturer's instructions.


### IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries should be replaced by an adult.


### ⚠ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.
8. As with all small items, these batteries should be kept away from children. If swallowed, seek medical attention immediately.

### SHIMMER SHINE

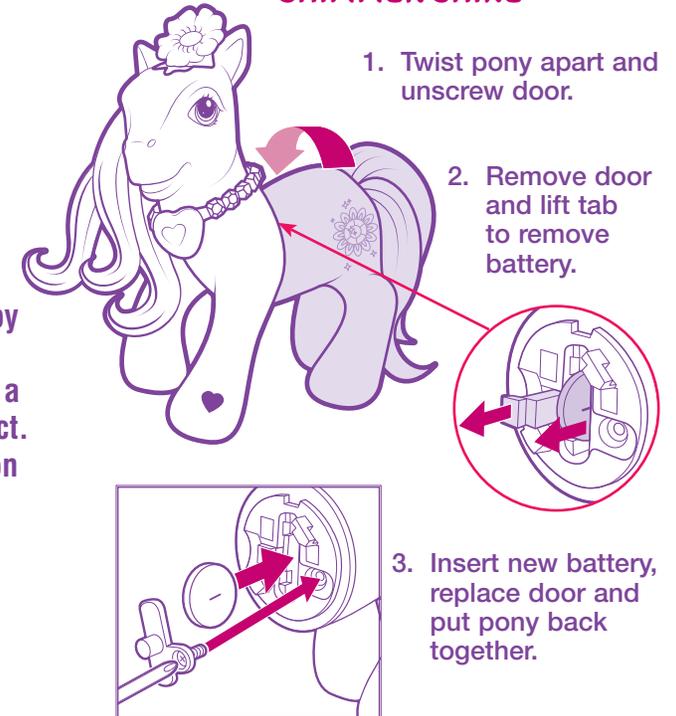

### GRACEFUL GLIMMER

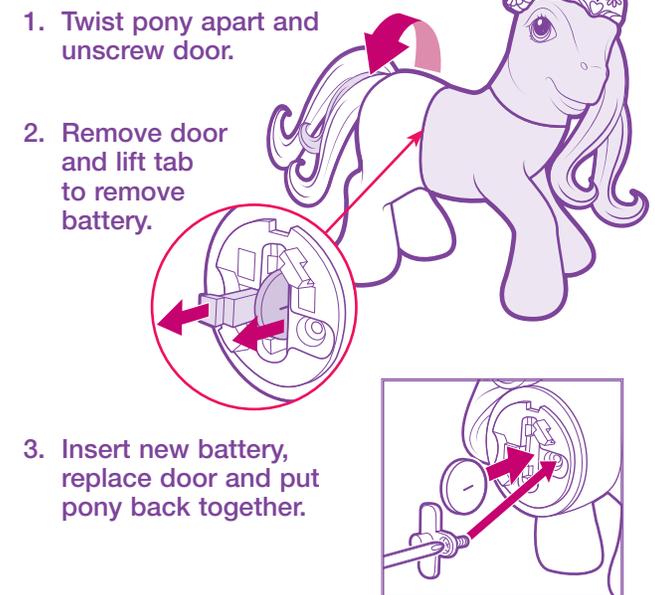

## FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.



**Not suitable for children under 3 years because of small parts — choking hazard.**