

AGES 3+



So Soft Crawling Pinkie Pie™

64788/64047 Asst.

So Soft Crawling Scootaloo™

64789/64047 Asst.

Thank you for
purchasing this
My Little Pony®
product!

Please read these
instructions
carefully to
ensure proper
care and use.

 x3

BATTERIES INCLUDED


Replace with 3 x 1.5V "AA" or LR6 size alkaline batteries.
Phillips/cross head screwdriver (not included) needed to
replace batteries.



GETTING STARTED

This product is packaged in “DEMO” mode. Activate its full range of features by moving the PLAY/OFF/ DEMO switch to the “PLAY” position. Switch is located on pony’s stomach (undo fabric fastener to access switch).

NOTE: This toy uses battery power whenever its switch is in the “PLAY” position. To help conserve battery life, move the switch to “OFF” position when you’re not playing with the toy.

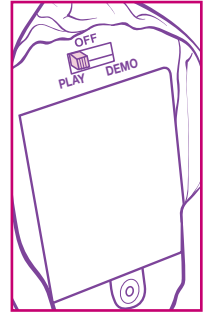

PLAYING WITH THE TOY

Press your pony’s back and she’ll say a phrase and start to crawl while wiggling her tail. Press her back again and she’ll say more random phrases and continue to crawl. After about 30 seconds of non-activation, she’ll say a phrase and go to sleep. Re-activate by pressing pony’s back again. Her head can be manually positioned.



TROUBLESHOOTING

If your pony does not respond or is acting erratically, (1) move the PLAY/OFF/DEMO switch to “OFF”, then back to “PLAY” and/or (2) replace the batteries.


CLEANING TIPS

- Clean the pony’s face and body by wiping gently with a soft, damp cloth.
- Do not submerge the pony in water; it is not intended for bath-time play.



TO REPLACE BATTERIES

Undo fabric fastener to access battery cover. Using a Phillips/cross head screwdriver (not included), loosen screw in battery compartment cover (screw stays attached to cover). Insert 3 x 1.5V “AA” or LR6 size alkaline batteries (not included). Replace cover and tighten screw. Re-attach fabric fastener.

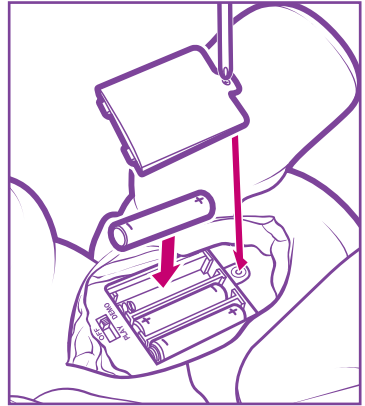

CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old batteries and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.
Batteries should be replaced by an adult.

CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and – polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reinsert batteries if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Product and colors may vary.

© 2007 Hasbro. All Rights Reserved.
TM & ® denote U.S Trademarks.
64788/64047 Asst. and 64789/64047 Asst.
PN 6780420000



Questions? Call 1-800-327-8264