

So Soft Rainbow Dash

Hang to dry after each use in water.

For best results, periodically wash your SO SOFT RAINBOW DASH™.

To Wash: Place in pillowcase and tie end closed. Machine wash separately, gentle cycle (cold water, mild detergent, no bleach). Tumble dry promptly in pillowcase, low-heat setting.

Product and colors may vary.

© 2009 Hasbro. All Rights Reserved. TM & ® denote U.S. Trademarks. 91638/916350000 Asst. PN 6957520000



Questions? Call 1-800-327-8264