

## IMPORTANT: BATTERY INFORMATION



### CAUTION:

1. TO AVOID BATTERY LEAKAGE
  - a. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
  - b. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
  - c. Remove exhausted or dead batteries from the product.
  - d. Remove batteries if product is not to be played with for a long time.
  - e. Do not short-circuit the supply terminals.
  - f. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**
2. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

Product and colors may vary.

Retain this information for future reference.  
 © 2011 Hasbro. All Rights Reserved. TM & ®  
 denote U.S. Trademarks.  
 US-Pats. Pend., BR, CN & EC Reg. Des. Apps.



35573

PN 7252740000

### FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FROM THE MAKERS OF



LOG ON & BLAST OFF!  
[WWW.KOOSH.COM](http://WWW.KOOSH.COM)

# KOOSH

## GALAXY

AGES 4

### CAUTION:

Do not aim at eyes or face.  
 TO AVOID INJURY: Use only balls designed for this product.  
 Do not modify balls or ball blaster.

 
**x3**  
 ALKALINE BATTERIES  
 REQUIRED. NOT INCLUDED

ADULT ASSEMBLY  
 REQUIRED. NO  
 TOOLS NEEDED.


NOTE: Not for  
 play in complete  
 darkness. Know  
 your surroundings  
 and clear the area  
 of obstructions  
 before use.



# SOLAR RECON™

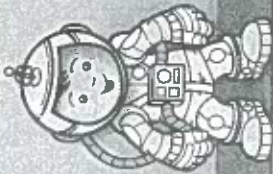

 **TO INSERT BATTERIES:**  
PHILLIPS/CROSS HEAD SCREWDRIVER (NOT INCLUDED) NEEDED TO INSERT BATTERIES. LOOSEN SCREW IN BATTERY COMPARTMENT COVER (SCREW REMAINS ATTACHED TO COVER). REMOVE COVER. INSERT 3 X 1.5V AA ALKALINE BATTERIES (NOT INCLUDED). REPLACE COVER AND TIGHTEN SCREW.

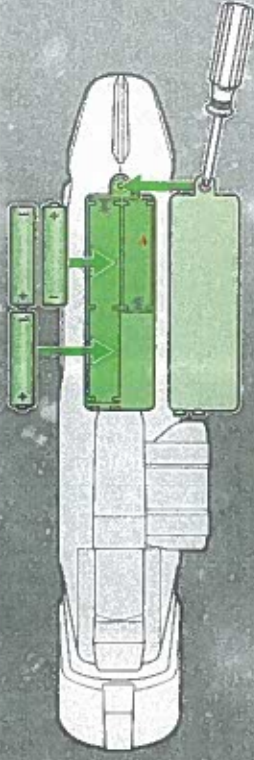


## 1 PUT IT TOGETHER!




SNAP
 
## 2 LOAD!

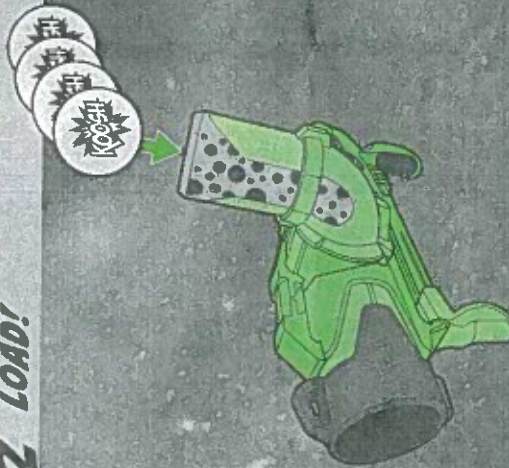


## 3 POWER UP!

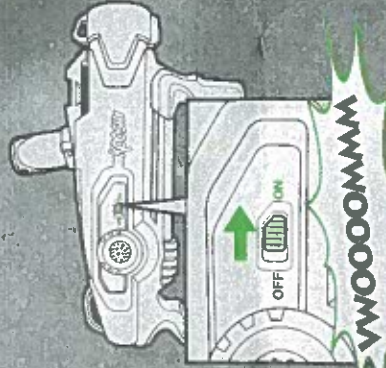 

BLAST CORE CHARGES FOAM BALLS ALMOST INSTANTLY!


TIP: STORE YOUR FOAM BALLS IN A WELL-LIT AREA TO MAX OUT GLOW-IN-THE-DARK POWER!

## 4 YOU'RE READY TO BLAST!

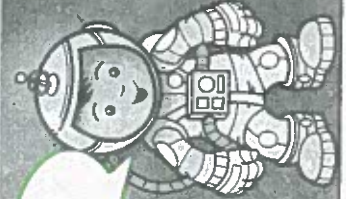 

FIRE!

 
ZAP!

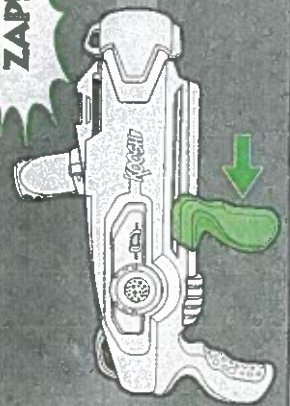

## 5 RELOAD!

SLIDE THE HANDLE ALL THE WAY FORWARD!

 MAKE SURE YOU HOLD THE BLASTER STRAIGHT WHEN RELOADING!

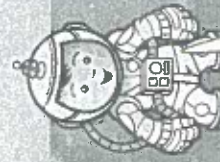

FIRE WHEN READY!

TIP: AFTER 20-30 SECONDS WITHOUT ACTION, YOUR BLASTER WILL POWER DOWN TO SAVE BATTERIES. JUST MOVE THE HANDLE TO POWER BACK UP.