




Do not aim at eyes or face. To Avoid Injury: Use only darts designed for this product. Do not modify darts or dart blasters.

AGES 6+



NITE FINDER EX-3°

Be sure to read and follow all instructions carefully before using this product.

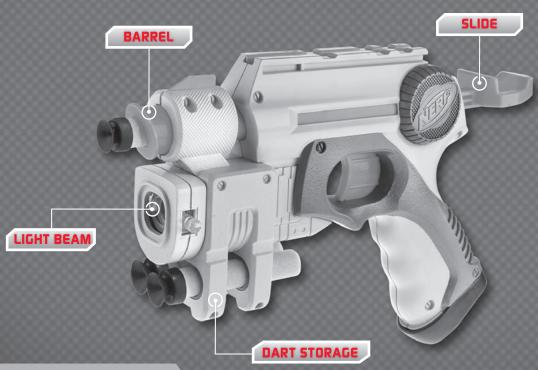




Alkaline batteries recommended. Phillips/cross head screwdriver (not included) needed to insert batteries.


NOTE: Accessories from other N-STRIKE blasters (sold separately) may work with the tactical rail.

INSERTING THE BATTERIES

- 1. Loosen screw in BATTERY DOOR.
- 2. Insert fresh 2 x 1.5V "AA" or R6 size batteries (not included). Alkaline batteries recommended.
- 3. Replace door and tighten screw.

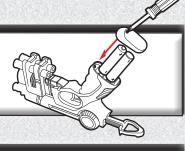

USING THE BLASTER

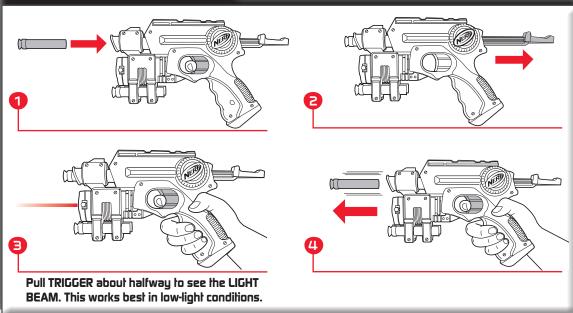

IMPORTANT: BATTERY INFORMATION

CAUTION:

- Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
- 2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- 3. Remove exhausted or dead batteries from the product.
- 4. Remove batteries if product is not to be played with for a long time.
- 5. Do not short-circuit the supply terminals.
- Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
- 7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.



