

AGES 6+


Thank you for purchasing the N-STRIKE VULCAN EBF-25 blaster. Be sure to read and follow all instructions carefully before using this product.



Phillips/cross head screwdriver (not included) needed to insert batteries.


CAUTION: Do not aim at eyes or face.

TO AVOID INJURY: Use only darts designed for this product. Do not modify darts or dart blaster.

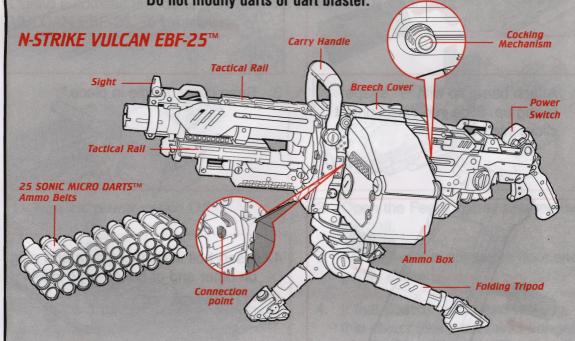


NOTE: Accessories from other N-STRIKE® blasters will work with the Tactical Rail!


To Assemble the N-STRIKE VULCAN EBF-25:

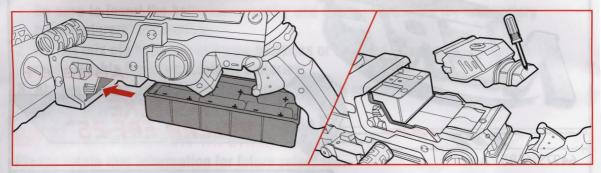


 Insert batteries using a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment door (screw remains attached to door). Remove door and insert 6 x 1.5V fresh "D" or LR20 alkaline batteries. Replace door and tighten screw.

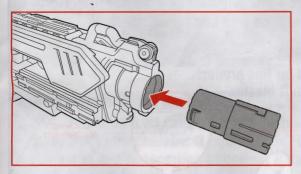


Attach barrel tip with "T" shape facing up. Slide into barrel until it clicks into place.*

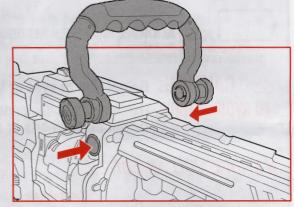


3. Snap carry handle in place.*

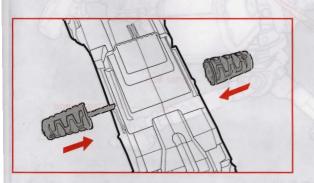


 Insert bolt into mechanism and plug on other end of bolt.*

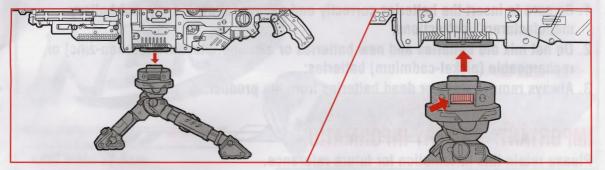


Snap the Collapsible Tripod onto the bottom of the unit so that the short leg
points towards the front of the blaster. Spread the legs and place the N-STRIKE
VULCAN EBF-25 on a flat, level surface. To remove the Tripod, squeeze the
release buttons on both sides.

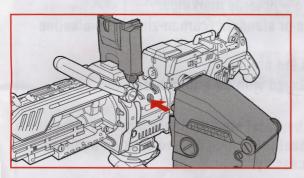


Attach the Ammo Box to the left side of the blaster so that the connection point is fully attached.

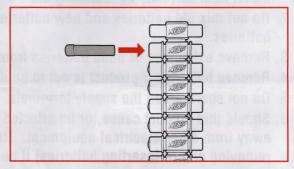


Insert 25 SONIC MICRO DARTS into the Ammo Belt.

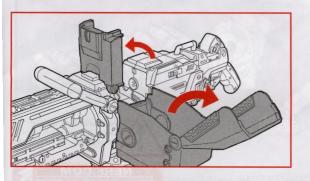


8. Flip open the Ammo Box and the Breech Cover on the blaster.

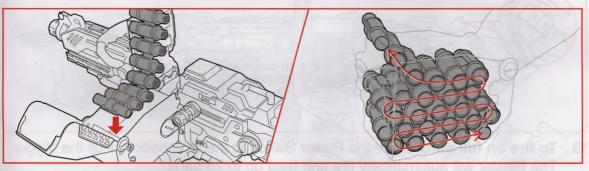


Be sure that the open ends of the dart holders on the Ammo Belt are pointed towards the front of the blaster.

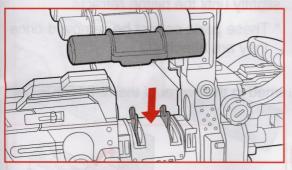


 Place the dummy cartridge at the end of the Ammo Belt into the groove on the feeding gear.

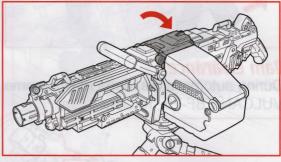


 Blaster will not fire if both lids are not securely closed.

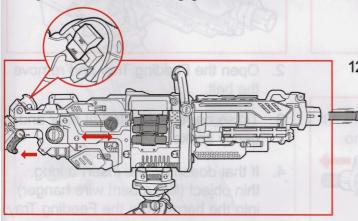

2. To fire a single shot: Leave the Power Switch in the off position. Slide the Cocking Mechanism back and forth once. This should feed the dummy cartridge out the right side of the Breech. Pull the Trigger to fire a single dart.

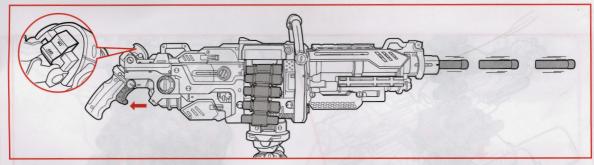

13. To fire on full auto: Move the Power Switch to the On position. Pull the trigger. The Blaster will automatically fire and feed up to 25 darts!

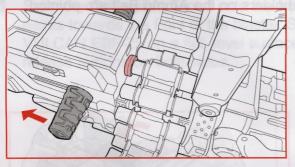


Note: After firing the blaster, if you notice the white piston sticking out behind where the belt sits on the gear (this will make it difficult to remove the belt), pull the Cocking Mechanism back slightly until the piston retracts.


* These parts cannot be removed once they are attached.


Jam clearance:

During automatic fire, darts may become jammed in the barrel of the N-STRIKE VULCAN EBF-25. To clear them:

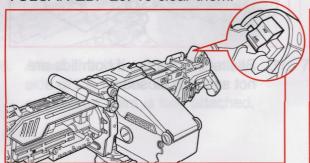

1. Turn the power switch Off.

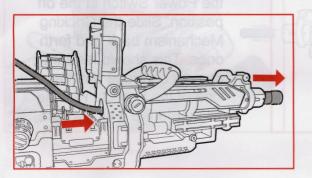

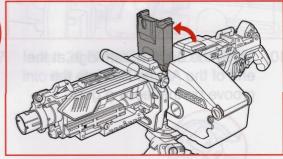

- 2. Open the Feeding Tray and remove the belt.
- Tilt so barrel is pointed at floor and gently shake.
- If that doesn't work, insert a long, thin object (like a bent wire hanger) into the barrel from the Feeding Tray. Push it forward until the jammed darts fall out of the front of the barrel.

CAUTION: TO AVOID BATTERY LEAKAGE

- 1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- 2. Do not mix old batteries and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- 3. Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries should be replaced by an adult.

△ CAUTION:

- 1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and polarity markings.
- 2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- 3. Remove exhausted or dead batteries from the product.
- 4. Remove batteries if product is not to be played with for a long time.
- 5. Do not short circuit the supply terminals.
- 6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
- 7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery.

 Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.



