



614960800 Nerf N-Strike Nite Finder EX-3 instruction over label.  
label Size: 6.2"w X 2.4"h Color : 2C (PMS 485C, Black C)

## **IMPORTANT: BATTERY INFORMATION**



### **CAUTION:**

- 1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and – polarity markings.**
- 2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.**
- 3. Remove exhausted or dead batteries from the product.**
- 4. Remove batteries if product is not to be played with for a long time.**
- 5. Do not short-circuit the supply terminals.**
- 6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.**
- 7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

P/N 6976520000

# NERF

AGES 6+

**N-STRIKE®  
NITE FINDER EX-3™**

 
61496

Thank you for purchasing the N-STRIKE NITE FINDER EX-3 blaster. Be sure to read and follow all instructions carefully before using this product.

**x2 BATTERIES REQUIRED**  
1.5V AA or R6 size  
**NOT INCLUDED**  
Alkaline batteries recommended. Phillips/cross head screwdriver (not included) needed to insert batteries.

**CAUTION:** Do not aim at eyes or face.  
**TO AVOID INJURY:** Use only darts designed for this product. Do not modify darts or dart blasters.

**N-STRIKE® NITE FINDER EX-3™ BLASTER WITH 3 MICRO DARTS™**

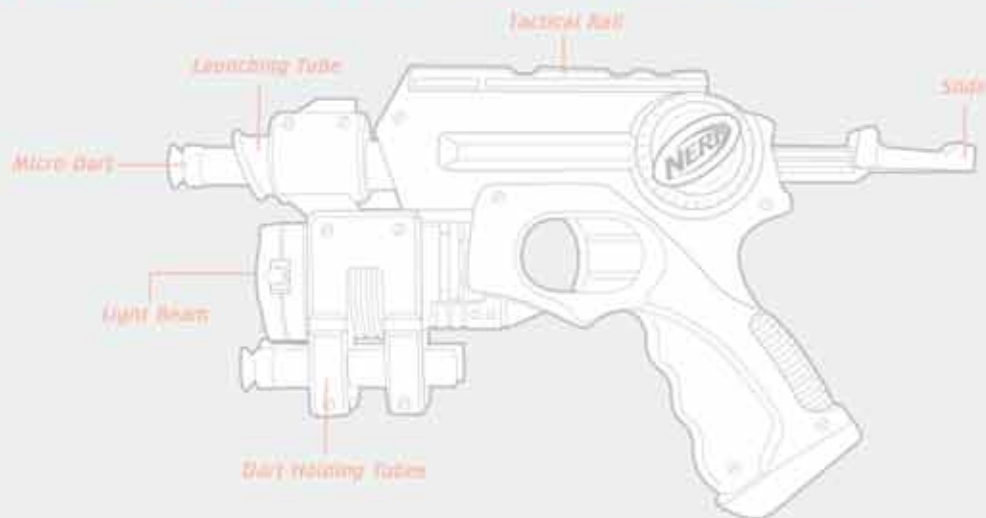




\*Compatible with Tactical Rail accessories from other N-STRIKE® blasters (sold separately).

### INSERTING THE BATTERIES:

   Screw will remain attached to door. Insert 2 fresh "AA" or R6 size batteries. Alkaline batteries recommended. Replace door. Be sure to fully tighten the screw.



### Using the Blaster:

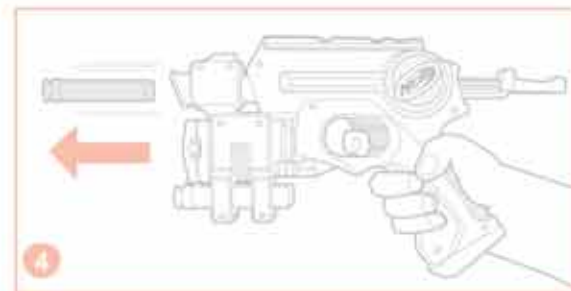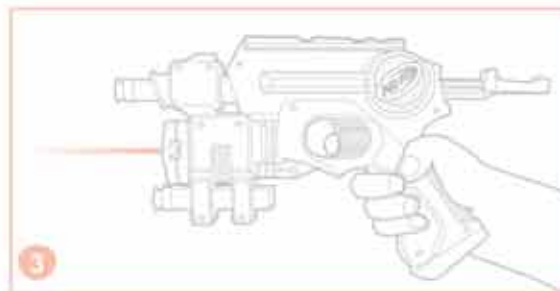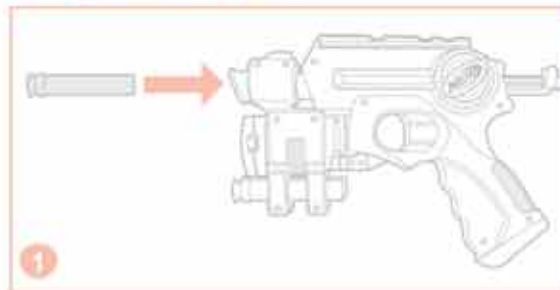

Pull trigger about halfway to see the light beam. This works best in low-light conditions.

### IMPORTANT: BATTERY INFORMATION

#### CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**



© 2006 Hasbro. All Rights Reserved.  
TM & ® denote U.S. Trademarks.  
U.S. Pat. No. 5829050  
61496 P/N 6829750000

**NERF.COM**  
FOR NEW PRODUCTS AND OFFERS  
Questions? Call: 1-800-327-8264