

IMPORTANT: BATTERY INFORMATION

⚠ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

NERF®

⚠ CAUTION:
Do not aim at eyes or face.
TO AVOID INJURY: Use only
clean tap water.

Water resistant. Do not submerge.

AGES 6+

BATTERY COVER



TRIGGER

Super Soaker®

ELECTROSTORM™

x4 1.5V AA LR6 size
ALKALINE BATTERIES
REQUIRED
NOT INCLUDED

Phillips/cross head
screwdriver (not included)
needed to insert batteries.

Product and colors may vary.

YouTube and the YouTube logo are
trademarks of Google Inc.
© 2011 Larami Ltd.
®* and/or TM* & © 2011 Hasbro.
All Rights Reserved.
TM & © denote U.S. Trademarks.
U.S., EM, BR & CN Pat. Pending



33693 PN 7215560000

Hey NERF Nation!

Join us online and keep up with the
latest and greatest news from NERF!




NERF.COM




Ask a parent before going online.

Questions? Call 1-800-327-8264


TO INSERT BATTERIES

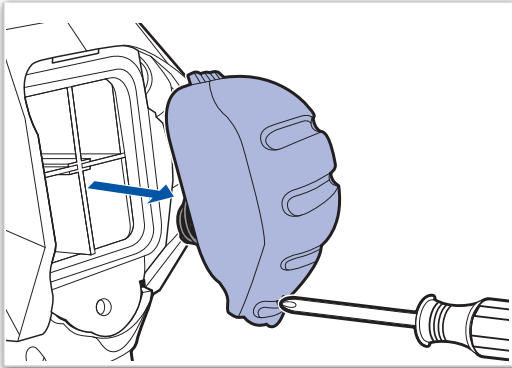

- 1 Use a Phillips/cross head screwdriver (not included) to loosen the screw in the battery compartment door.

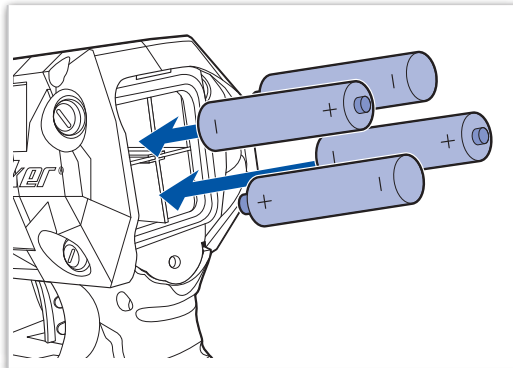


- 2 Insert batteries as shown.

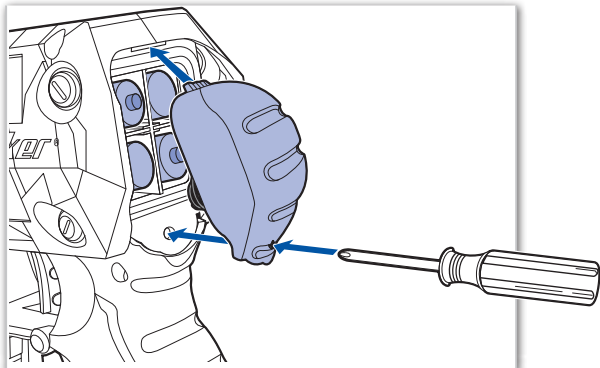


- 3 Replace door and tighten screw.


TO PLAY

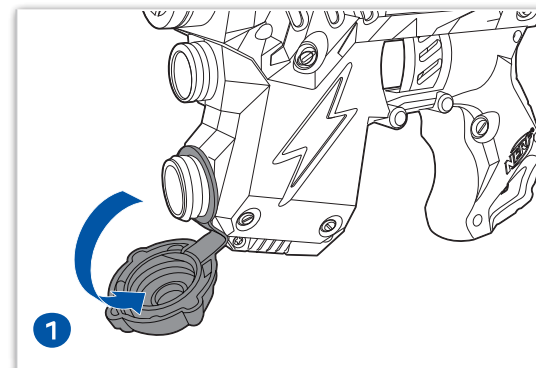


1

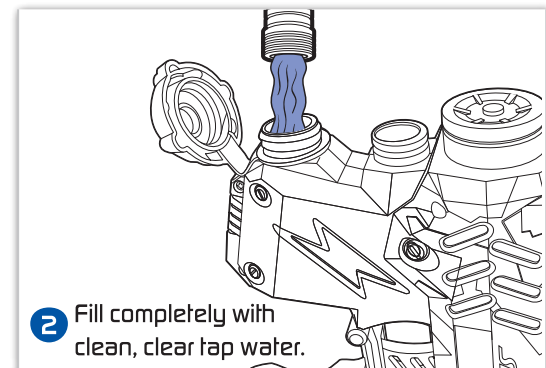

- 2 Fill completely with clean, clear tap water.

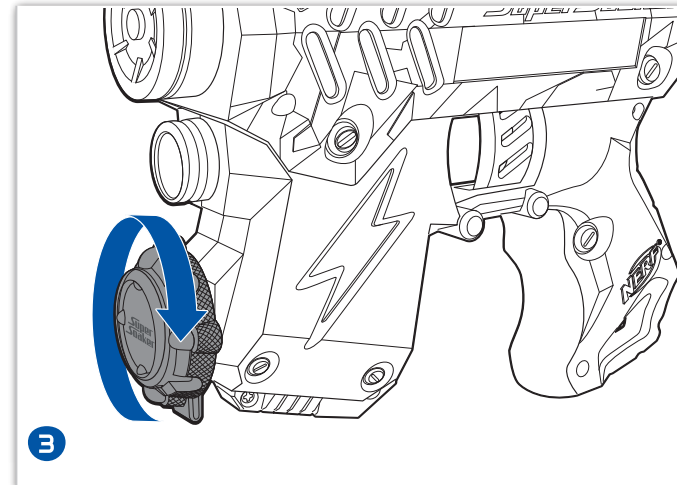

3

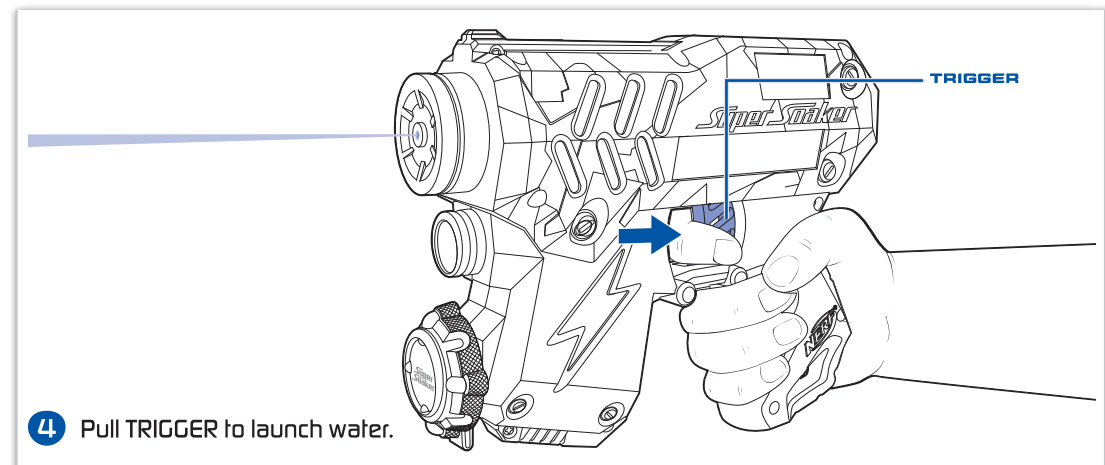

- 4 Pull TRIGGER to launch water.

CAPACITY 2,6 FL. OZ. (10,07 L)

DISTANCE 25 FT. (7,6 M)