

NERF

AGES 8+

VORTEX

PROTON



CAUTION:

Do not aim at eyes or face. TO AVOID INJURY: Use only discs designed for this product. Do not modify discs or disc blaster.

DISC EJECT
BUTTON

SNAP-LOAD
SLIDE



SLIDE
RETURN LEVER

Be sure to read and follow all instructions carefully before using this product.

Hey NERF Nation!

Join us online and keep up with the latest and greatest news from NERF!



Ask a parent before going online.

Questions? Call 1-800-327-8264

Product and colors may vary.

32214
PN 7150830000



YouTube and the YouTube logo are trademarks of Google Inc. ®* and/or TM* & © 2010 Hasbro. All Rights Reserved. TM & ® denote U.S. Trademarks. Patents pending.

LOADING AND FIRING

SNAP-LOAD
SLIDE




- (1) Pull the SNAP-LOAD SLIDE out until it locks into position.

NOTE:



Make sure the NERF® logo is facing up. Do not load DISC upside down.

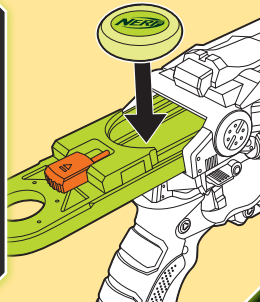

- (2) Load 1 DISC into the SNAP-LOAD SLIDE. Do not load DISC upside down.

SLIDE
RETURN
LEVER

- (3) Press the SLIDE RETURN LEVER to retract the SNAP-LOAD SLIDE.

TRIGGER

- (4) Pull TRIGGER to fire.

CLEARING A JAM

If the blaster is loaded but will not fire, it may be jammed.

DISC EJECT
BUTTON

- (1) Press and hold the DISC EJECT BUTTON.

- (2) Point the blaster at the ground. The jammed DISC will fall out.