



TO REMOVE 40-DISC DRUM

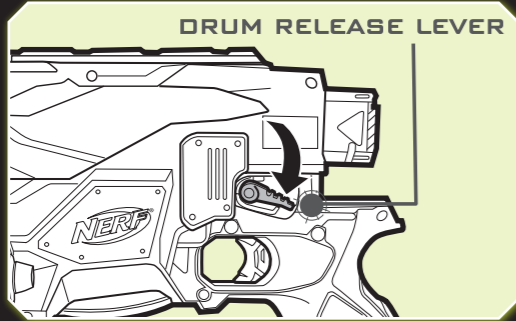


Push down the DRUM RELEASE LEVER and pull out the 40-DISC DRUM. Repeat loading steps above to reload.

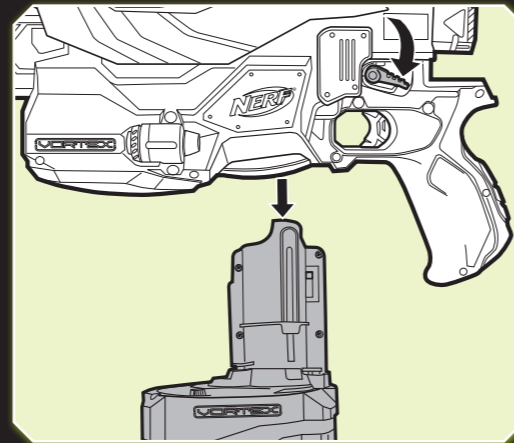


CLEARING A JAM

If the blaster is loaded but will not fire, it may be jammed.

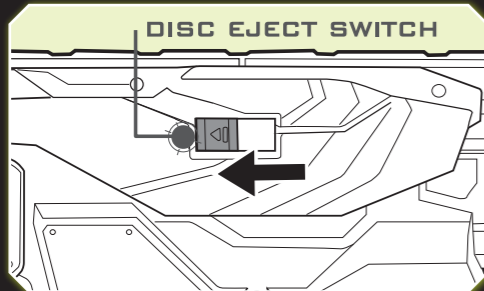

- 1 Remove the 40-DISC DRUM following the loading instructions.
- 2 Press and hold the DISC EJECT SWITCH backward.

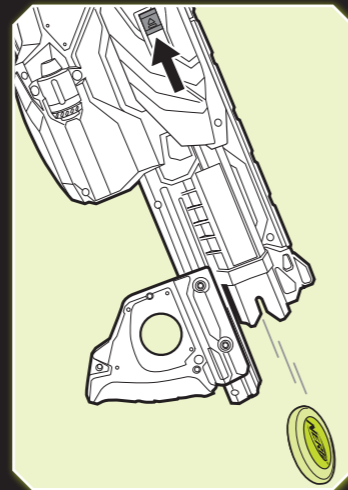

- 3 Point the blaster at the ground. The jammed disc will fall out.

NERF

AGES 8+

VORTEX

PYRAGON™

CAUTION:
Do not aim at eyes or face. TO AVOID INJURY: Use only discs designed for this product. Do not modify discs or disc blaster.



Be sure to read and follow all instructions carefully before using this product.

Hey NERF Nation!

Join us online and keep up with the latest and greatest news from NERF!



Ask a parent before going online.

Questions? Call 1-800-327-8264

Product and colors may vary.


A0092
PN 7278330000




YouTube and the YouTube logo are trademarks of Google Inc.

®* and/or TM* & © 2012 Hasbro. All Rights Reserved. TM & © denote U.S. Trademarks. U.S. Pat. Pend., BR, CN & EC Reg. Des. Apps.


LOADING

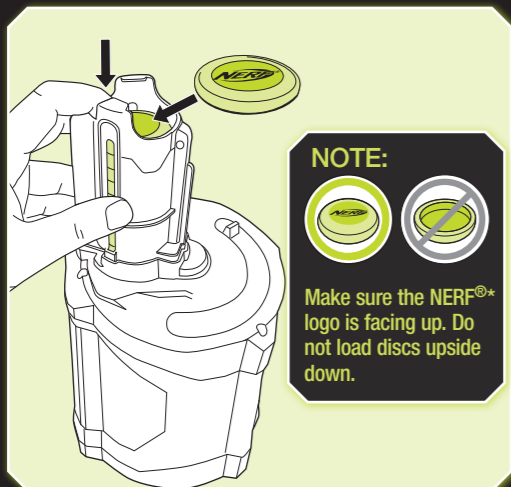


1 One at a time, load DISCS into the 40-DISC DRUM until no more will fit. Do not load DISCS upside down.

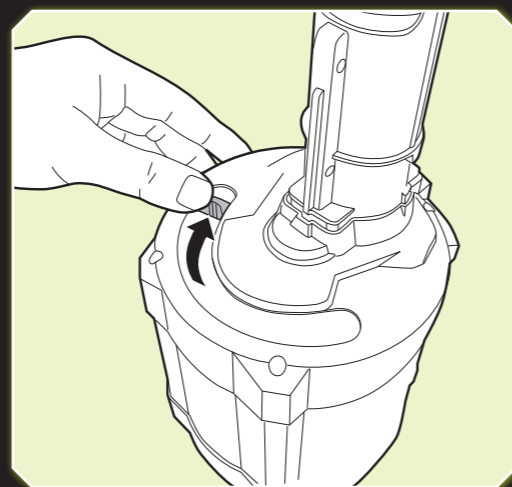

2 Push the CARTRIDGE ADVANCE LEVER all the way clockwise, then release.

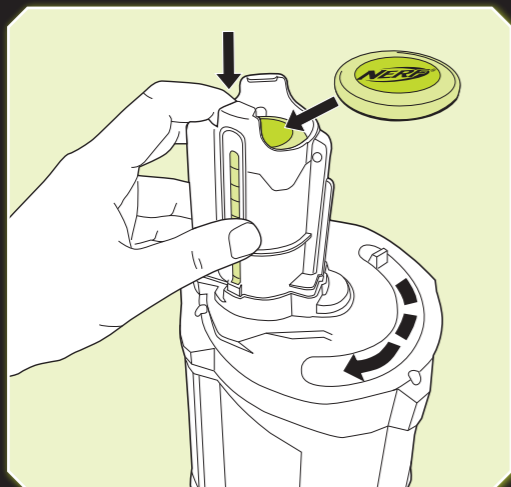


3 Repeat steps 1 and 2 until the CARTRIDGE ADVANCE LEVER no longer moves.

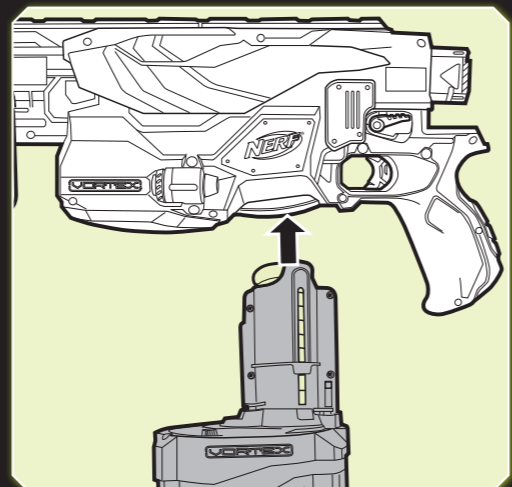


4 The 40-DISC DRUM should slide easily into place. It only fits in one direction. Do not force it.

FIRING


Single-Fire Mode:

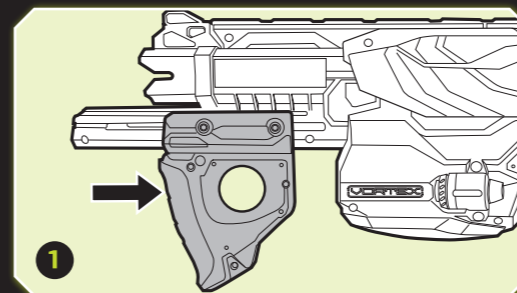

1

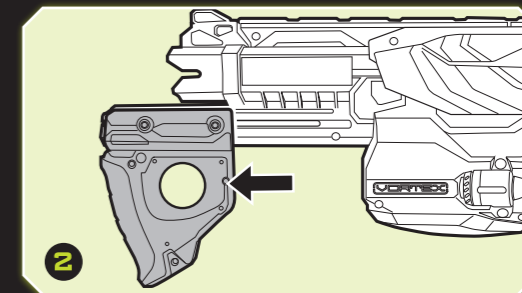


2

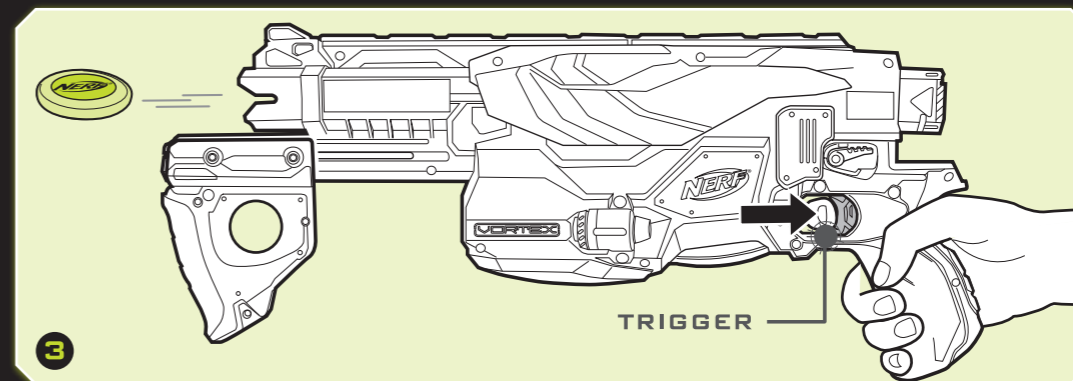

3

SLAM FIRE® Mode:

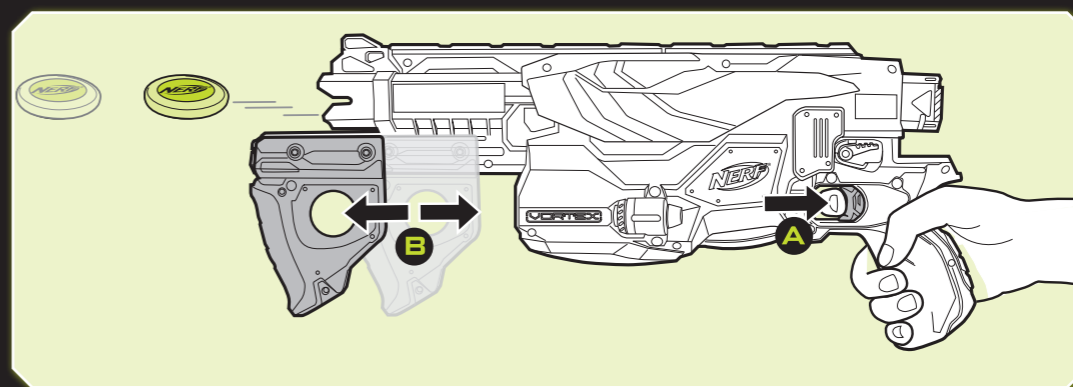

Hold TRIGGER down (A) and rapidly slide SLAM FIRE® HANDLE back and forward repeatedly (B).

NOTE: Be sure to slide SLAM FIRE® HANDLE all the way back and all the way forward to prevent damaging DISCS.