


AGES
3+
24375

Mega Fun Factory™

CONTENTS:

MEGA FUN FACTORY™ playset, 2 stamper wheels, playmat and 6 two-ounce cans of PLAY-DOH® Brand Modeling Compound (Net wt. 12 oz, 340 g).

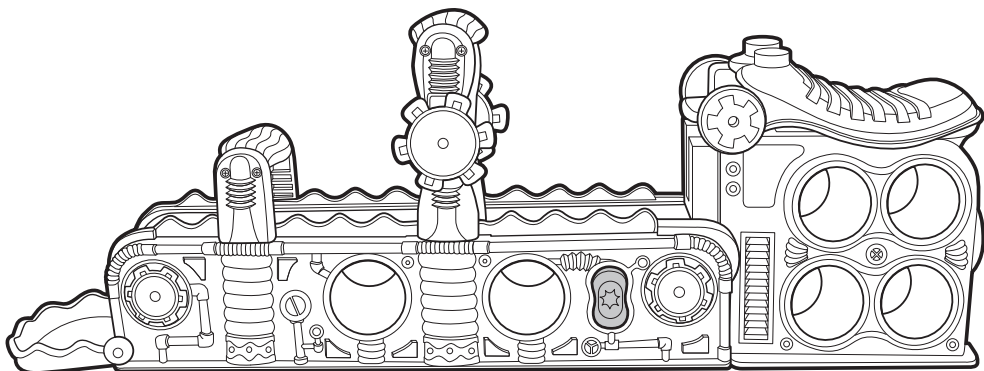


x2

1.5V C or LR14 size
NOT INCLUDED

ALKALINE BATTERIES REQUIRED


Phillips/cross head screwdriver (not included) needed to insert batteries.

Note: If the two pieces detach, just snap them back together.

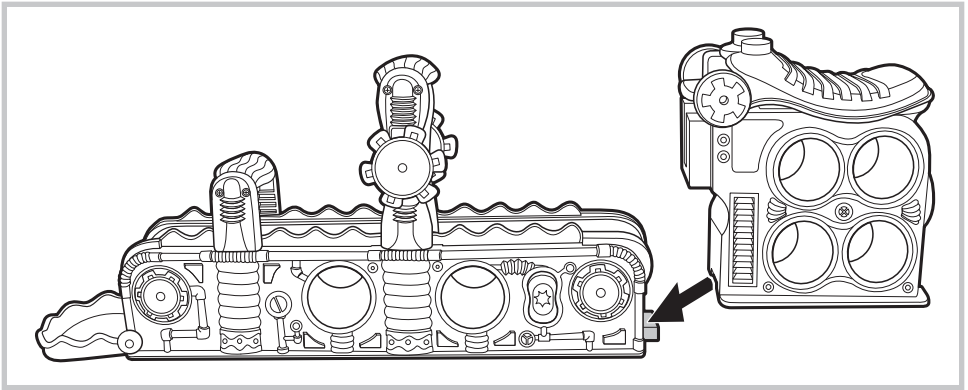

PLAYING WITH YOUR Mega Fun Factory™


1.

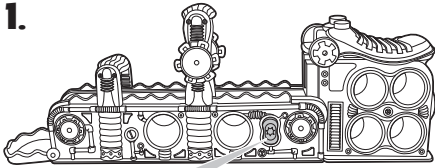

Press to turn on and off.


2.

Load compound.

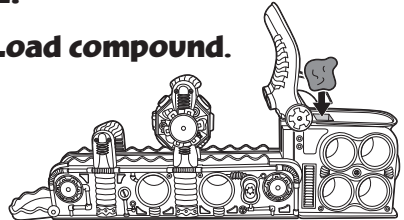


3.

Press down handle.

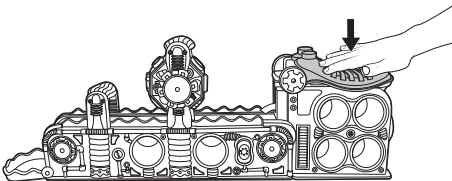


4.

Press down chopper to cut compound.

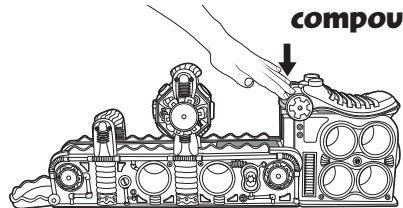


5.

**Turn dial then
press stamp.**


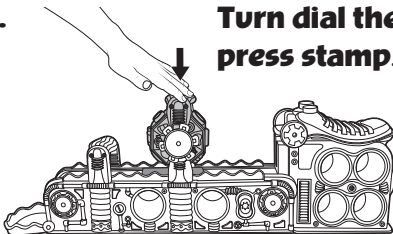


6.

Press to chop.

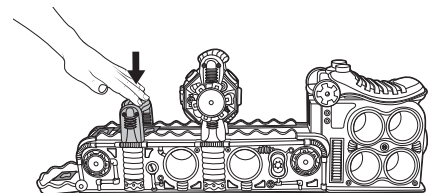


You can swap out the “toy” and “candy” wheels for more stamping fun .

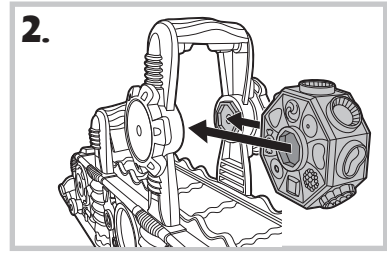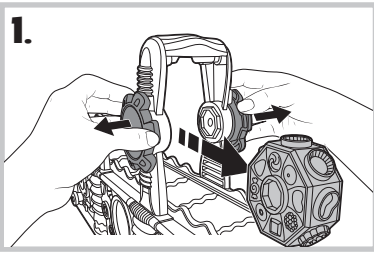


CLEANING UP:

Turn off the toy. Remove chopper and handle from the FUN FACTORY extruder, to easily clean out any remaining PLAY-DOH compound.

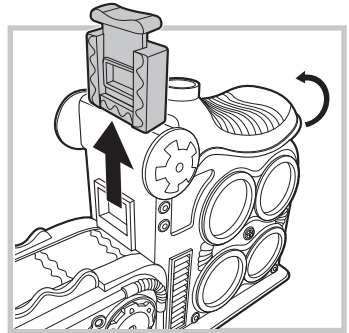

TO INSTALL BATTERIES:

Use a Philips/cross head screwdriver (not included) to loosen screw in battery compartment cover (screw remains attached to door). Insert 2 x 1.5V “C” or LR14 size alkaline batteries. Replace cover and tighten screw.

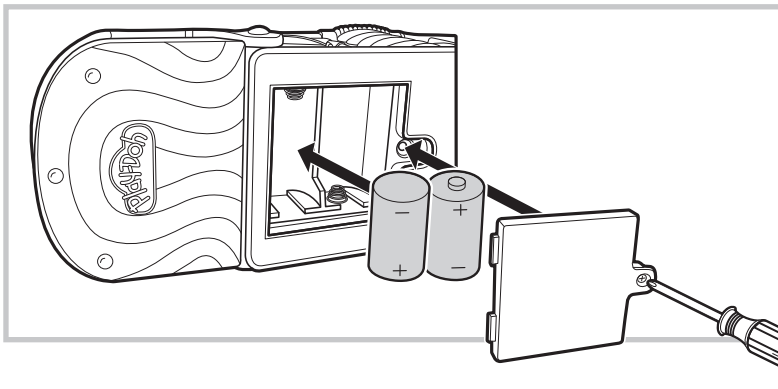

IMPORTANT: BATTERY INFORMATION



CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.



2-4 players • Ages 4+
Sold Separately

**A new way
to play with
PLAY-DOH!**

**Toy Time Race
GAME**

Mold your game piece!
Squish your opponents!
Race to win!

Look for it in the games aisle!

PLAY-DOH and the PLAY-DOH logo are trademarks identifying quality modeling compound products produced exclusively by Hasbro, Inc.



© 2010 Hasbro. All Rights Reserved.

TM & ® denote U.S. Trademarks.

U.S. Patent No. 6713624.

P/N 7057440000

**NOTICE TO PARENTS: CONTAINS WHEAT.
NONTOXIC. CONFORMS TO ASTM D-4236.**