


STOVE
ASSEMBLY:

PARTS REQUIRED
FOR THIS STEP:
- STOVE PIECES (6)

1. Lay back panel flat on floor.
2. Press side panels into grooves on back panel.
3. Press grooves on front panel onto side panels.
4. Set upright, and place shelf inside stove.
5. Place top on stove and push down firmly.

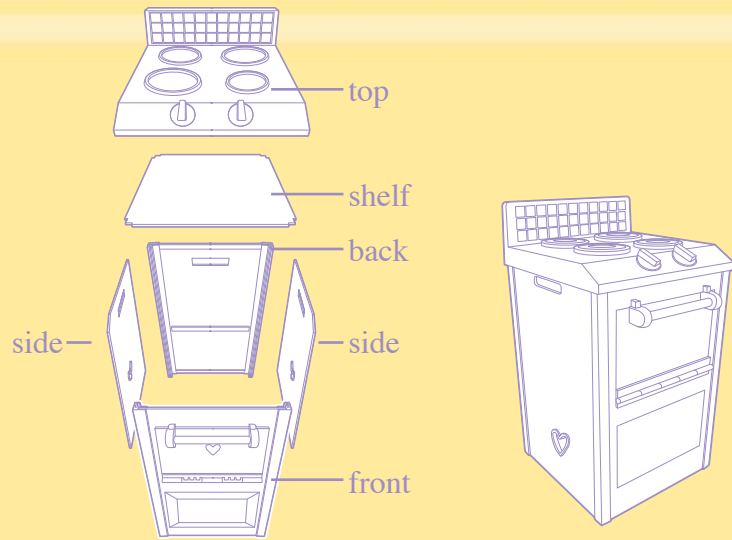

Quick, simple storage!



STORAGE

PN 6686270000



© 2007 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks.
© 2007 Worlds Apart Ltd. All rights Reserved.



PLAYSKOOL
Rose Petal COTTAGE
A PART OF THE DREAM TOWN™ COLLECTION

AGES 3+

THANKS FOR PURCHASING THE ROSE PETAL COTTAGE. PLEASE READ AND RETAIN THESE INSTRUCTIONS.

68601

Adult assembly required.

⚠ WARNING:
KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THE ROSE PETAL COTTAGE FABRIC.

This Cottage meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the Cottage fabric may render the flame resistant properties ineffective.


Stove front and Cottage door contain magnets.





INCLUDES:

2x Fabric Cottage Covers

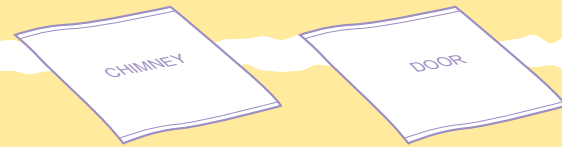

30x Connectors

4 x front corner connectors (red)



4 x back corner connectors (red)



4 x roof peak connectors (white)



8 x top corner connectors (blue)

 


10 x straight connectors (white)




19x White Frame Tubes


4 x #1



5 x #2

 


2 x #6

 

4 x #7



 4 x #8



19x Pink Frame Tubes

9 x #1



1 x #2



1 x #3



4 x #4



4 x #5



6x Stove Pieces



7. Holding the roof peak in place, slide one side of the cover over the front of the frame.



8. Holding the peak in place, move to the other side of the frame. Slide that side of the cover over the frame.

Do not pull the cover all the way onto the frame at this time.

9. Work your way around the frame, sliding each corner of the cover on evenly.

Ensure that the red connectors slide in between zipper halves along the red seams.



12. Zip up rear wall.

13. Zip up door.

14. Adjust window hook-and-loop fastener attachments.


15. Be sure to align the fasteners for window.



DOOR SIDE COTTAGE COVER:

PARTS REQUIRED FOR THIS STEP:

- COMPLETED PINK FRAME

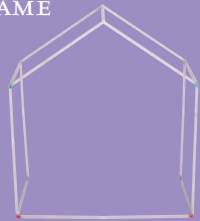

- DOOR COTTAGE COVER



ASSEMBLED



OUTSIDE VIEW



INSIDE VIEW

DOOR SIDE COTTAGE COVER:

1. Assemble pink frame as shown on page 2.
2. Remove the Cottage cover from the bag marked "Door."
3. Completely unzip the 2 zippers at the rear wall and door frame. Separate door frame zipper into 2 halves. Detach the fabric fastener around the window.
4. Lay the Cottage cover out with the printed side down. Pull the exterior rear wall away from the rest of the cover until it is flat on the floor.
5. Set the frame on the cover as shown, so that the two red connector pieces on the open side sit on top of the red seams. **Bottom sides of frame should overlap about 2 inches of the red seams.**
6. Lifting from the peak of the roof, bring the main part of the cover up onto the peak of the frame.



Note: Place frame exactly as shown.

10. Pull the cover all the way on, so that the frame is tucked inside the zipper pocket.
11. Starting with the two straps nearest the peak of the roof, attach fabric tabs around frame tubes.




FRAMES ASSEMBLY:

PARTS REQUIRED FOR THIS STEP:

- ALL CONNECTORS
- ALL FRAME TUBES

IMPORTANT NOTE:


MAKE SURE CONNECTORS ARE PUSHED INTO THE TUBES AS FAR AS THEY WILL GO.

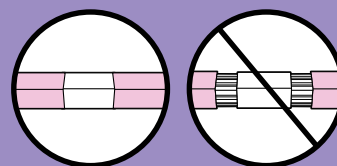


For video assembly instructions, please visit www.playskool.com/rosepetalcottage.

Assemble frames **FIRST!**

1. Assemble frames as shown.

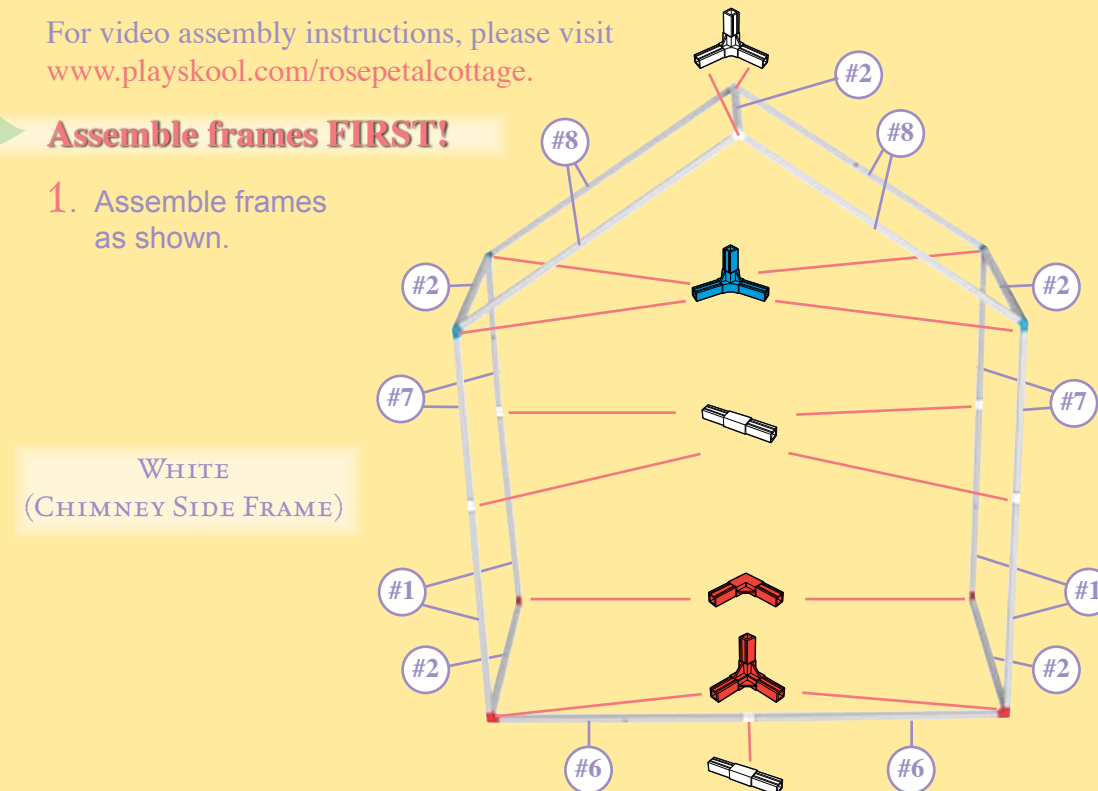

WHITE
(CHIMNEY SIDE FRAME)

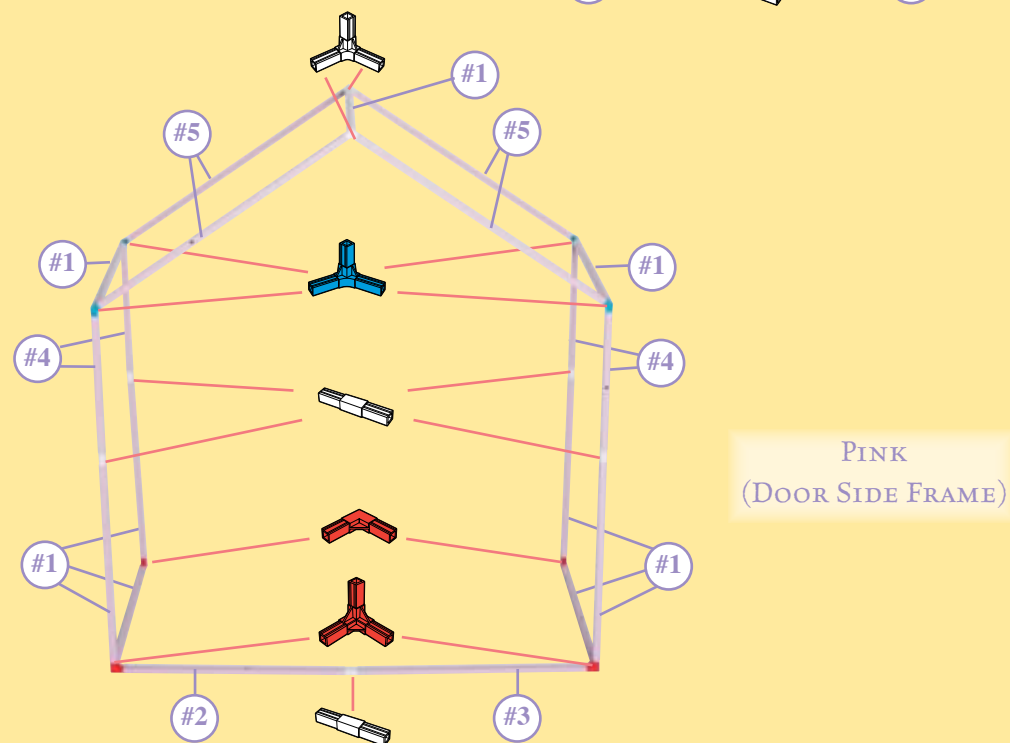


PINK
(DOOR SIDE FRAME)



CHIMNEY SIDE COTTAGE COVER:

PARTS REQUIRED FOR THIS STEP:

- COMPLETED WHITE FRAME

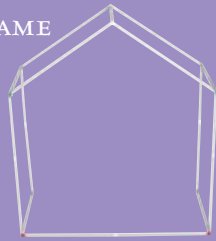

- CHIMNEY COTTAGE COVER



ASSEMBLED



OUTSIDE VIEW



INSIDE VIEW

CHIMNEY SIDE COTTAGE COVER:

1. Assemble white frame as shown on page 2.
2. Remove the Cottage cover from the bag marked "Chimney."
3. Completely unzip the rear wall from the body of the Cottage, and detach the fabric fasteners around the two windows and chimney.
4. Lay the Cottage cover out with the printed side down. Pull the exterior rear wall away from the rest of the cover until it is flat on the floor.



5. Set the frame on the cover as shown, so that the two red connector pieces on the open side sit on top of the red seams. **Bottom sides of frame should overlap about 2 inches of the red seams.**



Note: Place frame exactly as shown.

6. Lifting from the peak of the roof/ chimney, bring the main part of the cover up onto the peak of the frame. **Do not pull the cover all the way onto the frame at this time.**
7. Holding the roof peak in place, slide one side of the cover over the front of the frame.
8. Holding the peak in place, move to the other side of the frame. Slide that side of the cover over the frame.



9. Work your way around the frame, sliding each corner of the cover on evenly. **Ensure that the red connectors are sliding in along the red seams.**



10. Pull the cover all the way on, so that the frame is tucked inside the zipper.



11. Starting with the two straps nearest the peak of the roof, attach fabric tabs around frame tubes.



12. Zip up rear wall.
13. Adjust chimney and window hook-and-loop fastener attachments.
14. Be sure to align the fasteners for chimney and window.

