


ages &
stages®

3+
years

Thank you for choosing this
PLAYSKOOL toy!

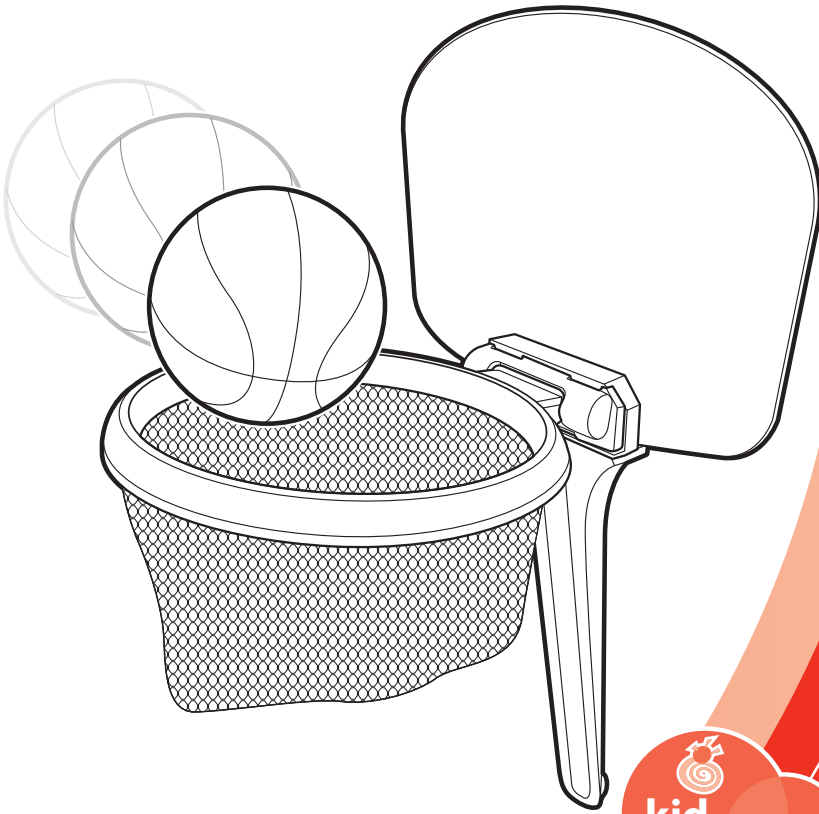

Adult assembly required.

Phillips/cross head
screwdriver (not included)
needed for assembly.


kid
motion™

easy dunk
basketball™

PLAYSKOOL



believe in PLAY!™

05332

assembly instructions


1

Snap hoop (A)
onto clamp (B) on
front plate.

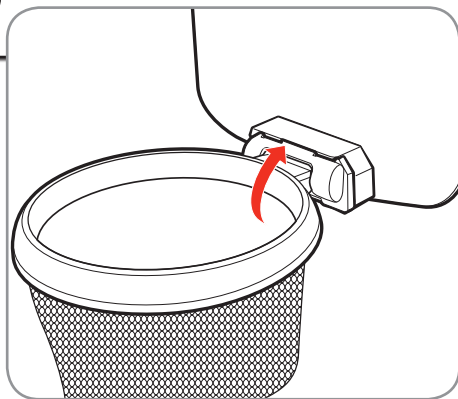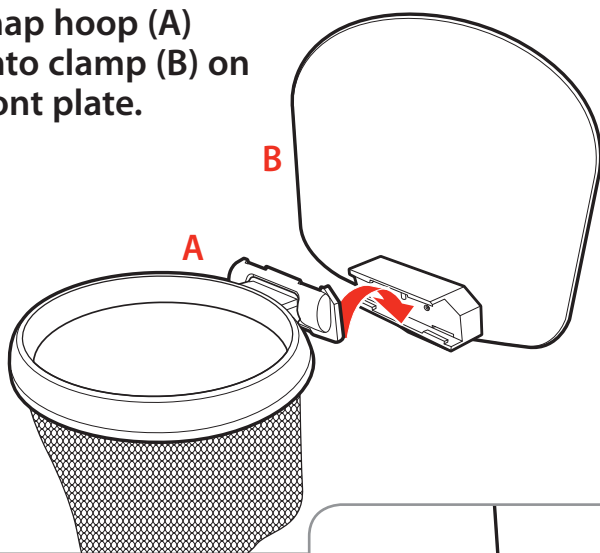


2

Snap stabilizer (D) up into back plate (C).

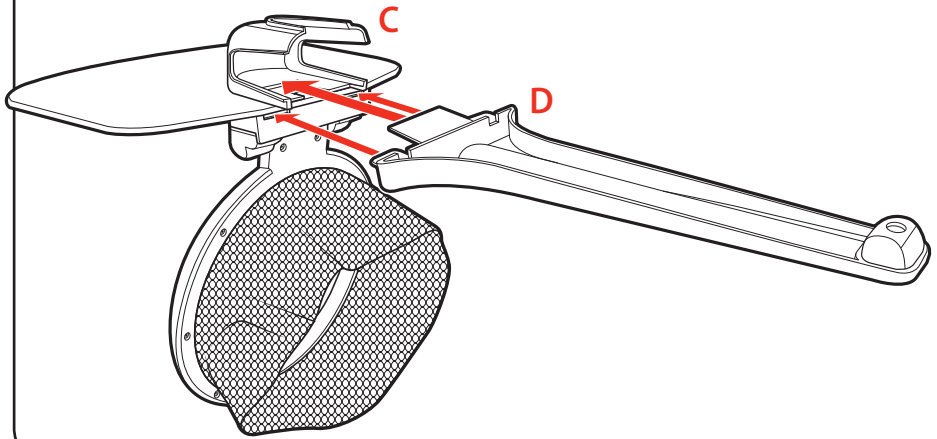

3

Place on doorknob/handle.

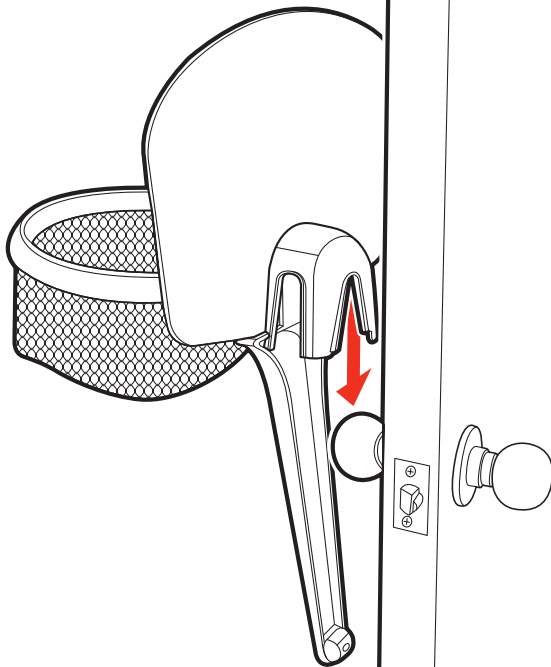



Not suitable for children under 3 years
because of small parts/choking hazard.



Product and colors may vary.
© 2007 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks.
Patent Pending.
05332 PN 6735760000



Questions? Call 1-800-PLAYSKL