

PLAYSKOOL®

AGES 2+
34887


Bounce 'N Go Inch-Along™

Thank you for choosing this
PLAYSKOOL toy!

Adult Assembly Required.

**When you take
this product out
of the box, you
need to attach
wheels. Hammer
(not included)
needed for
assembly.**

**Maximum Weight -
50 pounds (22 kg)**

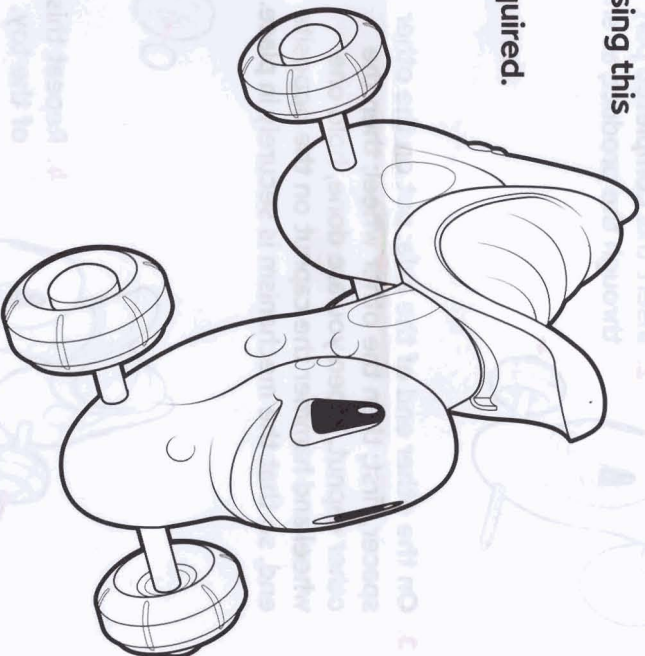

Kid Motion™

⚠ WARNING:



TO AVOID SERIOUS INJURY:
continuous adult supervision
required; never use near motor
vehicles, near streets, swimming
pools, hills, steps, or sloped
driveways. Always wear shoes.
Allow only one rider.

Once you assemble this product, you cannot take it apart and re-assemble it, so please read these instructions carefully.

You will need a rubber mallet (preferred) or a cushioned hammer (neither included).



- 1. Line up the wheel mechanism as shown.**

That is, put the spacer onto the axle; then put on the wheel; then insert the end of the axle into the capnut so that it is secure.

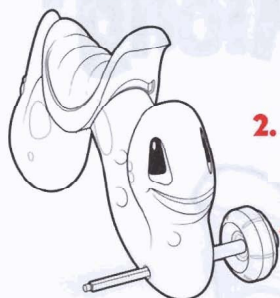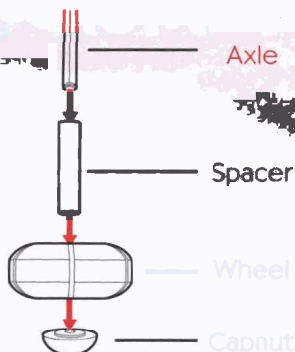

- 2. Insert this completed part through the product, as shown.**

- 3. On the other end of the axle: put on the other spacer, first; then the other wheel; then the other capnut. When you are done, hold one wheel and hammer the capnut on the opposite end, so that the mechanism is securely in place.**

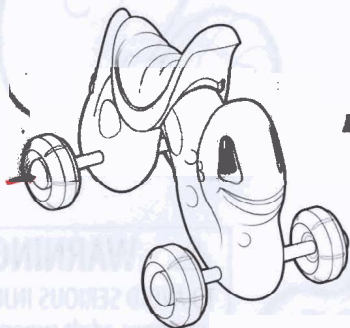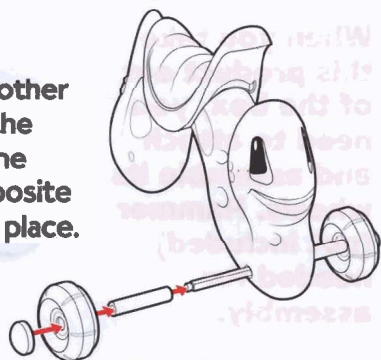

- 4. Repeat this process for the back of the toy.**

You are now ready to play! Use the front of the saddle as a HANDLE GRIP for balancing while you enjoy either bouncing in place or scooting along the floor.