


**AGES 2+**  
**08736**

**PLAYSKOOL®**

# **Song Magic™ Tambourine**

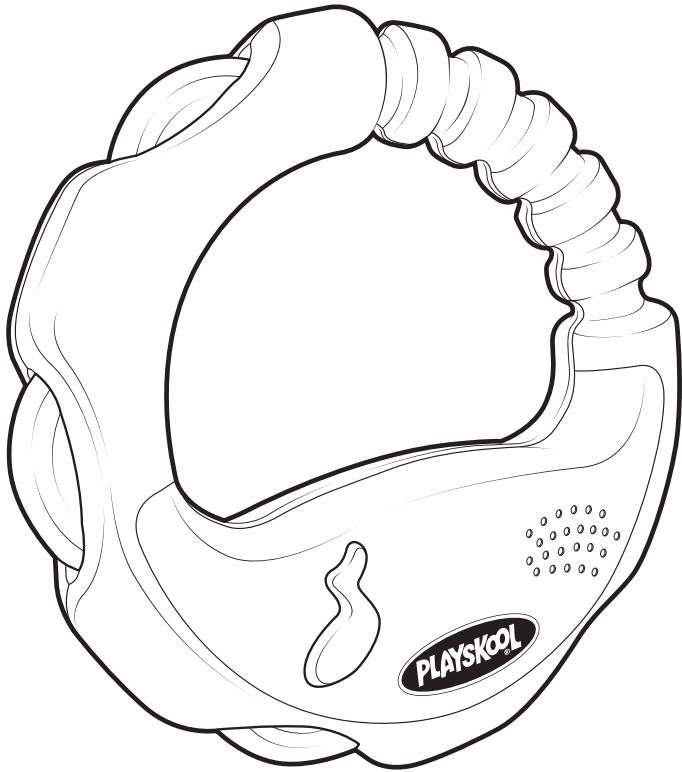


**Thank you for purchasing  
this PLAYSKOOL® toy!**

 **x2** 1.5V AA or R6 size  
**BATTERIES INCLUDED**

Replace with 2 x 1.5V "AA" or R6 size batteries.  
Alkaline batteries recommended. Phillips/cross  
head screwdriver (not included) needed to  
replace batteries.

## TO PLAY WITH SONG MAGIC™ TAMBOURINE

1. Press the musical note button to start the music, then shake or tap the tambourine to keep the music playing.
2. To change songs, press the musical note button. You can change songs at any time.

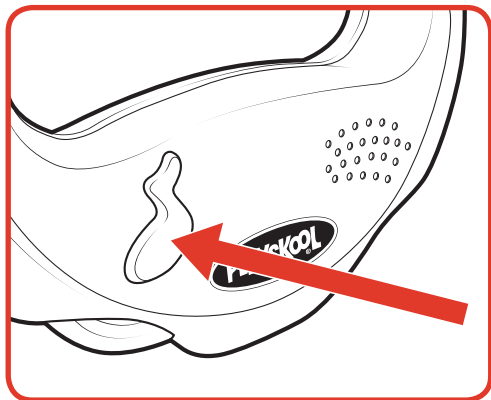


## AUTOMATIC SHUT-OFF FEATURE

The toy automatically shuts off after approximately 30 seconds of nonuse.

## TO REPLACE BATTERIES

1. With Phillips screwdriver, loosen screw in battery compartment door. Remove door (screw remains attached to door).
2. Remove battery door and discard old batteries. Insert 2 fresh 1.5V "AA" or R6 size batteries. Alkaline batteries recommended. Replace door and tighten screw.

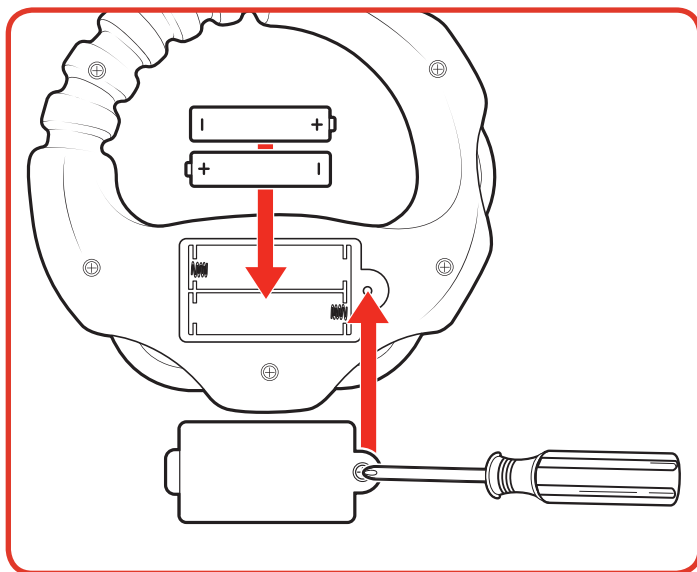

## **CAUTION: TO AVOID BATTERY LEAKAGE**

1. **Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;**
2. **Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;**
3. **Always remove weak or dead batteries from the product.**

## **IMPORTANT: BATTERY INFORMATION**

Please retain this information for future reference.  
Batteries should be replaced by an adult.

## **CAUTION:**

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and – polarity markings.
2. Do not mix old and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

## **FCC STATEMENT**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.



Product and colors may vary.  
© 2007 Hasbro. All Rights Reserved.  
TM & ® denote U.S. trademarks.  
08736 P/N 6713870000

